

## Accessories

| ITEM  | ACCESSORY   | DESCRIPTION   |
|---|---|---|
|    | <b>157D</b><br>Torx® security bit   | <ul style="list-style-type: none"> <li>Tamper resistant Torx® R20 insert bit.</li> </ul>  |
|    | <b>310-2-3</b><br>Astragal strike latch guard   | <ul style="list-style-type: none"> <li>Designed to prevent tampering with the latchbolt, and the latchbolt keeper. Prevents one door from being opened before the other.</li> </ul>   |
|    | <b>2001-1</b><br>Wire-in bridge rectifier   | <ul style="list-style-type: none"> <li>Converts AC to unfiltered DC. Rated 35 V, 2 Amp.</li> <li>Not recommended for 1006 Electric Strike.</li> </ul>   |
|    | <b>2001M</b><br>Plug-in bridge rectifier  | <ul style="list-style-type: none"> <li>Converts AC to unfiltered DC. Rated 35 V, 1 Amp.</li> <li>Includes MOV and self-resettable fuse</li> <li>Not recommended for 1006 Electric Strike.</li> </ul>  |
|   | <b>2004M</b><br>ElectroLynx® adapter  | <ul style="list-style-type: none"> <li>Adapter between existing electric strikes and ElectroLynx® connectors.</li> </ul>  |
|  | <b>2005M3</b><br>SMART Pac® III<br><i>Addition of Smart Pac to any electric strike extends the 5 year no-fault warranty to a 10 year no-fault warranty.</i> | <ul style="list-style-type: none"> <li>In-line power controller able to receive input voltages from 12- 32V AC or DC. Built-in bridge rectifier. Reduces initial voltage by 25% to extend the life of the electric strike.</li> <li>Includes built-in resettable fuse, MOV, voltage regulation and input voltage level indicating and unit status.</li> <li>For use with 1006, input voltage must be DC.</li> </ul> |
|  | <b>2006M</b><br>Plug-in buzzer  | <ul style="list-style-type: none"> <li>Audible operation indicator at 24 VDC, 75db at 11-3/4".</li> </ul>   |
|  | <b>2007M</b><br>Plug-in pigtail connectors  | <ul style="list-style-type: none"> <li>With 4" wire leads.</li> </ul>   |