

<section-header>

HANDLING

Care must be taken that the lock face and armature face are kept free of dirt, rust, paint, or any other obstruction which may interfere with the lock and armature making good contact. These faces may be cleaned with a non-abrasive pad and wiped with an oil dampened cloth.

MECHANICAL INSTALLATION

Familiarize yourself with the door and frame conditions. The lock must mount rigidly to the face of the door frame header. The door mounted armature is supplied with an adjustable mounting bracket and hardware that allows it to pivot slightly to compensate for reasonable misalignment.

NOTE: This lock does not change hands to match the hand of the door. Do not remove the coil assembly from the lock housing.

NOTE: If this lock is supplied with the DSM feature be certain to mount the armature with the DSM block extension aligned with the wiring access cover of the lock.

ELECTRICAL INSTALLATION

After mechanical installation is complete the lock needs to be wired to a 12 or 24 VDC/VAC power source. Once low voltage power is supplied the unit is fully operational. All other wiring is for selected options. Refer to the separate wiring instructions included for further information.



assembly at the planned mounting

frame.

location.

frame header.

SERIES 2011xTJ20 / 3000LCxTJ20 ELECTROMAGNETIC LOCK INSTALLATION INSTRUCTIONS

MOUNTING CONSIDERATIONS ARMATURE 1. Individual door and frame conditions may vary. Dimensions shown at right 2-11/16 LOCK MOUNTING -BRACKET are for a typical hollow metal door and LOCKASSEMBLY 2. The lock assembly should be mounted closest to the strike jamb of the frame for maximum performance. Verify that 1/8" GAF there is proper clearance for the lock 1/8" GAP REF 1-1/4' 3. Electrical wiring for the lock must be routed through the back of the unit, ARMATURE BRACKET through a hole drilled in the face of the MOUNTING SCREW DOOR

> 6 6

Ø

INSTALL THE LOCK MOUNTING BRACKET

- 1. Standing at the "pull" side of the door center the lock mounting bracket on the face of the frame header as shown below. Locate and mark the centers of the two slotted mounting holes and the wiring hole.
- 2. Drill the marked holes in the face of the frame header: a. Two (2) 1/8" dia. slotted mounting holes, 1" deep. b. One (1) 5/8" dia. wiring hole.
- 3. Attach the lock mounting bracket to the frame header using two (2) #10 x 1" pan head Tek screws. Temporarily tighten the screws.





SERIES 2011xTJ20 / 3000LCxTJ20 ELECTROMAGNETIC LOCK

INSTALLATION INSTRUCTIONS

ATTACH THE LOCK ASSEMBLY TO THE LOCK MOUNTING BRACKET Using the two lock mounting screws and 6 brass spacers attach the lock assembly to LOCK MOUNTING the lock mounting bracket as shown. The 6 BRACKET lock assembly will need to be removed later to add the remaining bracket mounting screws, after all hardware adjustments have been made. LOCKASSEMBLY Firmly tighten the mounting screws with a 3/16" hex wrench. **BRASS SPACER** æ LOCK MOUNTING SCREW

ATTACH THE ARMATURE TO THE ARMATURE MOUNTING BRACKET

Assemble the armature mounting bracket referencing the exploded parts view on page 7.

Locate the armature mounting hardware from the hardware kit and attach the armature to the armature mounting bracket as shown. Firmly tighten the mounting screw with a 3/16" hex wrench.

Failure to properly secure the armature to the bracket could result in serious injury or possible security breach.







3. Mount the armature and mounting bracket assembly to the door using the appropriate hardware for you door type. Frimly tighten the mounting screws with a 3/16" hex wrench.



ARMATURE AND LOCK ADJUSTMENT

ARMATURE ADJUSTMENT

- 1. Using a 5/32" hex wrench temporarily loosen the armature bracket assembly screws roughly 1-1/2 turns to allow the upper armature bracket to move in and out freely (Ref. Figure "A").
- Close and latch the door. The mating surfaces of the lock and armature should fully contact each other. If necessary slide the armature in or out to ensure full contact is made with the lock while still allowing the door to properly close and latch.
- 3. When the desired adjustment is acheived slowly open the door, taking care to maintain the position of the armature. Firmly tighten the armature bracket assembly screws with a 5/32" hex wrench, making sure that the locking ribs on the upper and lower bracket halves properly mesh (Ref. Figure "A").

LOCK ADJUSTMENT

1. Verify that the lock face squarely aligns with the armature face. To adjust the lock vertically, remove the lock assembly from the lock mounting bracket, loosen the two adjustment slot screws and reposition the bracket accordingly.



LOCK MOUNTING BRACKET FINAL ASSEMBLY

- 1. Following adjustment (if required) firmly re-tighten the adjustment slot screws on the lock mounting bracket. Using the bracket as a physical template mark the centers of the four fixed mounting screw holes. Drill the holes in the header using a 1/8" drill, 1" deep.
- Complete the installation of the lock mounting bracket using four (4) #10 x 1 pan head Tek screws (Ref. Figure "B"). Firmly tighten all screws with a #2 phillips head screwdriver.





SERIES 2011xTJ20 / 3000LCxTJ20 ELECTROMAGNETIC LOCK

INSTALLATION INSTRUCTIONS

SECURE THE LOCK ASSEMBLY TO THE LOCK MOUNTING BRACKET

- 1. Secure the lock assembly to the mounting bracket using the two lock mounting screws and brass spacers. Firmly tighten the the mounting screws with a 3/16" hex wrench.
- 2. Install the anti-tamper plugs from the hardware kit over the lock mounting crews. Gently tap into place using a rubber mallet.
- 3. The mechanical installation is now complete. Refer to the separate 2000/3000/300LC Wiring Instructions to complete the electrical installation.



EXPLODED PARTS VIEW LEGEND					
ITEM	DESCRIPTION	PART NO.	ITEM	DESCRIPTION	PART NO.
1	Lock Assembly	Consult Factory	10	Armature Bracket Assy. Screw	
2	Lock Mounting Bracket	301073	11	Lock Washer	
3	Armature	300013	12	Anti-Tamper Plug	
4	Upper Armature Bracket	300724	13	Lock Bracket Mounting Screw	
5	Lower Armature Bracket	300725	14	Armature Mounting Screw	
6	Access Cover / Board Assy.	300906	15	Armature Spacer	Hardware Kit P/N 301074
7	Access Cover Screw	300608	16	Rubber Washer	
8	Brass Spacer	300468	17	Flat Steel Washer	
9	Lock Mounting Screw	300603	18	Sex Nut	
Note: Refer to Page 7 for parts locations.			19	Door Spacer	
			20	Armature Bracket Mtg. Screw	

EXPLODED PARTS VIEW LEGEND





FOR PRODUCT SUPPORT AND PARTS ORDERING INFORMATION CONTACT:

DynaLock Corp. 705 Emmett Street Bristol, CT 06010 Bus: (877) 396-2562 Toll-Free (860) 582-4761 Fax: (860) 585-0338

DYNALOCK ON THE INTERNET:

E-mail: info@dynalock.com Website: www.dynalock.com