



Installation Instructions

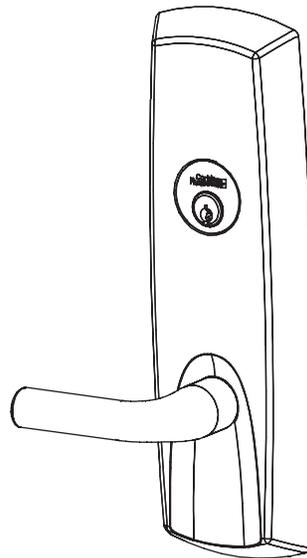

IN120 WiFi/ IN220 PoE

ED5200 (S)N & ED5600N Series
Exit Devices- Includes Rim and Mortise

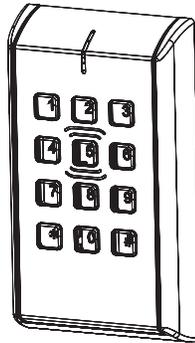

Attention Installer:

Please read these instructions carefully to prevent missing important steps. Improper installations may result in damage to the lock and void the factory warranty. The accuracy of the door preparation is critical for proper functioning and security of this lock. Misalignment can cause premature wear and a lessening of security.

For specific security information, please contact your local ASSA ABLOY Door Security Solutions sales consultant or call 800-810-9473.

Contents

1. Regulatory Compliance3

2. Regulatory and Power Specifications4

3. General Description5

4. Specifications / Features5

5. Parts Breakdown6

6. IN220 (PoE) Wiring and Installation Instructions7

7. Rim Exit Installation Instructions 11

8. Mortise Exit Installation Instructions 19

9. IN120/ IN220 Installation Instructions 25

10. Operational Check..... 30

Installation Instructions

1. Regulatory Compliance

Changes or modifications to this device not expressly approved by ASSA ABLOY could void the user's authority to operate the equipment.

FCC:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Innovation, Science and Economic Development Canada:

Under Innovation, Science and Economic Development Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication. Conformément à la réglementation d'Innovation, Sciences et Développement économique Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

General Regulatory Compliance:

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device.

Ce dispositif contient des émetteurs/récepteurs exemptés de licence conformes aux RSS d'Innovation, Sciences et Développement économique Canada. L'opération est sujette aux deux conditions suivantes: (1) ce dispositif peut ne pas causer l'interférence, et (2) ce dispositif doit accepter n'importe quelle interférence reçue, y compris l'interférence qui peut causer l'opération peu désirée à le dispositif.

This equipment complies with FCC and IC radiation exposure limits set forth for general population (uncontrolled environment). This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme aux limites d'exposition aux radiations de la FCC et IC définies pour la population générale (environnement non contrôlé). Cet appareil ne doit pas être co-localisé ou fonctionner en conjonction avec une autre antenne ou un autre émetteur.



CAUTION: When using hard power, DO NOT install batteries.
AVERTIR: Ne pas installer de batteries si vous utilisez l'alimentation électrique.

CAUTION: Risk of Explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.
AVERTIR: Risque d'explosion si la batterie est remplacée par un type incorrect. Jetez le batteries usagées conformément aux instructions.



This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to: www.P65warnings.ca.gov.
Ce produit peut vous exposer au plomb qui, dans l'état de la Californie, est reconnu pour causer le cancer, des anomalies congénitales ou d'autres problèmes de reproduction.
Pour plus d'informations, visitez: www.P65warnings.ca.gov.

Any retrofit or other field modification to a fire rated opening can potentially impact the fire rating of the opening, and ASSA ABLOY Access Egress Hardware Group makes no representations or warranties concerning what such impact may be in any specific situation. When retrofitting any portion of an existing fire rated opening, or specifying and installing a new fire-rated opening, please consult with a code specialist or local code official (Authority Having Jurisdiction) to ensure compliance with all applicable codes and ratings.



To avoid possible damage from electrostatic discharge (ESD), some basic precautions should be used when handling electronic components:

- Minimize build-up of static by touching and/or maintaining contact with unpainted metal surfaces such as door hinges, latches, and mounting plates especially when mounting electronic components such as readers and controllers onto the door.
- Leave components (reader and controller) protected in their respective anti-static bags until ready for installation
- Do not touch pins, leads or solder connections on the circuit boards

2. Regulatory and Power Specifications

Electronic Authentication Specifications (Mobile Credentials)

For Mobile Credential-Enabled versions of this electronic lock (Indicated by “BIPS” in the product order string):

- Mobile Credentials are transmitted to the lock via Bluetooth Smart or NFC ISO/IEC14443 and must use a mobile device
- Credential and mobile device versions are specified by the credential provider.
- User must acquire the latest HID “Mobile Access” application available on Google Play or from the App Store.

This product is not intended for outside wiring as covered by Article 800 in the National Electrical Code, NFPA 70. Compliance with IEEE 802.3 (at or af) specifications was not verified as part of UL 294/B.

The system shall not be installed in the fail-secure mode unless permitted by the local authority having jurisdiction and shall not interfere with the operation of Listed panic hardware.

- UL Listed - UL 294 Indoor Use
- UL 294 Access Control Ratings:
- CUL Listed - CAN/ULC S319, ULC-60839-11

Destructive Attack	Level 1
Line Security	Level 1
Endurance	Level 4
Standby Power	Level 1

Power Supply Specifications

P1 (PoE version):

- Power over Ethernet:
Use UL 294 Listed, PoE Injector or Class 2 power limited power supply (55VDC, 90mA).

P2 (WiFi version):

- Battery Power:
Alkaline AA Batteries (6): 9V, 300mA
(To comply with “Fire Listed” doors, batteries must be replaced with alkaline batteries only)
- Optional Hard Power (UL 294 Listed Power Supply Required):
9-24VDC, 300mA



Wiring methods shall be in accordance with the National Electrical Code (ANSI/NFPA70), CSA 22.1, Canadian Electrical Code (CEC), Part I, Safety Standard for Electrical Installations, local codes and the authorities having jurisdiction.

Installation Instructions

3. General Description

The Corbin Russwin IN120 (WiFi) & IN220 (PoE) series locks offer HID® multiCLASS SE® technology in a streamlined design, setting a new standard for aesthetics and performance, providing heightened identity security and multiple credentials, including mobile access.

The IN120 cylindrical lock uses IEEE 802.11 WiFi communication and a flexible feature set for easier, more cost-effective installations, allowing facilities to leverage their IT infrastructure to expand access control coverage to more doors.

With the energy efficiency and streamlined architecture of Power-over-Ethernet (PoE) access control, the IN220 cylindrical lock allows for enhanced security and easier, more cost-effective installations.

4. Specifications / Features

Hardware Specifications


- Latch – Stainless steel, 3/4" (19mm) throw deadlocking fire latch
- Deadlocking latch prevents manipulation when door closed
- Door Thickness – 1-3/4" (44mm) to 2" (50mm) Standard Optional 2" (50mm) to 2-1/4" (57mm) optional
- ADA Compliant
- ANSI/BHMA A156.25 Listed Grade 1 Compliant
- May be used for indoor and outdoor* applications

Electrical Specifications

- HID® multiCLASS SE® technology offers support for the following credentials:
 - 2.4 GHz credential compatibility:
 - Secure Identity Object™ (SIO) on Mobile IDs (Bluetooth Smart)
 - 13.56 MHz credential compatibility:
 - iCLASS®
 - iCLASS SE® (SIO-enabled)
 - iCLASS Seos®
 - SIO on MIFARE® Classic
 - SIO on MIFARE® DESfire® EV1
 - MIFARE® Classic
 - DESfire® EV1
 - NFC-enabled mobile phones
 - 125 kHz credential compatibility:
 - HID Prox®
- Input Power: PoE Class 1 Device, as defined by IEEE 802.3af, requires less than 3.84 watts over structured cabling
- Multiple time zone and holiday access scheduling
- First-in unlock or automatic unlock configuration, based on specified time schedule
- 2,400 users per lock; 10,000 event audit trail
- Privacy button
- Power Requirements: 55VDC, 90mA

*For specific security information, please contact your local ASSA ABLOY Door Security Solutions sales consultant or call 800-810-WIRE.

5. Parts Breakdown

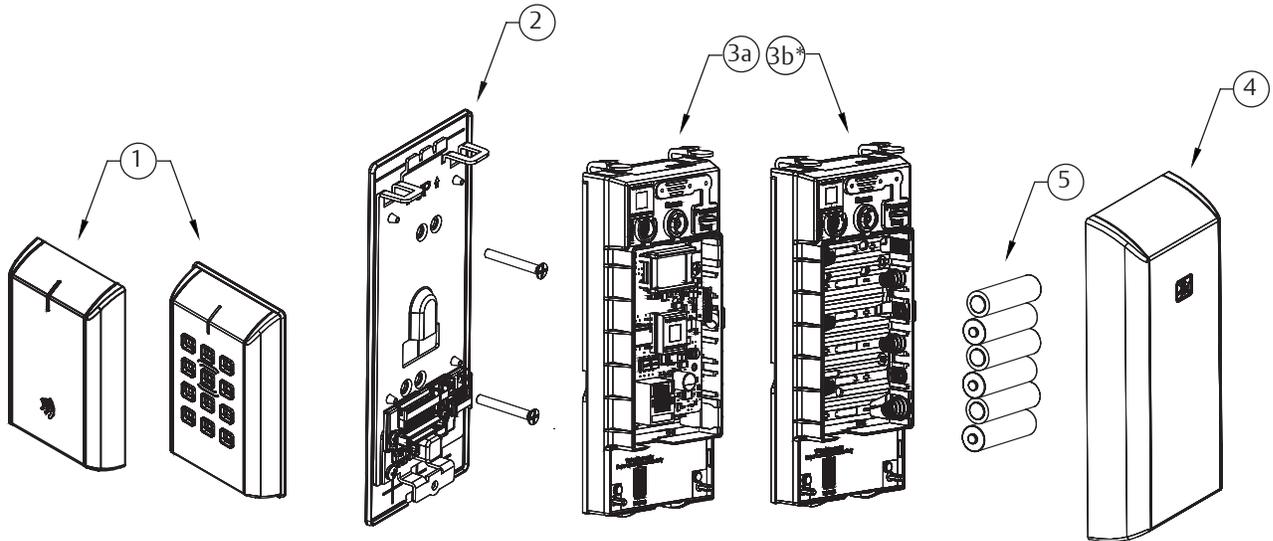

ITEM No.	DESCRIPTION	QTY
1*	Reader assembly - Black plastic	1
2	Inside Mounting Kit (Mounting Plate & Hardware)	1
3a	PoE Controller Assembly	1
3b	Wifi Controller Assembly* (Batteries Included)	1
4	Inside Escutcheon Assembly with Privacy Button	1
5	AA Alkaline Batteries	1


*Specifying B indicates BLE (Bluetooth) option when ordering

6. IN220 (PoE) Wiring and Installation Instructions


Note: Before installing IN220 (PoE) cylindrical device, please read the following instructions.

Overview

Corbin Russwin IN220 PoE Typical Application

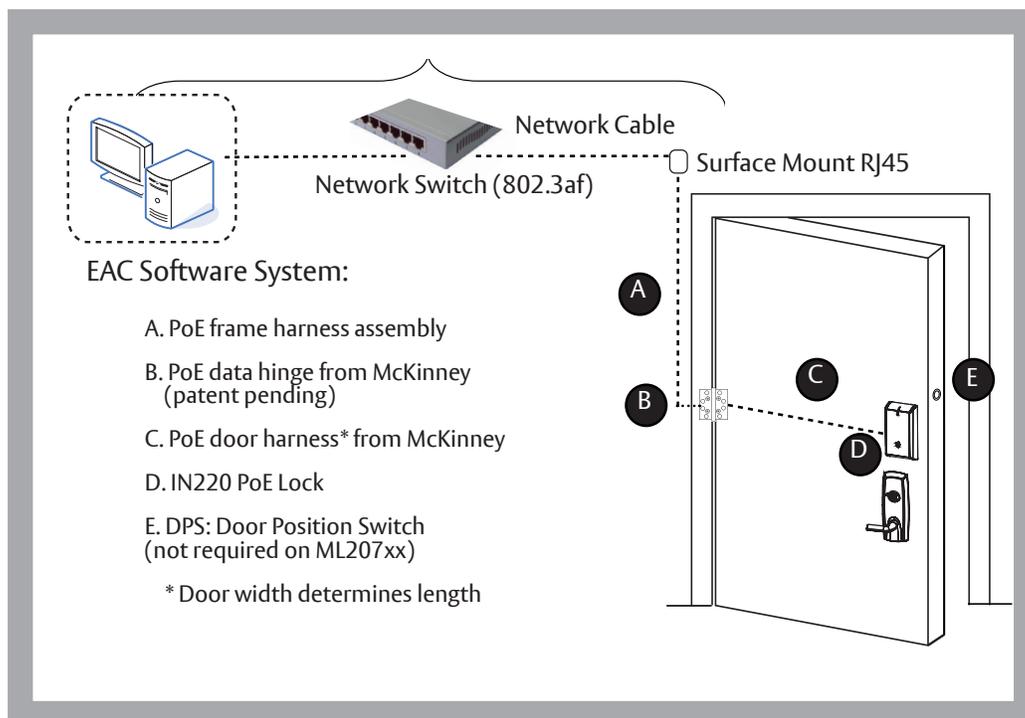

6. IN220 (PoE) Wiring and Installation Instructions (continued)

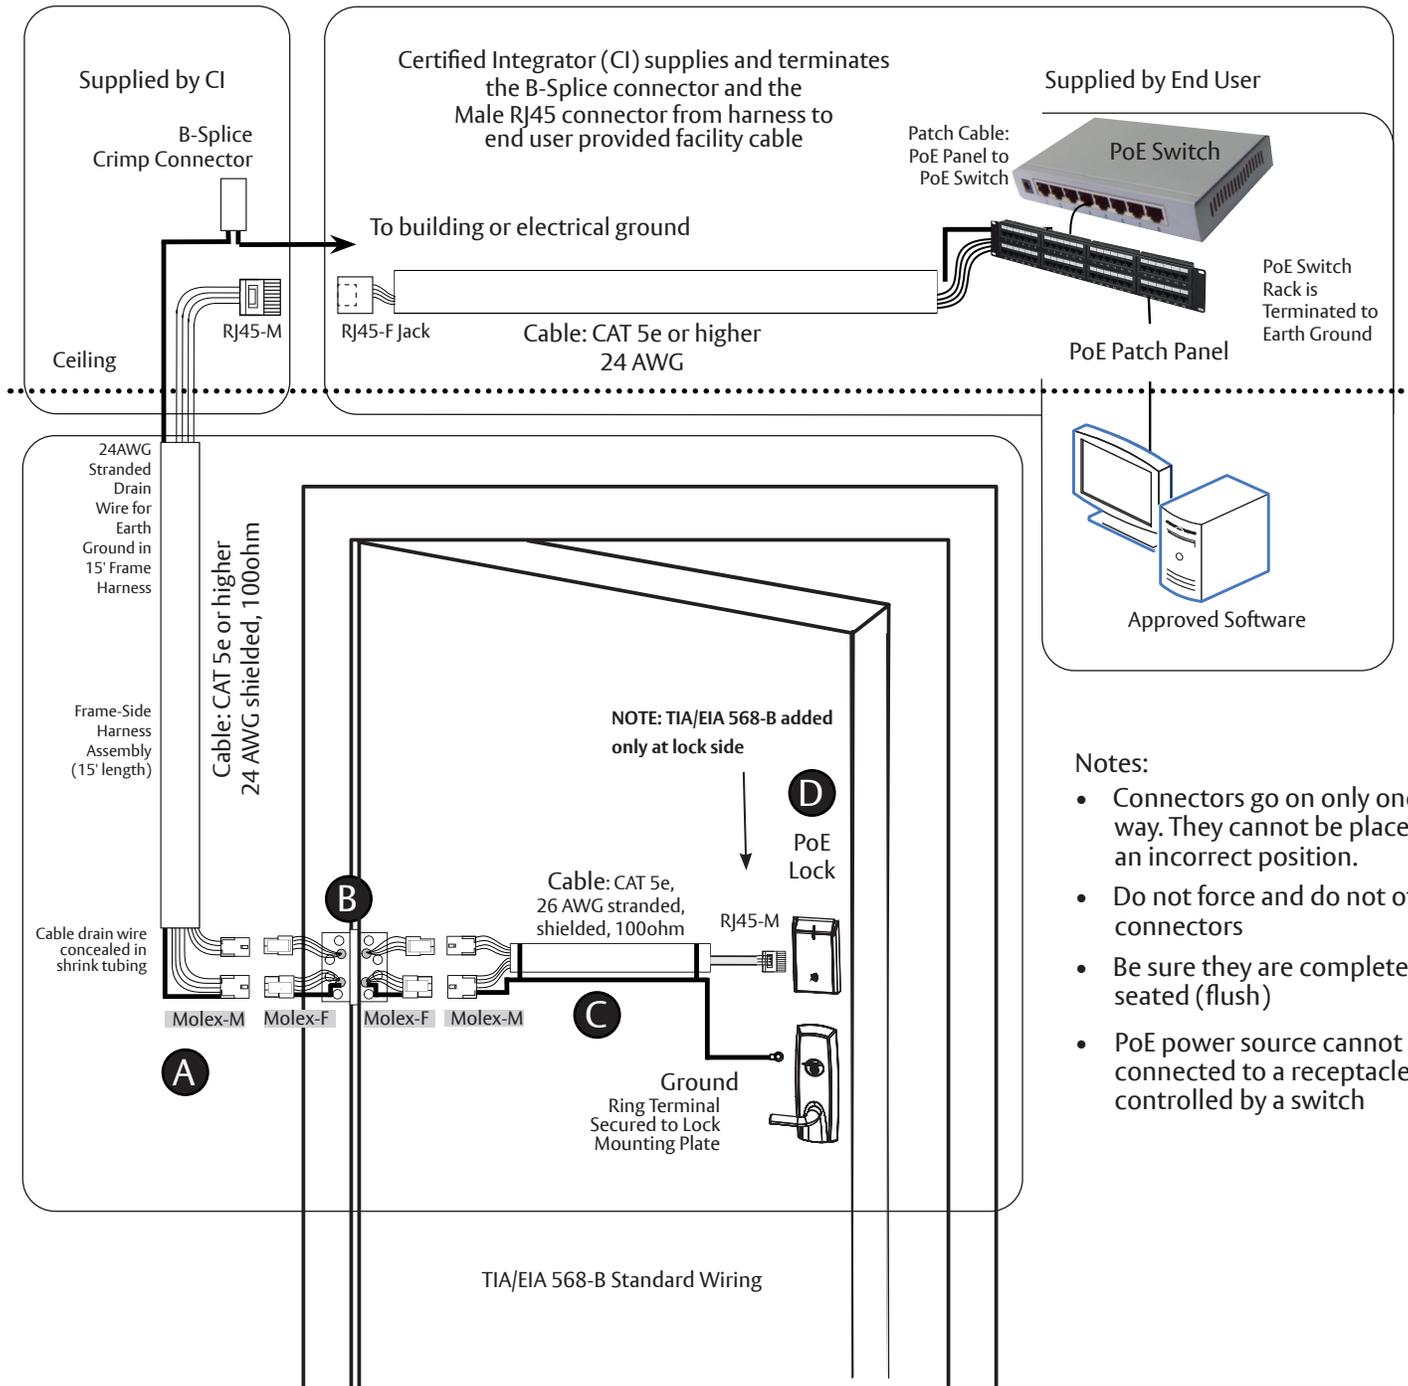

Notes:

- Connectors go on only one way. They cannot be placed in an incorrect position.
- Do not force and do not offset connectors
- Be sure they are completely seated (flush)
- PoE power source cannot be connected to a receptacle controlled by a switch

IN120 WiFi/IN220 PoE

ED5200 (S)N & ED5600N Series Exit Devices, Rim and Mortise

Installation Instructions




ASSA ABLOY

6. IN220 (PoE) Wiring and Installation Instructions (continued)

Frame Harness Installation



Components and wire harness supplied by McKinney. Suggested installation:

Cut end / ceiling-side PoE harness:

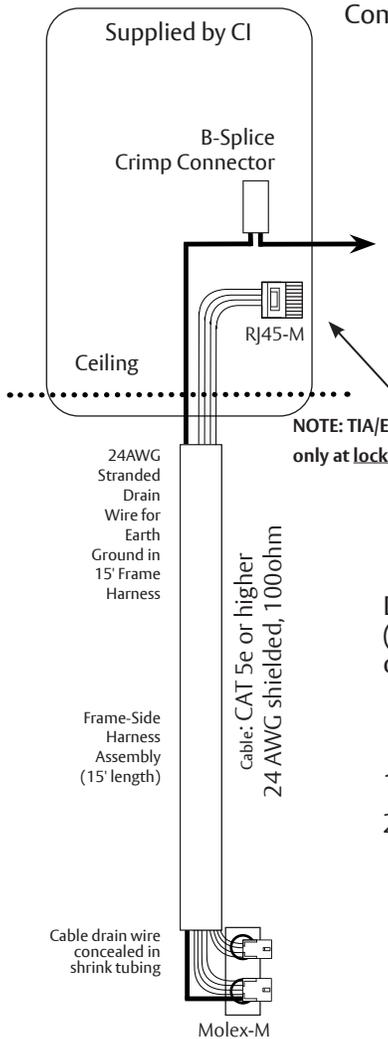

NOTE: TIA/EIA 568-B added only at lock side

TIA/EIA 568-B Standard Wiring

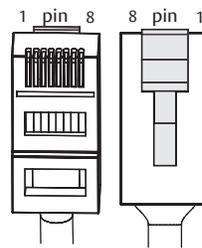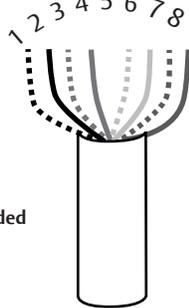

PIN	Wire	Pair Number
1	White/Orange	2
2	Orange	2
3	White/Green	3
4	Blue	1
5	White/Blue	1
6	Green	3
7	White/Brown	4
8	Brown	4


Do not confuse pair numbers with pin numbers. A pair number is used for reference only (eg, 10BaseT Ethernet uses pairs 2 & 3). The pin numbers indicate actual physical locations on the plug and jack.

Hinge side of PoE harness:

1. Feed cut end of harness into hole on hinge-side through single access hole.
2. Push one connector back through the hole and feed into the other access hole.
Each of the hinge-side harness connectors should end up threaded through a different access hole and matched to the same size pin connector from the door harness:

- 4-pin male molex connector
- 6-pin male molex connector with ground wire

PoE Data Hinge

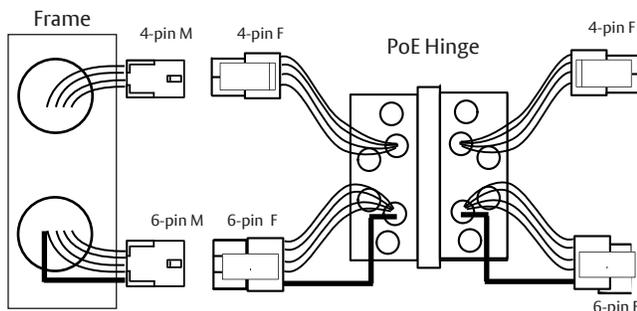

Hinge-side harness connectors:

- 4-pin female molex connector
- 6-pin female molex connector with ground wire

Lock-side harness connectors:

- 4-pin female molex connector
- 6-pin female molex connector with ground wire

6. IN220 (PoE) Wiring and Installation Instructions (continued)

Hinge Installation

Order of installation may vary. Refer to appropriate sections for instructions.

Hinge-side harness connectors:


- 4-pin male Molex connector
- 6-pin male Molex connector with ground wire

Lock-side harness connectors:

- Ring terminal
- Male RJ45 connector (crimped after cable is fed through door)

Notes:

- Connectors go on only one way. They cannot be plugged to incorrect position.
- Do not force and do not offset connectors.
- Be sure they are completely seated (flush).

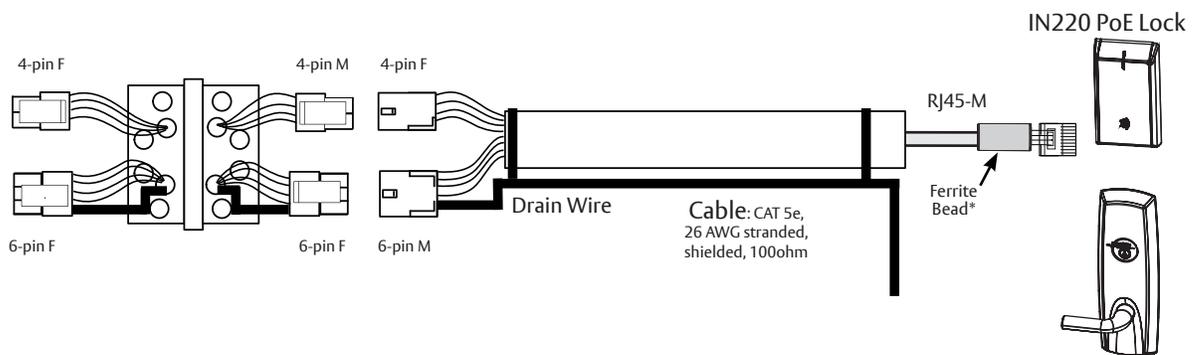


PoE Lock

Order of installation may vary. Refer to appropriate sections for instructions:

1. Prop door open.
2. Using the ring terminal, carefully route the assembly through the door channel to the lock.

*Do not terminate PoE harness (with RJ45 M) until cable has been routed through door and inside mounting plate assembly. See Section 8, Step 10- Install the Connectors.

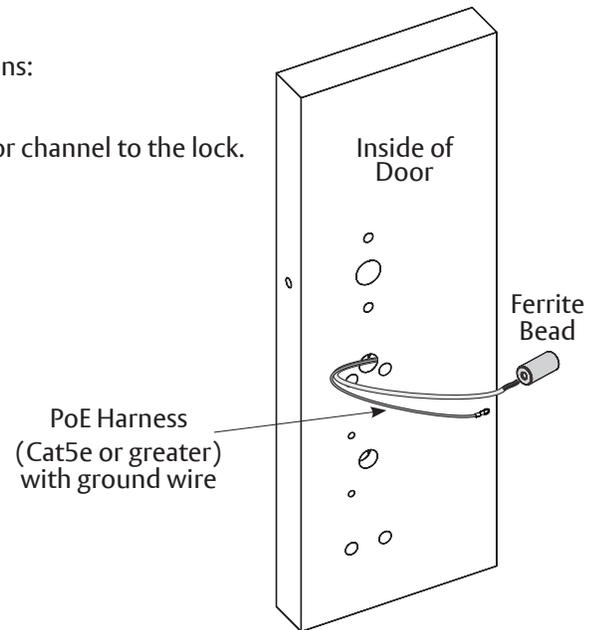

7. Rim Exit Installation Instructions

Verify Hand and Bevel of Door

1. Door should be fitted and hung.
2. Verify box label for size of exit device, function, and hand.

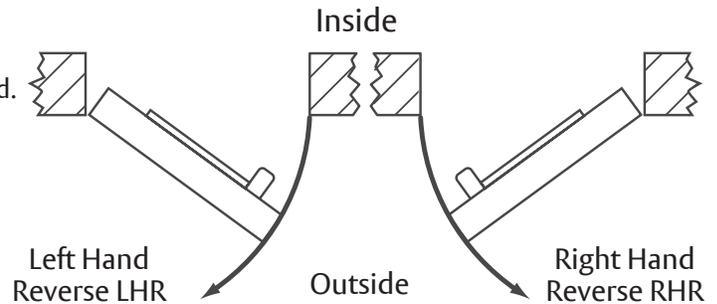


Figure 1

Prep Door According to Door Marker (FM429)

- For door manufacturer templates visit www.corbinrusswin.com and reference template #'s T31235 & T31236.

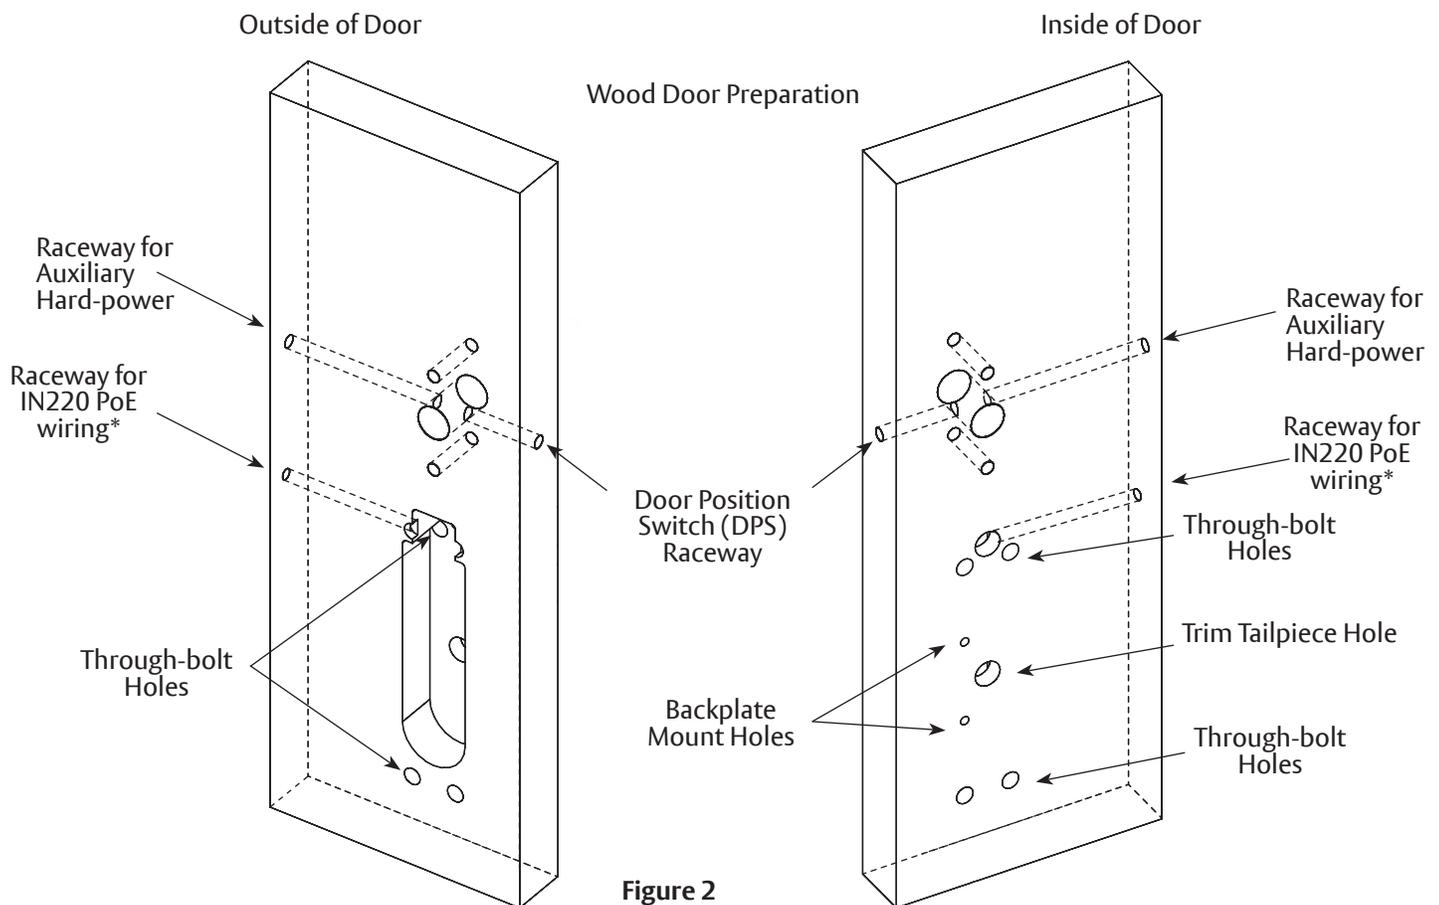


Figure 2

7. Rim Exit Installation Instructions (continued)

Install Door Position Switch (DPS)

1. Insert DPS into raceway on latch edge of the door.
2. Push wires through raceway toward lock prep.
3. Push DPS firmly into place by hand.

Note: Do not tap Switch with any tool.

4. Install magnet into door frame. Push firmly into place by hand.
See instruction A7983.



If DPS is not installed or is installed improperly, door status monitoring features will not function.

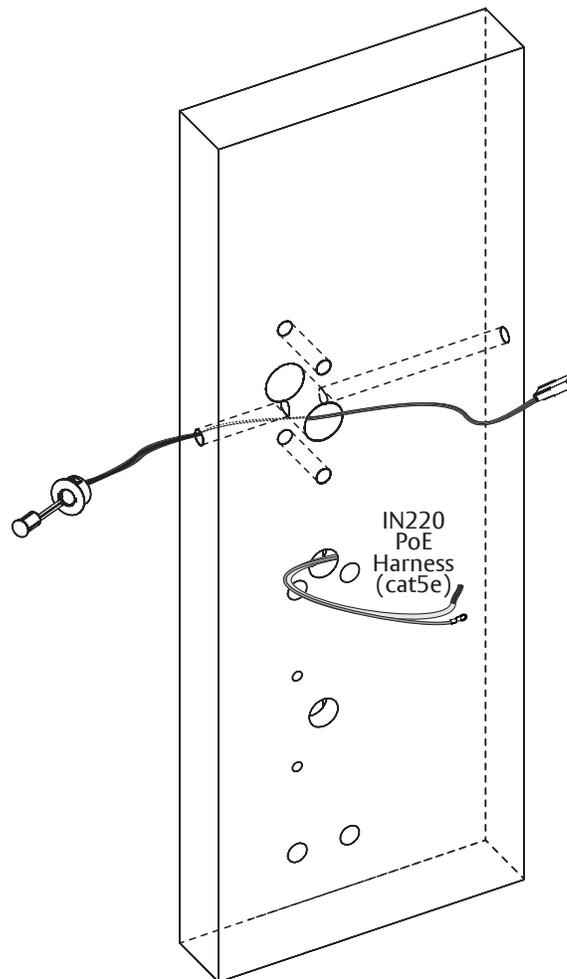


Figure 3

Figure 13

7. Rim Exit Installation Instructions (continued)

Trim Assembly Instructions

1. Check cylinder components.
 - Cylinders longer than 1-1/8" (29mm) require collars.

Refer to Cylinder Collar Chart.

Note: For Mortise, skip to "Install Exit Device" on page 15.

Corbin Russwin Cylinder Collar Chart	
Cylinder Length in (mm)	Collar
1-1/8" (29)	None
1-1/4" (32)	422F88M FIN
1-1/2" (38)	686F98M FIN

** Specify finish

2. Spindle comes with breakaway features to accommodate door thickness from 1 3/4" to 2 1/4".

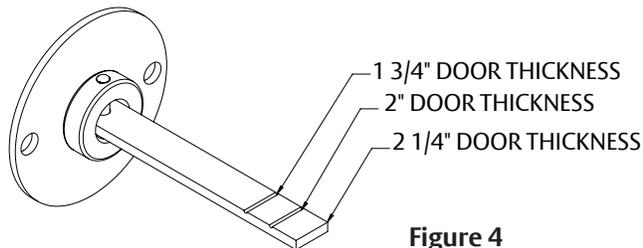


Figure 4

3. Key Override installation

- a. Insert cylinder housing prongs into matching notch.
- b. Insert Key Override Ring into cylinder with smaller leg between cam as shown in Figure 5.

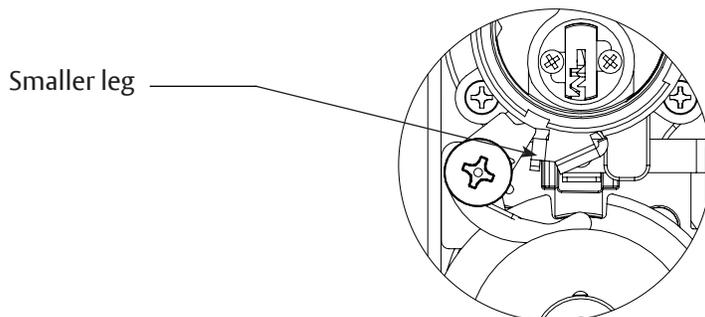


Figure 5

- c. Tighten cylinder nut into escutcheon, making sure stepped side of nut goes inside key override ring as shown in Figure 6.

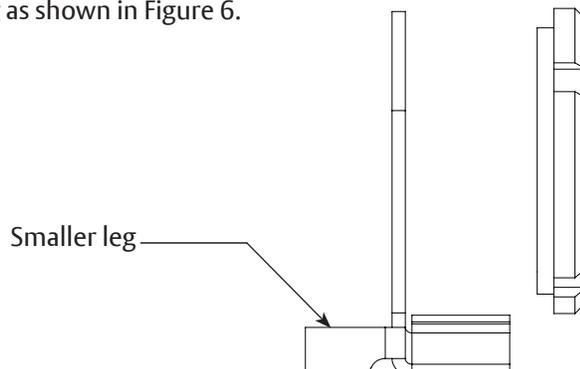


Figure 6

7. Rim Exit Installation Instructions (continued)


Trim Assembly Instructions (continued)

4. Escutcheon Assembly (Figure 7):

Lever is handed (LHR shown).

Note: Lever return spring handing can be identified by color of spring:

- LHR: Part Number 651F618 (Red)
- RHR: Part Number 651F628 (Blue)

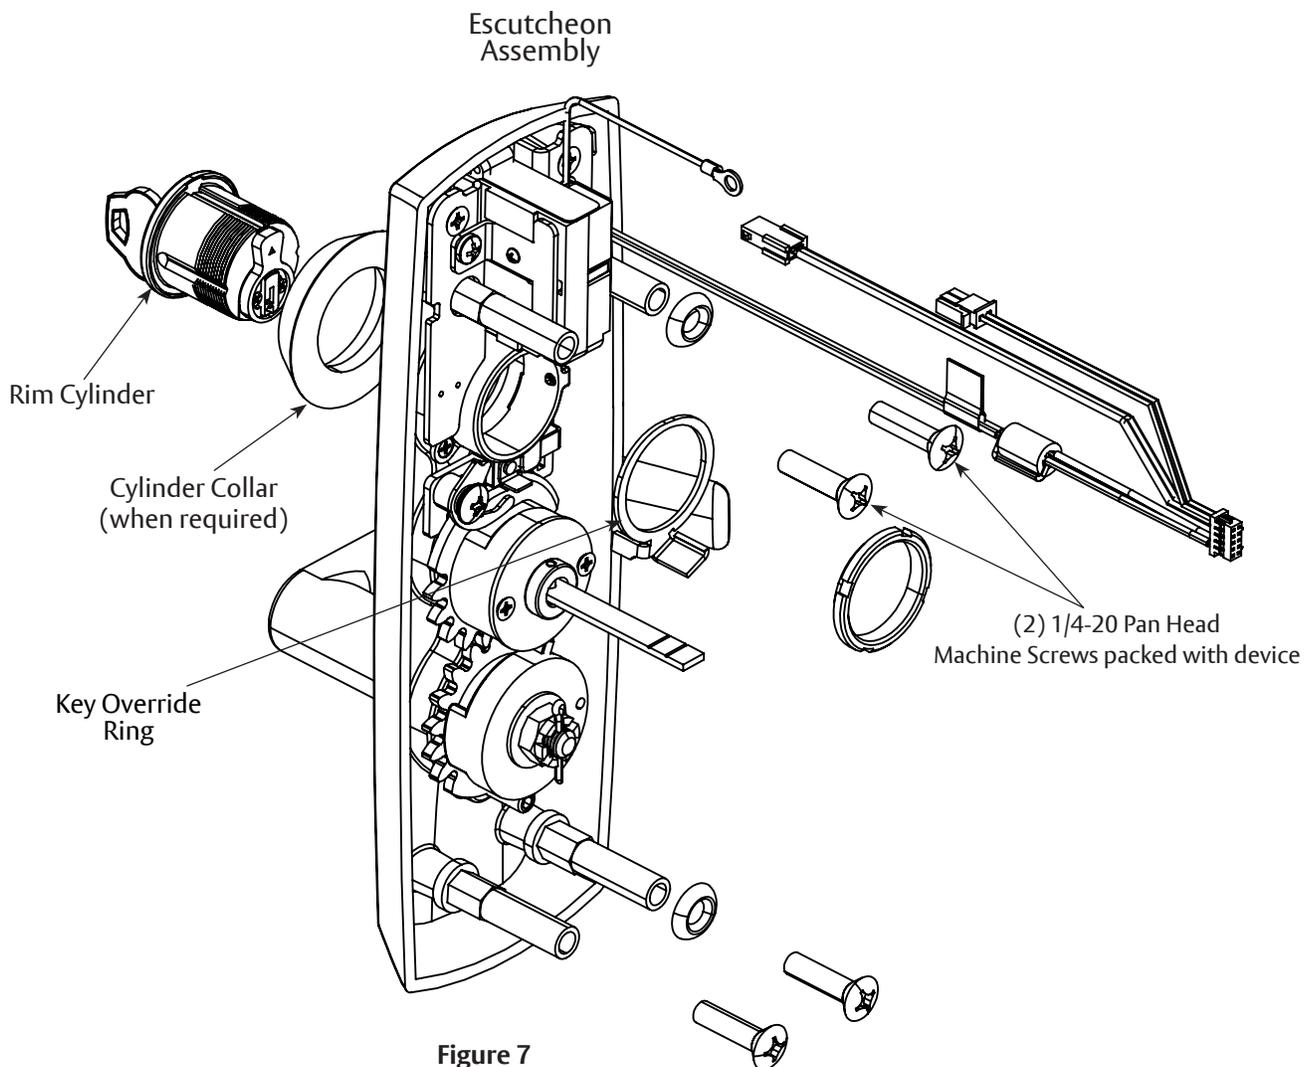

7. Rim Exit Installation Instructions (continued)

Install Exit Device

1. Feed trim harness through upper hole in cutout (Figure 8a).
2. Ensure the tailpiece extends 5/16" outside the door when the trim is installed (Figure 8b).



When installing trim, pull wires completely through door to avoid contacting motor assembly, as this may cause loss of function.

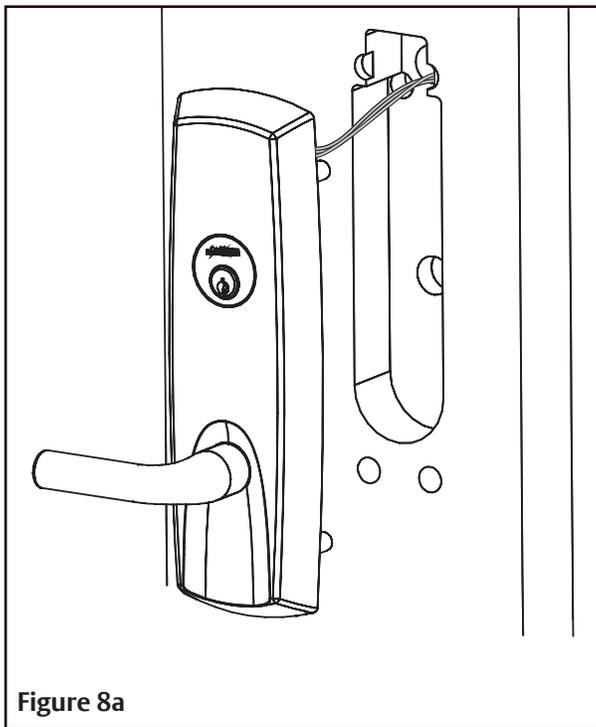


Figure 8a

Outside
Face
of Door

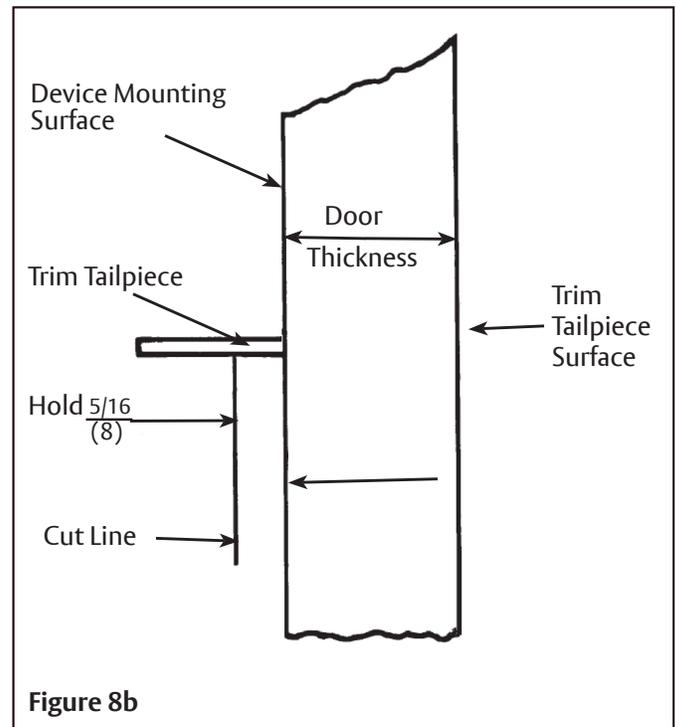





Figure 8b

NOTE: Measure from device mounting surface (door face or shim surface).

7. Rim Exit Installation Instructions (continued)

Install Exit Device (continued)

8. Seat device against door being careful to align vertical trim tailpiece to engage with cross hole of device cam (Figure 8d).
9. Fasten device to trim assembly using two (2) 1/4-20 pan head screws (Figure 8e).
10. Follow instructions packed with device to secure device to door.
11. Fasten device to trim assembly using two (2) 1/4-20 pan head screws (Figure 8e).

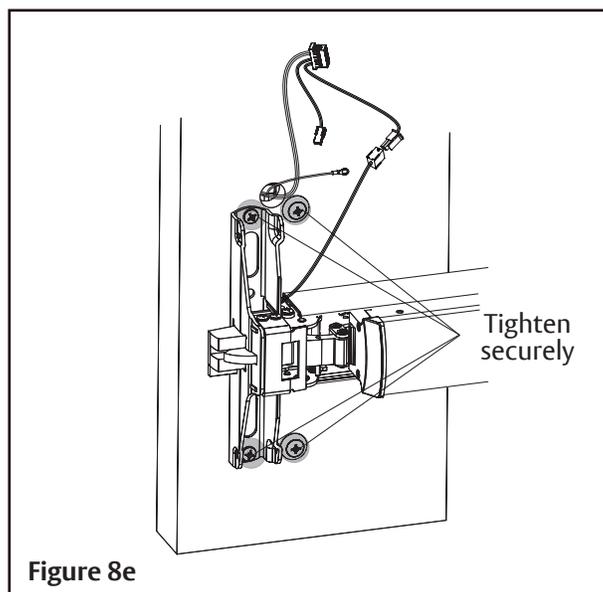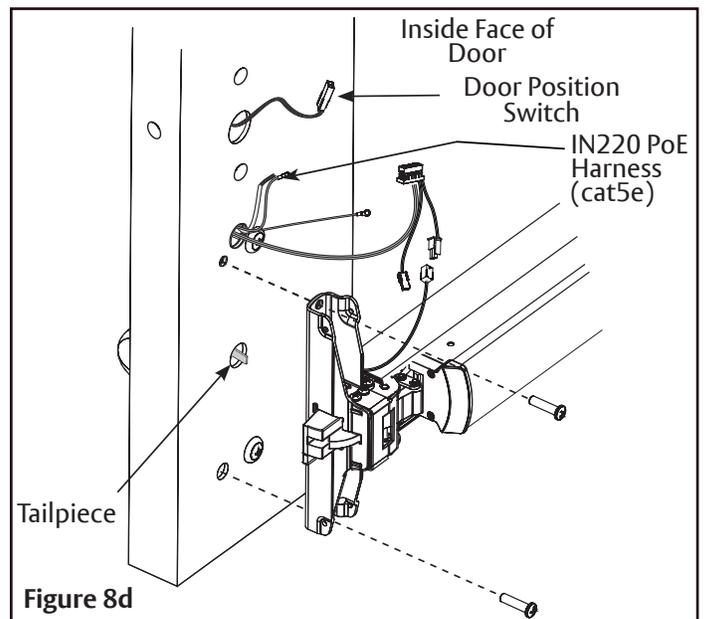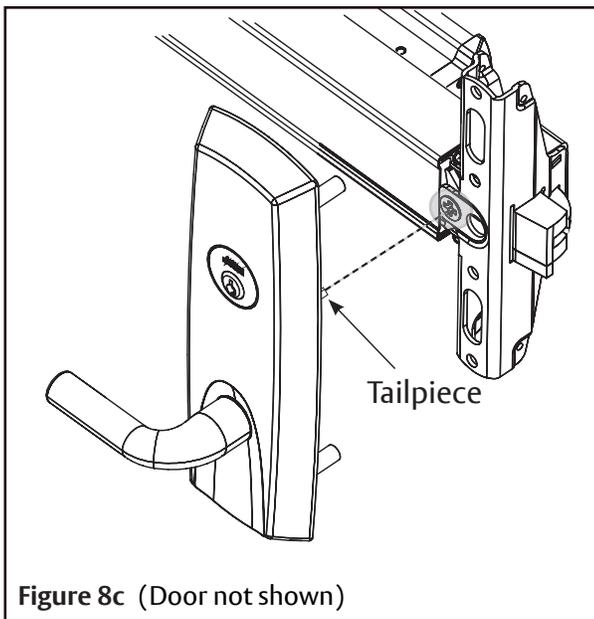

7. Rim Exit Installation Instructions (continued)

Harness Connections

1. Connect motor harness adapter to chassis harness connector (Figure 9).
2. Connect rail assembly harness adapter to chassis harness connector.


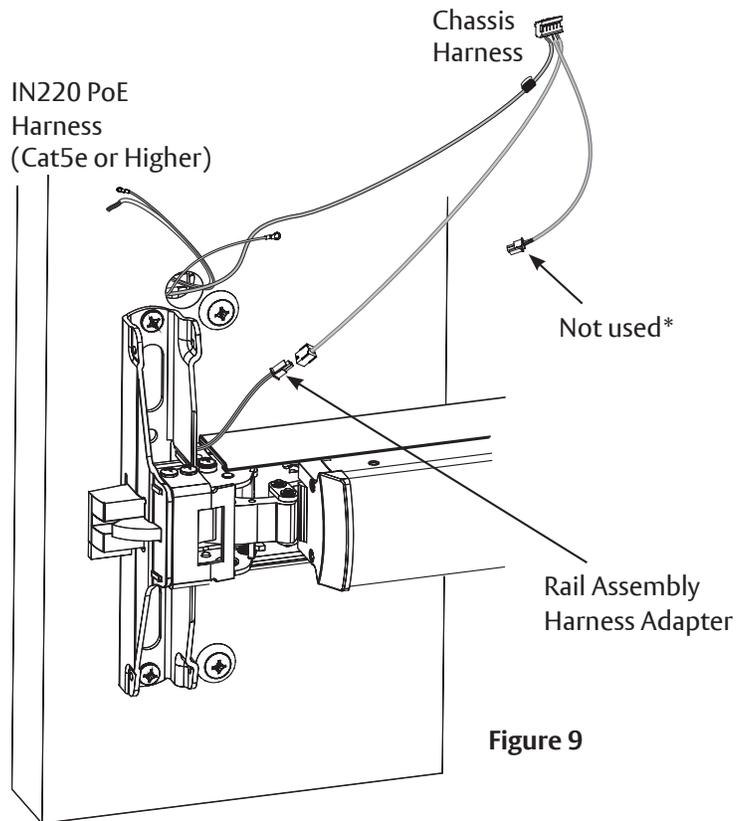


Figure 9

7. Rim Exit Installation Instructions (continued)

Install Head Cover

1. Lay device wire harnesses across 1" hole (Figure 10a).
2. Tuck wires into when installing cover so that wires are not pinched between head cover and door.
3. Attach head cover using (2) #8-32 flat head screws (Figure 10b).

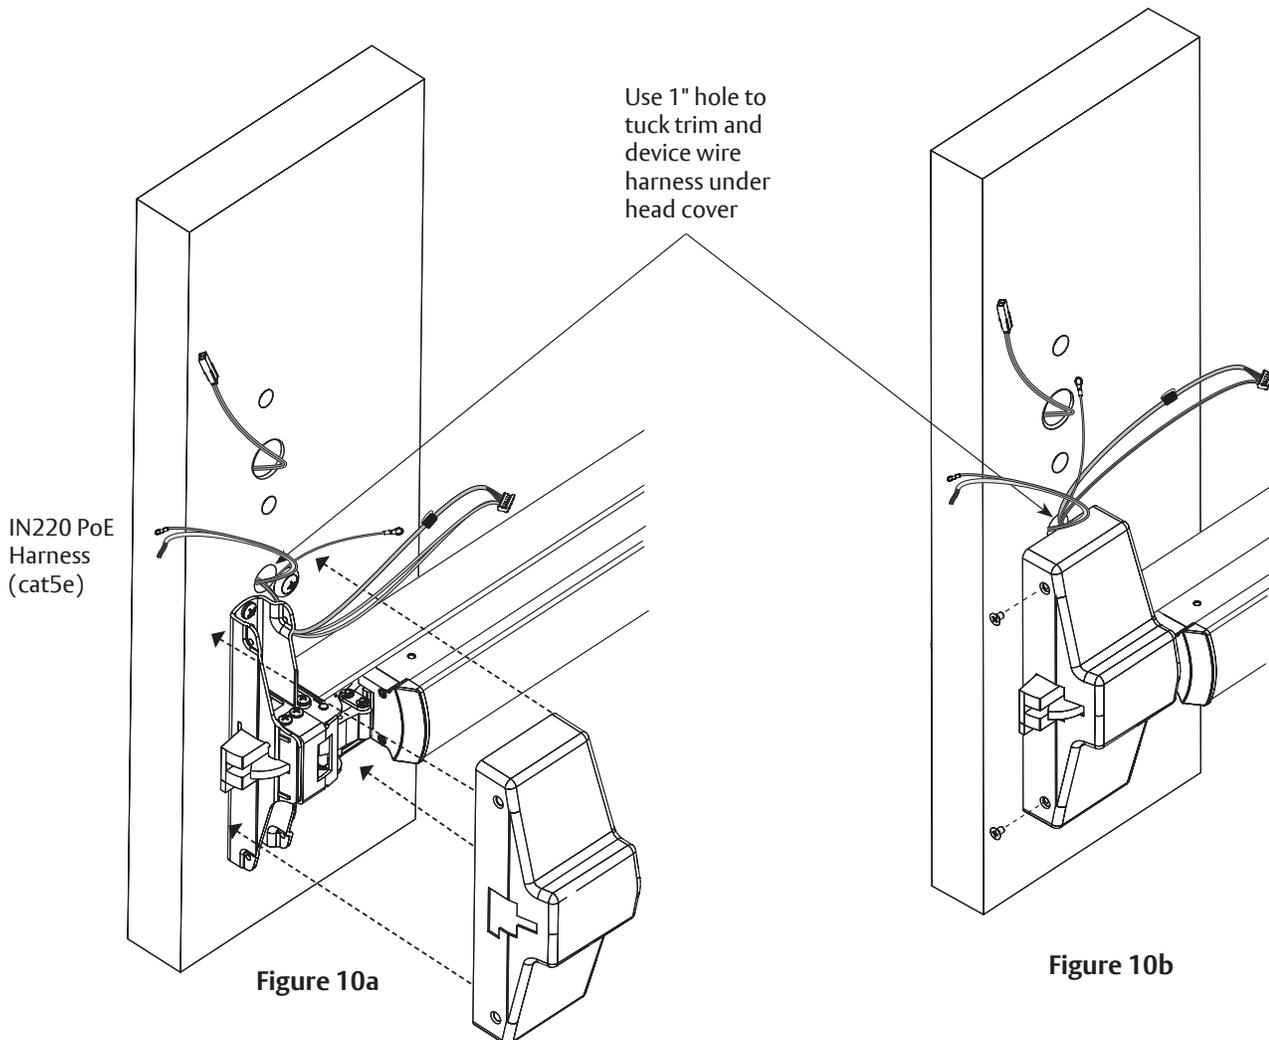

8. Mortise Exit Installation Instructions

Verify Hand and Bevel of Door

1. Door should be fitted and hung.
2. Verify box label for size of exit device, function and hand.

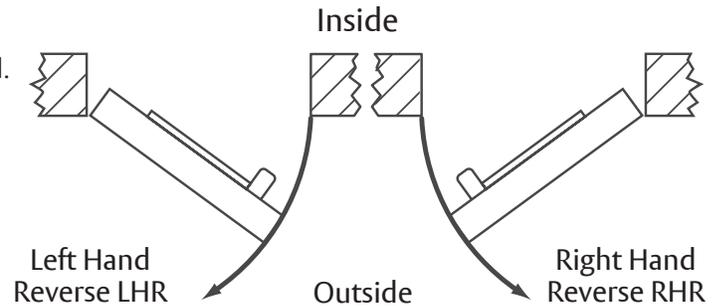


Figure 11

Prep Door

For door manufacturer templates visit www.corbinrusswin.com and reference template # T31237 (Wood).

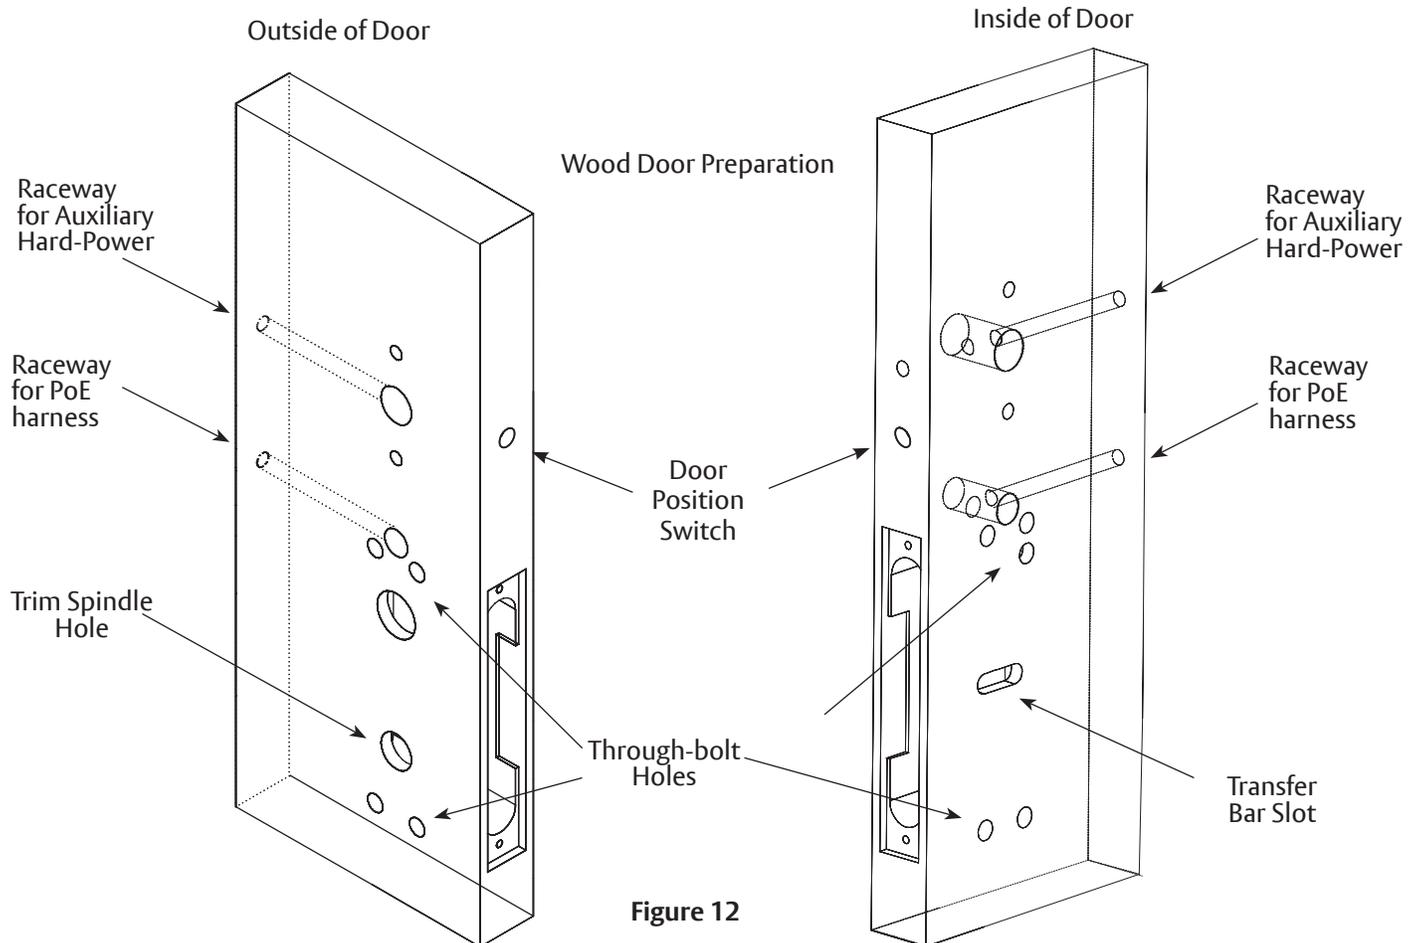


Figure 12

8. Mortise Exit Installation Instructions (continue)

Install Door Position Switch (DPS)

1. Insert DPS into raceway on latch edge of the door.
2. Push wires through raceway toward lock prep.
3. Push DPS firmly into place by hand.

Note: Do not tap Switch with any tool.

4. Install magnet into door frame. Push firmly into place by hand. See instruction A7983.



If DPS is not installed or is installed improperly, door status monitoring features will not function.

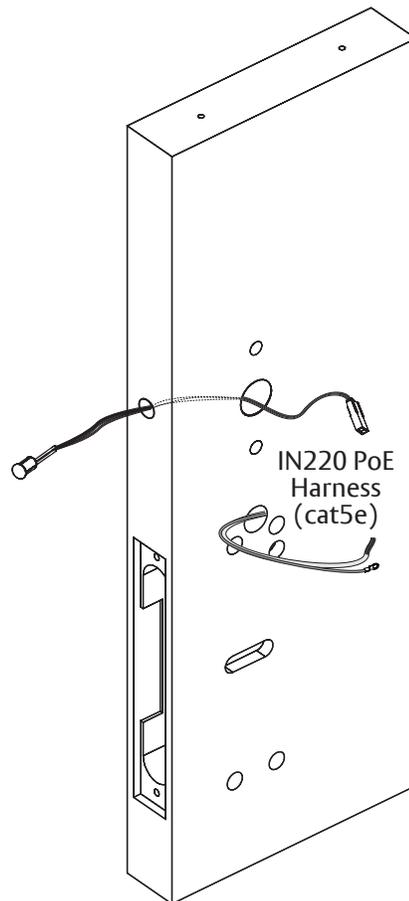


Figure 13

8. Mortise Exit Installation Instructions (continue)

Install Mortise

1. Insert lock body (Figure 13a).
2. Feed trim wire harness through wire harness hole.
3. Mount trim assembly to door pulling slack wire towards device side of door.

Note: Be careful not to pinch wire harness.

Note: Ensure tailpiece is still oriented vertically.

4. Fasten trim assembly to door using (2) 1/4-20 oval head screws and (2) finish washers (Figure 13b).

Note: Finger tighten only.

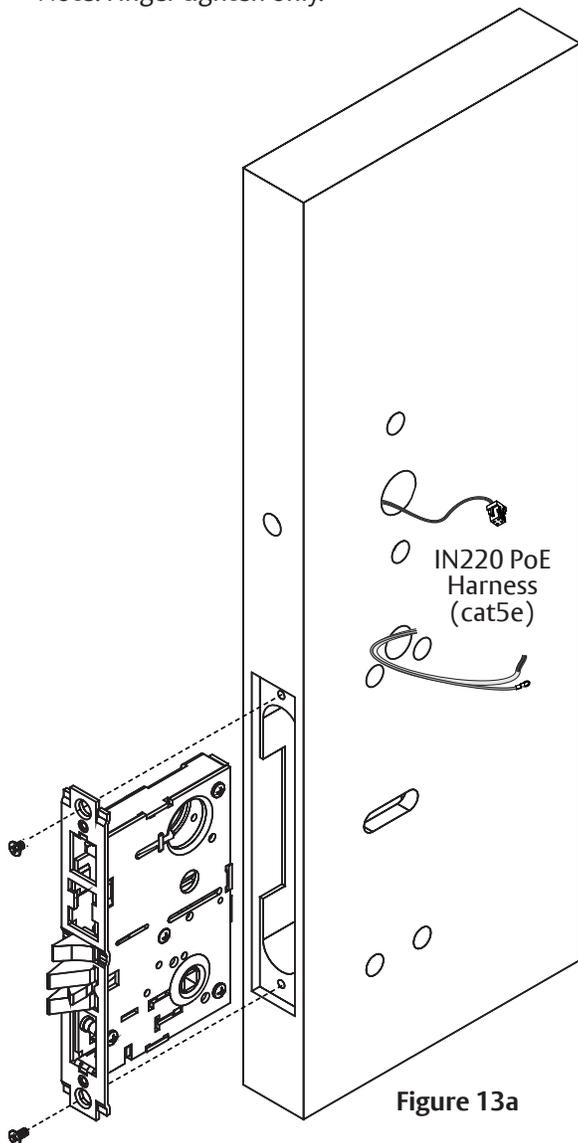


Figure 13a

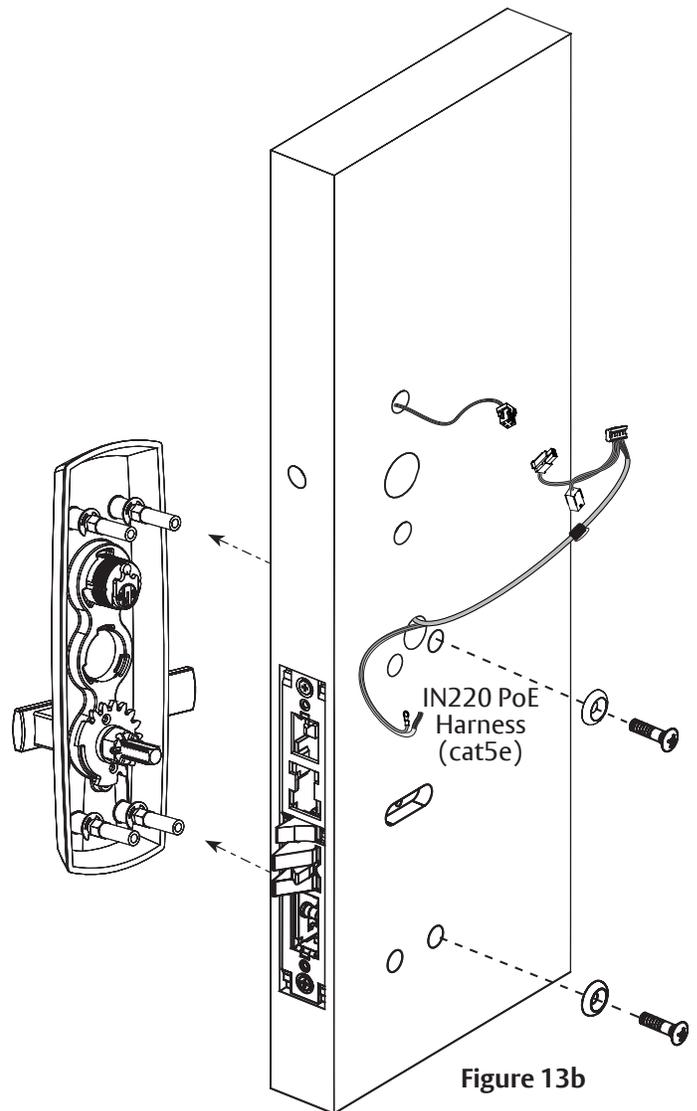


Figure 13b

8. Mortise Exit Installation Instructions (continue)

Install Exit Device

1. Seat device against door being careful to align transfer bar with retractor in lock body - See Figure 14a.
2. Fasten device to trim assembly using (2) 1/4-20 pan head screws (Figure 14a).
3. Follow instructions packed with device to secure device to door.
4. Tighten all (4) screws (Figure 14b).

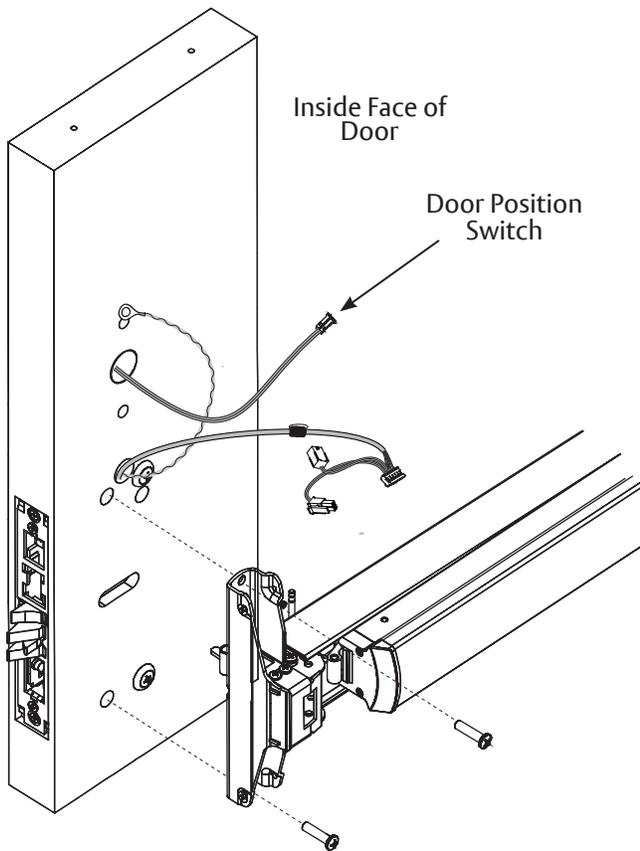


Figure 14a

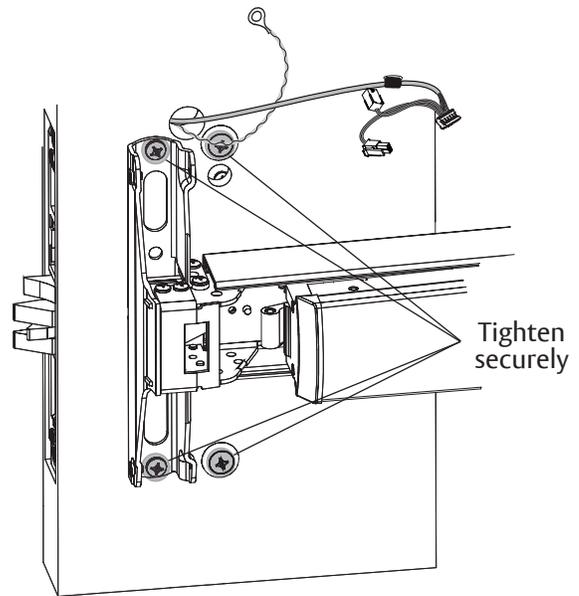


Figure 14b

8. Mortise Exit Installation Instructions (continue)

Harness Connections

1. Connect motor harness adapter to chassis harness connector (Figure 15).
2. Connect rail assembly harness adapter to chassis harness connector.

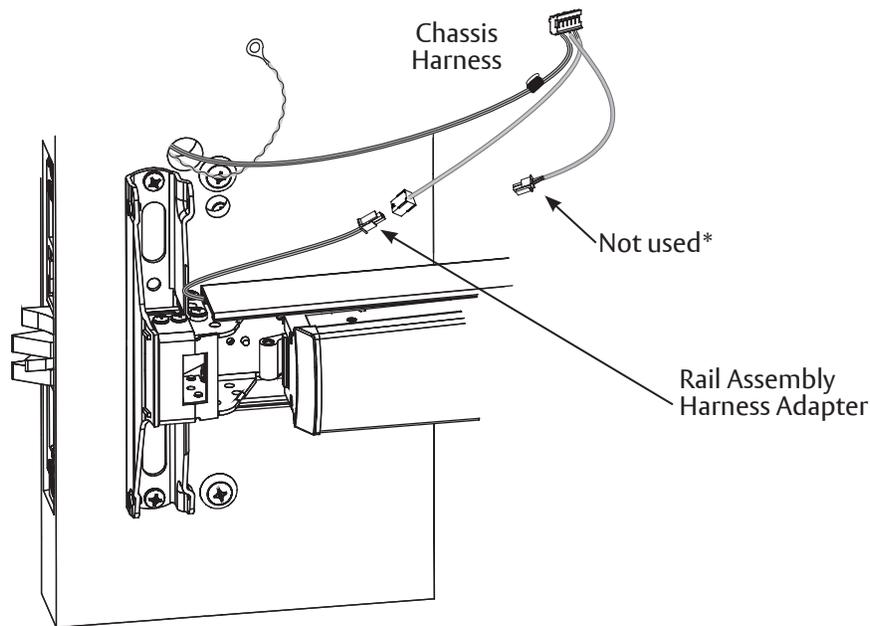


Figure 15

*Not used in typical installation

8. Mortise Exit Installation Instructions (continue)

Install Head Cover

1. Lay device wire harness across $\frac{3}{4}$ " hole (Figure 16a).
2. Tuck wires into hole when installing cover so that wires are not pinched between head cover and door.
3. Attach head cover using (2) #8-32 flat head screws (Figure 16b).
4. Install scalp using (2) 8-32 flat head screws.

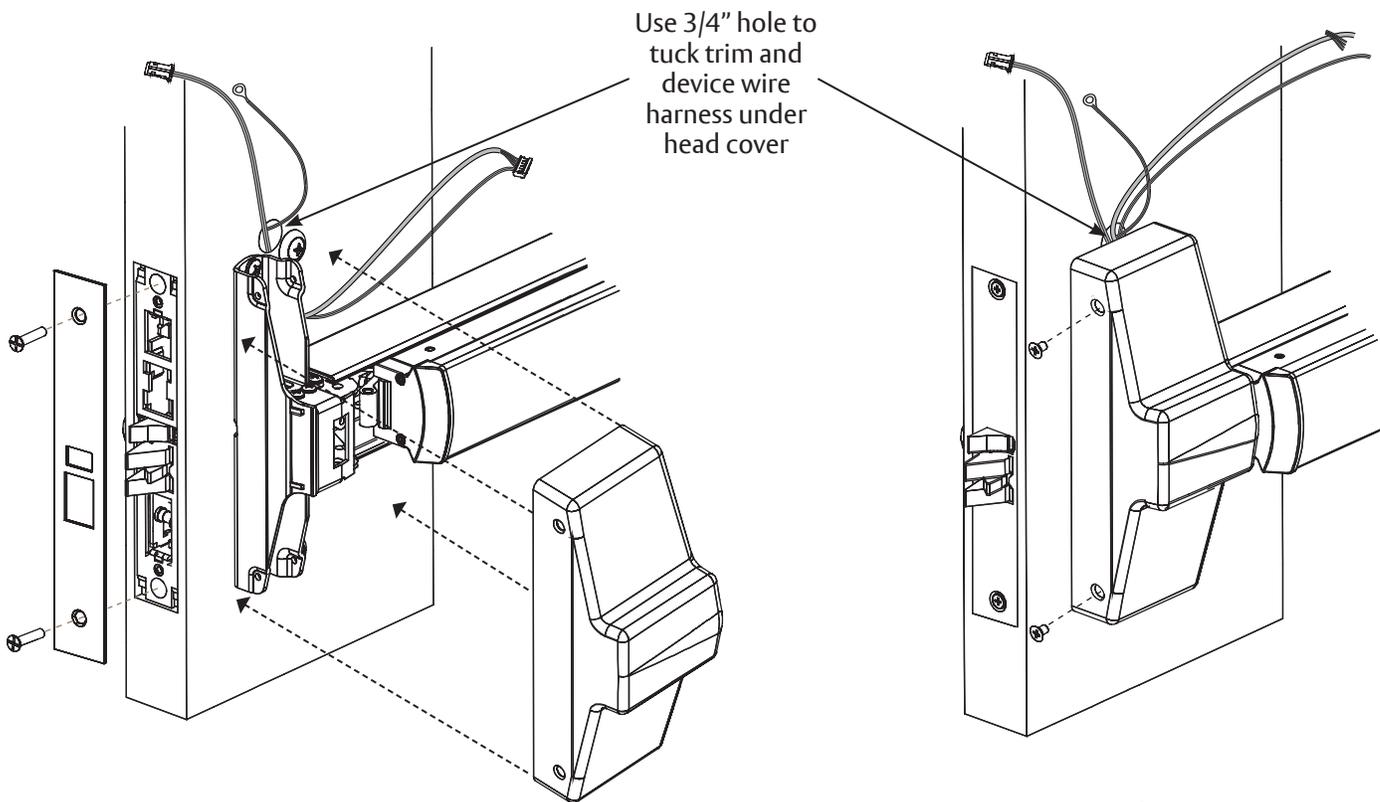



Figure 16a

Figure 16b

9. IN120/ IN220 Installation Instructions

Outside Reader Installation

1. Orient the reader so the LED lens is at the top.
2. Feed the reader harness through the door (from outside to inside).
3. Install the reader to the outside of door by aligning the mounting posts with the door preparation holes. Hold the reader flush against door while ensuring proper alignment.

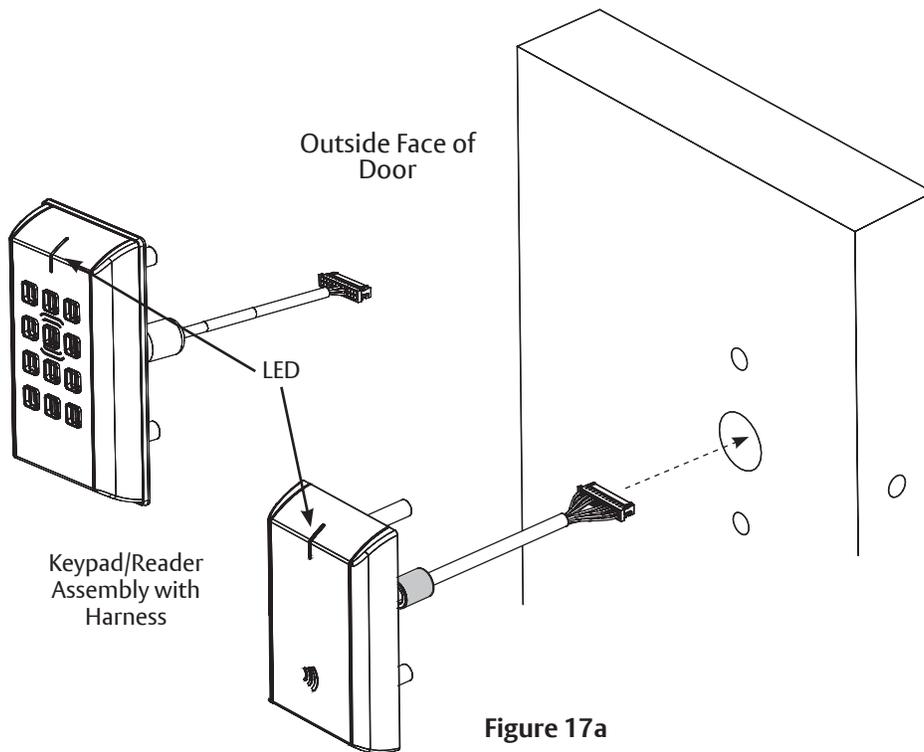

9. IN120/ IN220 Installation Instructions (continued)

4. Feed cables/connectors through the inside mounting assembly (and gasket if required*).

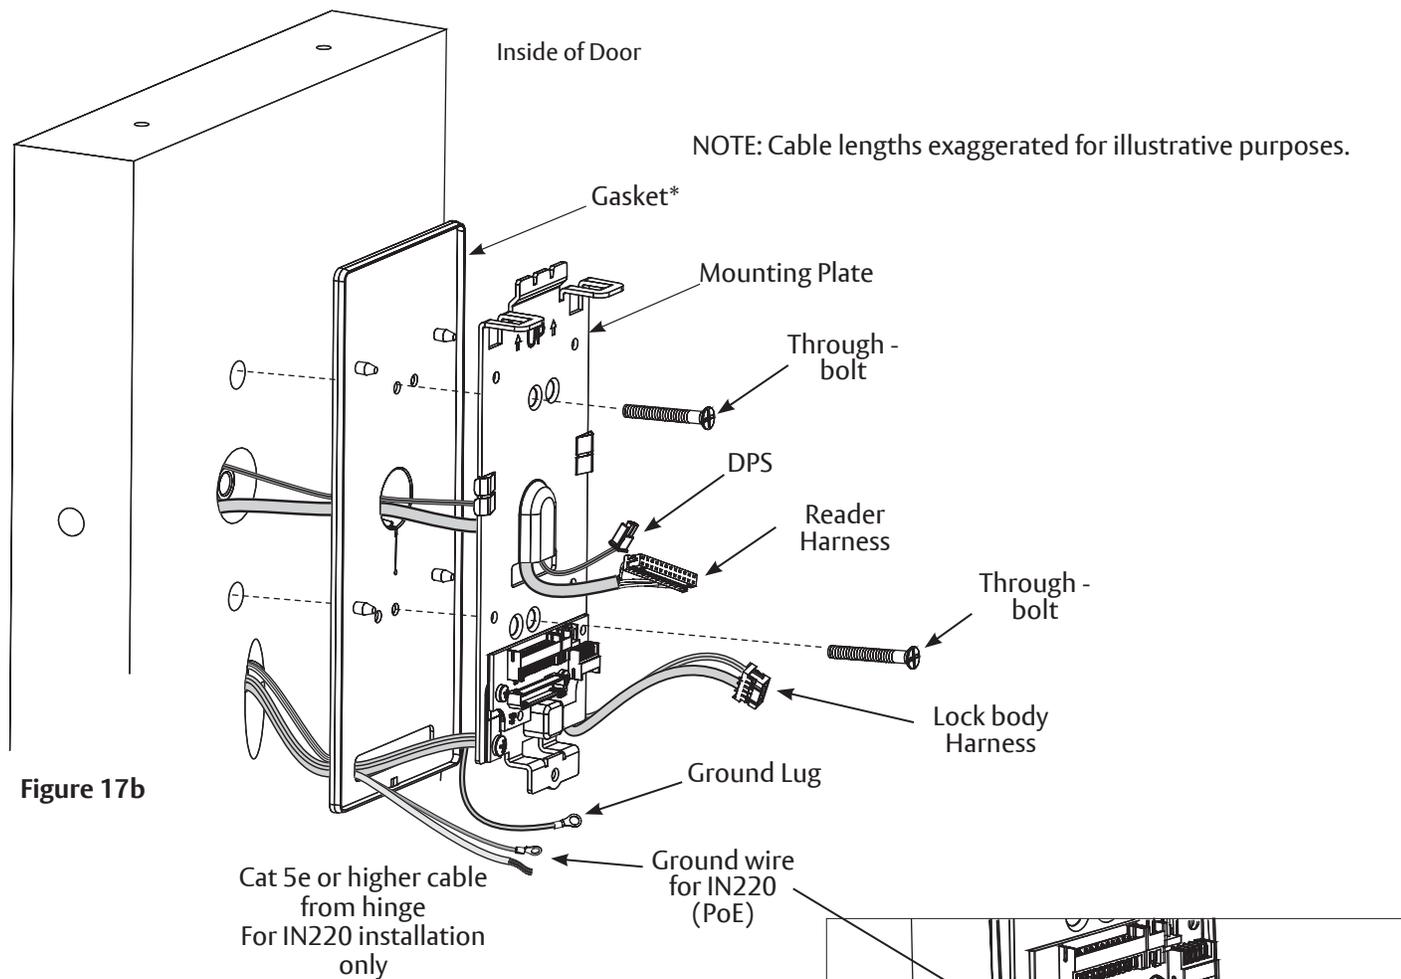


Figure 17b

5. Insert and partially tighten two (2) through-bolts prior to installation of connectors.
6. Secure ground lug(s) with #6-32 machine screw (Figure 17c).

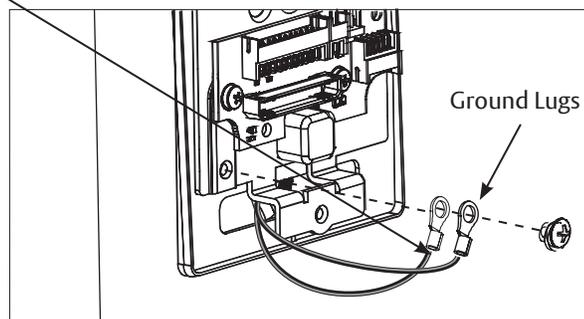


Figure 17c

*Gasket is required for outdoor installations.

If installing with gasket; separate gasket from mounting plate to feed cables through holes as indicated (Figure 17b).

Once cables/connectors are fed through, reattach gasket to mounting plate.

9. IN120/ IN220 Installation Instructions (continued)

Connectors Installation



- Do not allow debris to enter connector contacts
- Ensure connectors are covered with silicone dielectric compound (grease)*



- Snip end of packet to dispense grease
- Ensure all connector pins and contacts (Figure 18a) are covered - do not overfill or over-apply**

*Supplied tube contains 5 grams of silicone dielectric compound (grease)

**Evenly distribute grease; full application requires approximately 2.5 grams

IMPORTANT: Do not run wires through bottom hole in plate (Figure 18a, 18b) - it will damage wires and the controller connector. Route wires around flange, do not route wires through the flange hole (Figure 18b).

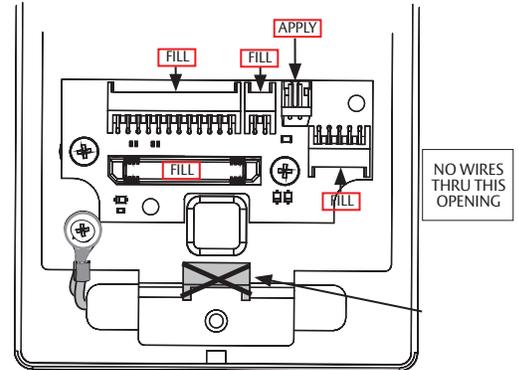


Figure 18a

Secure the following connectors (Figure 18b, 18c)

- Secure the 4-pin DPS connector.
- Secure the 10-pin lock body assembly connector.

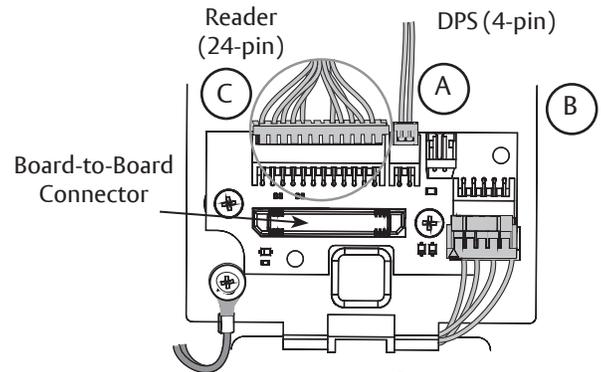


Figure 18b

Secure Mounting Plate

- Tuck excess cable into wire hole on inside of door
- Secure the mounting assembly while ensuring proper alignment of outside reader and fully tighten the (2) through-bolts on the inside of the door to secure the reader and plate to the door

- Secure the 24-pin card reader connector (Fig. 18b, 18c).
- Ensure all openings on back of secured reader connector are covered completely with grease (Figure 18c).

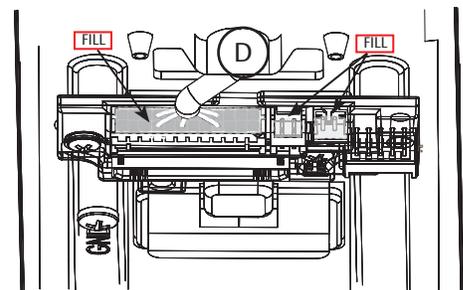


Figure 18c

9. IN120/ IN220 Installation Instructions (continued)

If installing IN220 (PoE)*

1. Strip Ethernet cable jacket (3 inches).
2. Separate (untwist) and straighten (8) Ethernet wires before carefully feeding through ferrite bead (Figure 18d).
3. Crimp RJ45 (male) connector on end of wires.

*For more detail, refer to section (7) 'Installation Wiring', "A - Frame Harness Installation".

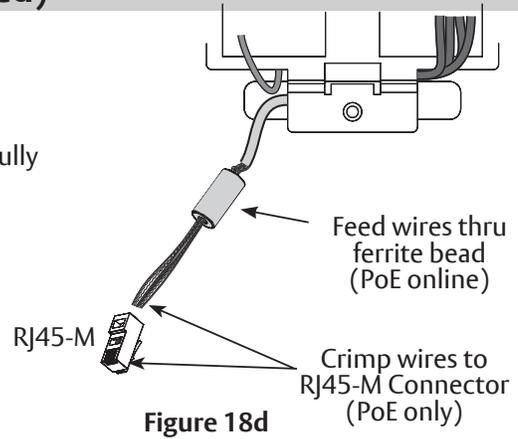


Figure 18d

Install the Controller



- Do not allow debris to enter connector contacts
- Ensure connectors are covered with silicone dielectric compound (grease)*

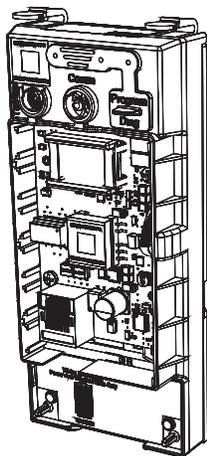


Figure 18a

Front of Controller (PoE shown)

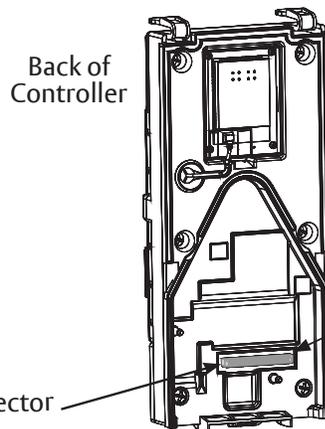


Figure 18b

Back of Controller

Connector

*Be sure to apply grease to connector and recessed area surrounding connector

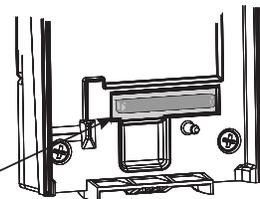


Figure 18c

Click into place

1. Insert bottom tab of controller (ensure a clear path) into slot on mounting plate (Figure 19d, 19e).
2. Ensure proper alignment of board-to-board connectors (Figure 19e) while pivoting controller toward door until two tabs on top click securely into place on mounting plate (Figure 19e).

To avoid possible damage to board-to-board connectors, care should be taken when securing controller to mounting plate. If there is resistance when securing, detach controller to determine cause before re-attaching controller.

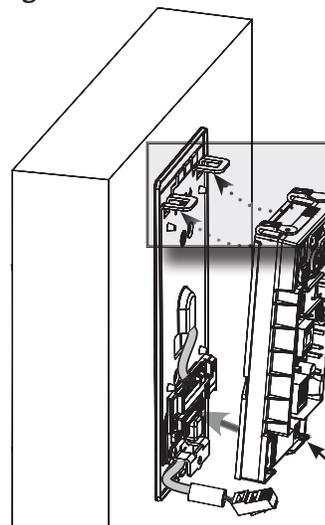


Figure 19d

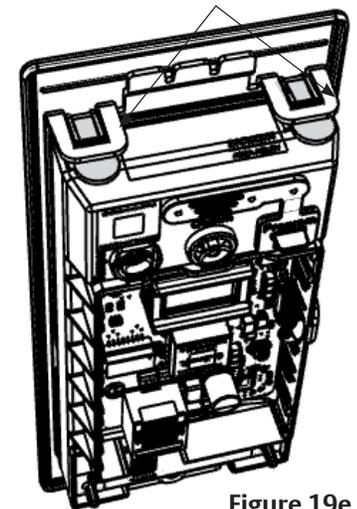


Figure 19e

Controller

9. IN120/ IN220 Installation Instructions (continued)

Supplying Power to the Controller

NOTE: Before inserting PoE plug into PoE connector, apply dielectric grease to top of plug, covering the pin area (Figure 20a).

A. IN220 (PoE)




1. Once controller is securely in place, connect RJ45 male connector to female RJ45 port on controller board (Figure 20a).
2. If power is enabled, LED will flash, and lock motor will cycle.

B. IN120 (WiFi)

1. Once controller is securely in place, place (6) "AA" alkaline batteries in the compartment, being careful to align polarity properly.
2. After batteries are installed, there is a slight delay; LED will flash and the lock motor will cycle.

Inside Cover Installation

1. Assemble cover by hooking top edge on inside mounting plate taking care not to pinch gasket (top edge goes between plate and gasket).
2. Carefully press bottom of cover toward door without pinching any wires.
3. Secure the cover with a security Allen wrench.

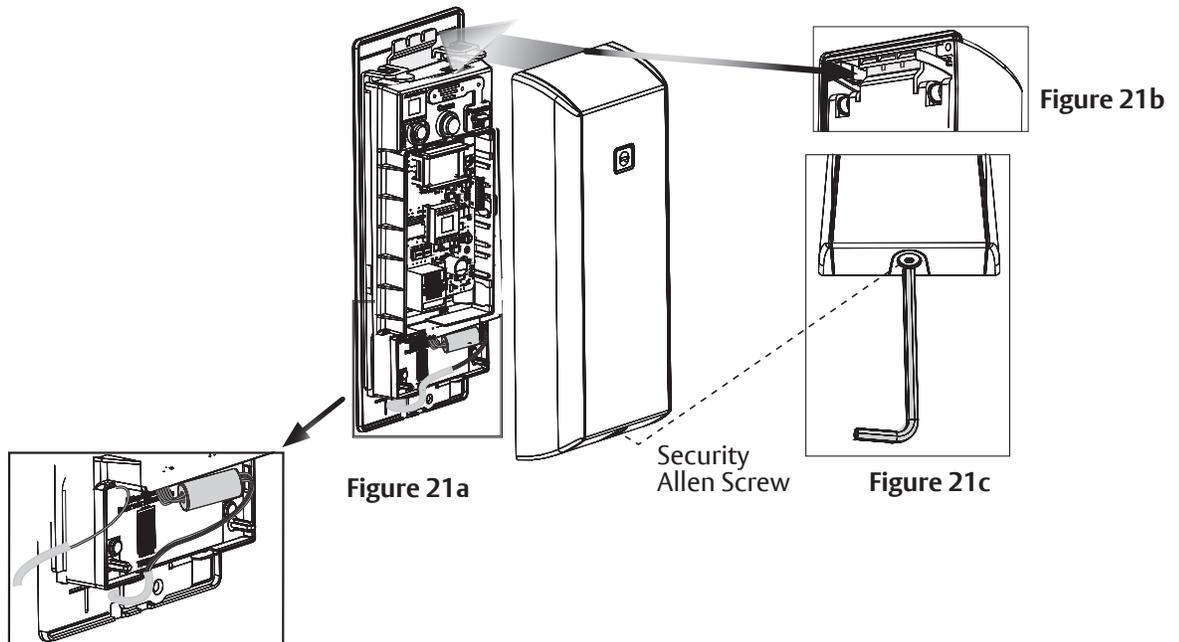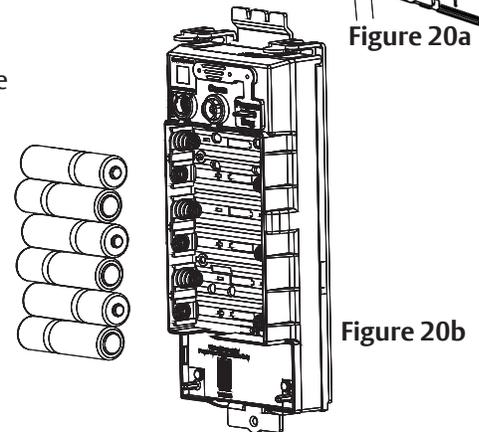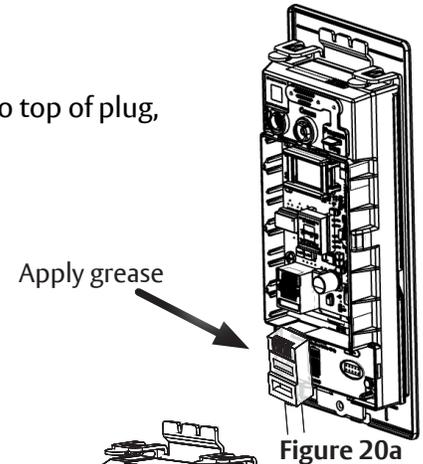

10. Operational Check

When lock is fully installed, perform the following steps:

IMPORTANT: Be sure to test functions prior to closing door.

1. Insert key into cylinder and rotate.
2. There should be no friction against lock case, wire harness or any other obstructions.
3. Check that the key retracts the latch.
4. The key should rotate freely.
5. Try the inside lever; ensure it retracts latch.

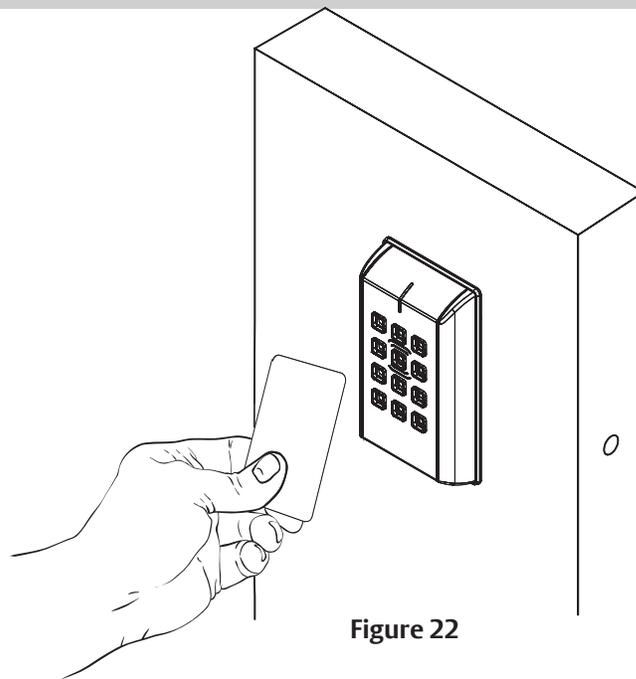


Figure 22

In all cases, perform the following checks:

- For units without a keypad, add card using LCT software* and test.
- For units with a keypad, add pin and card using LCT software* and test.

LED signalling:

- After using a valid credential, a green flash followed by motor unlock indicates normal operation (lock unlocks)
- After using a valid credential, a green flash followed by 4 beeps and 4 fast purple flashes – indicates low power. Check the input voltage.
- If the input voltage is low, disconnect lock from power source and check power source voltage. If power source voltage is correct, inspect lock wiring for a possible short.
- If the lock loses power, it will flash rapid blue for approximately one minute. Lock will default to programmed fail safe or fail secure.
- After that, the lock will no longer be functional.

When you have completed the tests, close the door, ensuring latchbolt fully extends into strike plate without binding.

*Refer to Lock Configuration Tool user manual (WFMN1) for information on how to configure and program locks.

IN120 WiFi/IN220 PoE

ED5200 (S)N & ED5600N Series Exit Devices, Rim and Mortise

Installation Instructions



ASSA ABLOY

The ASSA ABLOY Group is the global leader in access solutions. Every day, we help billions of people experience a more open world.

ASSA ABLOY Opening Solutions leads the development within door openings and products for access solutions in homes, businesses and institutions. Our offering includes doors, frames, door and window hardware, mechanical and smart locks, access control and service.

