



5502 Timberlea Blvd. Mississauga, ON L4W 2T7  
Telephone: 905-366-3377 Fax: 905-366-3378  
Toll-Free: 1-877-226-3369  
Web: www.camdencontrols.com

# CAMDEN KEY SWITCHES

## Installation Instructions

MADE IN CANADA

PAGE 1 OF 1

## Section 1 General Description

Camden key switches are designed to work with most 1", 1 1/8" or 1 1/4" mortise cylinders, and with different types of cams.

One or two switches may be installed, either momentary and/or maintained (alternating on/off).

## Section 2 Installation

### Mounting

1. The switch(es) provided may be mounted in either the left or the right hole on the back of the faceplate. Thread the octagonal nut (spacer ring) on to the bushing (stalk) of the switch before placing the switch in the hole.
2. Insert the switch up through the bottom of the desired hole. Secure the switch in place by screwing the round threaded washer onto the top of the switch.
3. Fit the mortise cylinder through the front of the faceplate being sure to align the grooves on the sides of the cylinder with the corresponding "retainers" on the back of the faceplate.
4. Push firmly on the cylinder, until it snaps into place, lying flush in the front of the faceplate (aluminum models only). Note that some cylinders may appear not to fit in the faceplate. If the grooves on the side of the cylinder are irregular and do not align with the retainers on the back of the faceplate, use a metal file to file down the retainers slightly. *Note – do not file the retainers off completely as they prevent the cylinder from spinning in the faceplate.*
5. Thread the brass cylinder lock ring onto the back of the cylinder, and tighten in place.
6. Turn the key in the cylinder, and ensure that the cam hits the top of the switch squarely in the

centre. Adjust the switch in the slotted hole until the cam hits in the center. It does not affect operation if the cam or the cylinder rests against the switch, so long as the switch is not fully depressed until activated by a turn of the key. If the cam does not depress the switch, or blocks the switch from resetting, raise or lower the octagon nut located under the switch, as needed. Extra spacers are provided and may be used as required.

7. Once the electrical connections are completed (see below), attach the unit to the switch box, wall, or receptacle box using the supplied tamperproof, or stainless steel Phillips screws. For outdoor use, place the rubber weatherproofing gasket behind the faceplate prior to securing to the back box or wall.

### Wiring

**Momentary:** SPST switches have normally open (N.O.) or normally closed (N.C.) contacts. SPDT / DPDT: switches have both N.O. and N.C. contacts. All contacts are rated 6 amps @ 120 VAC.

Leads are color coded as follows:

Normally open (N.O.)	<b>Blue</b> (or Green)
Normally closed (N.C.)	<b>Orange</b>
Common	<b>Grey</b> (or Black)

**Alternate Action:** (Applies to SPDT & DPDT switches). There will always be a closed connection between the Grey and one of the Orange wires, and an open connection with the other Orange wire. Pushing the switch will alternate between the two orange wires, opening one connection and closing the other.

Leads are color coded as follows:

Grey • → **Orange** (closed)  
• **Orange** (open)

**Questions? Call us toll-free at 1-877-226-3369**

Filename: Keyswitch Instructions.doc  
Revision: 12/1/04 9:25 AM