

# **Trim Assembly Instructions**

#### 1. Check cylinder components. NOTE: Cylinders longer than 1-1/8" (29) will require collars. Refer to Corbin Russwin cylinder collar chart.

- When required, cut cylinder tailpiece. 2. Correct length is 1/16" to 3/16" (2 to 5) beyond cylinder housing cam.
- 3. Assemble cylinder.

Insert cylinder housing prongs into matching notches of escutcheon. Pass cylinder tailpiece thru cylinder collar (when required) and slot in cylinder housing cam. Fasten cylinder using (2) mounting screws. DO NOT OVERTIGHTEN SCREWS.

#### Check cylinder action. 4.

Rotate cylinder tailpiece to cam the clutch lever down. This depresses the trim spindle assembly which disengages the trim spindle from the thumbpiece, putting the trim in a free-wheeling, locked mode.

## 5. Determine trim function.

TH955 (Classroom) -Key locks/unlock thumbpiece TH959 (Storeroom) -Key locks/unlocks thumbpiece Key removable ONLY in locked position.

# 6. To change trim function:

Rotate cam tip to down position (locked mode). Move function screw as shown.







Corbin Russwin Cylinder Collar Chart	
Cylinder Length	Collar
1-1/8" (29)	None
1-1/4" (32)	654F07**
1-1/2" (38)	654F08**

\*\* Specify Finish

### \*Shown for LHR Door



In U.S.: Corbin Russwin, Inc. 225 Episcopal Road Berlin, CT 06037-4004 www.corbinrusswin.com

#### **Technical Product Support:**

Phone: 888-607-5703 Fax: 800-659-7293

In Canada: Yale-Corbin Canada LTD 6940 Edwards Boulevard Mississauga, ONT, L5T 2W2 www.yalecorbin.on.ca

**TH955 and TH959** Heavy Duty Thumbpiece Trim Installation Instructions

For use with ED5000 Series Exit Device (Metal, Wood or Composite Doors)

FM259 7/06 (617417702)