

# Accessories

ITEM	ACCESSORY	DESCRIPTION
	<b>HESCUT-MTK</b> Metal template kit	<ul style="list-style-type: none"> <li>For installing the 1006, 1500, 1600, 4500, 5000, 5200, 7000 and 7501 electric strikes.</li> <li>4-7/8" [123.8mm] ANSI jamb preparation only.</li> </ul>
	<b>9000-MTK</b> Metal template kit	<ul style="list-style-type: none"> <li>For installing the 9400, 9500, 9600, 9700, and 9800 surface mounted electric strikes.</li> <li>Magnetic backing.</li> </ul>
	<b>9000 Series</b> Spacer Plates	<ul style="list-style-type: none"> <li>Designed to accommodate various door gaps by offsetting the strike from the frame.</li> <li>9000-108 - 1/8" Spacer Plate</li> <li>9000-116 - 1/16" Spacer Plate</li> <li>Available in 613E, 628E, 630, and BSP finish to match frame and/or 9000 Series Electric Strike finishes</li> </ul>
	<b>SMB</b> Surface mounting box	<ul style="list-style-type: none"> <li>Installs on inactive door of pair of doors to accommodate rim-exit devices. To be used with the 7000 (783S and 789S), 9400, 9500, 9600, 9700 and 9800 electric strikes series.</li> <li>Available in black finish only.</li> </ul>
	<b>150</b> Strike latch guard	<ul style="list-style-type: none"> <li>Stainless steel. Installed at the edge of the door to cover the lock and electric strike.</li> </ul>
	<b>152</b> Universal mounting tabs	<ul style="list-style-type: none"> <li>Mount inside hollow metal and aluminum jambs.</li> </ul>
	<b>157</b> Torx® screws	<ul style="list-style-type: none"> <li>Two (2) 12-24 UNC x 3/4" [19mm] FH Tamper resistant Pin-in-Torx® screws.</li> </ul>

# Accessories

ITEM	ACCESSORY	DESCRIPTION
	<b>157D</b> Torx® security bit	<ul style="list-style-type: none"> <li>Tamper resistant Torx® R20 insert bit.</li> </ul>
	<b>310-2-3</b> Astragal strike latch guard	<ul style="list-style-type: none"> <li>Designed to prevent tampering with the latchbolt, and the latchbolt keeper. Prevents one door from being opened before the other.</li> </ul>
	<b>2001-1</b> Wire-in bridge rectifier	<ul style="list-style-type: none"> <li>Converts AC to unfiltered DC. Rated 35 V, 2 Amp.</li> <li>Not recommended for 1006 Electric Strike.</li> </ul>
	<b>2001M</b> Plug-in bridge rectifier	<ul style="list-style-type: none"> <li>Converts AC to unfiltered DC. Rated 35 V, 1 Amp.</li> <li>Includes MOV and self-resettable fuse</li> <li>Not recommended for 1006 Electric Strike.</li> </ul>
	<b>2004M</b> ElectroLynx® adapter	<ul style="list-style-type: none"> <li>Adapter between existing electric strikes and ElectroLynx® connectors.</li> </ul>
	<b>2005M3</b> SMART Pac® III <i>Addition of Smart Pac to any electric strike extends the 5 year no-fault warranty to a 10 year no-fault warranty.</i>	<ul style="list-style-type: none"> <li>In-line power controller able to receive input voltages from 12- 32V AC or DC. Built-in bridge rectifier. Reduces initial voltage by 25% to extend the life of the electric strike.</li> <li>Includes built-in resettable fuse, MOV, voltage regulation and input voltage level indicating and unit status.</li> <li>For use with 1006, input voltage must be DC.</li> </ul>
	<b>2006M</b> Plug-in buzzer	<ul style="list-style-type: none"> <li>Audible operation indicator at 24 VDC, 75db at 11-3/4".</li> </ul>
	<b>2007M</b> Plug-in pigtail connectors	<ul style="list-style-type: none"> <li>With 4" wire leads.</li> </ul>