


SECURITY DOOR CONTROLS

801 Avenida Acaso, Camarillo, Ca. 93012 (805) 494-0622 • Fax: (805) 494-8861 www.sdcsecurity.com • E-mail: service@sdcsecurity.com

621 SERIES

REGULATED POWER SUPPLY INSTALLATION INSTRUCTIONS

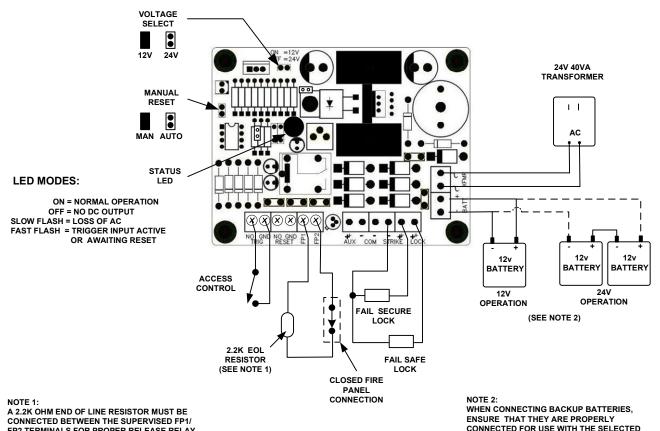

CONNECTED BETWEEN THE SUPERVISED FP1/ FP2 TERMINALS FOR PROPER RELEASE RELAY OPERATION.

A SHORT OR AN OPEN CONNECTION BETWEEN THE FP1/FP2 TERMINALS WILL TRIGGER THE RELEASE RELAY.

TEST UNIT YEARLY

WHEN CONNECTING BACKUP BATTERIES,
ENSURE THAT THEY ARE PROPERLY
CONNECTED FOR USE WITH THE SELECTED
POWER SUPPLY OUTPUT VOLTAGE. FAILURE TO
DO SO WILL RESULT IN IMPROPER BATTERY
CHARGING AND PERFORMANCE AND CAN
RESULT IN BATTERY AND POWER SUPPLY
DAMAGE.

MODEL 621B POWER SUPPLY MODULE

Input Voltage: 24V AC @ 60Hz Input Current: 40VA MIN

Output Voltage: 12/24VDC (Regulated)

Output Current: 1 amp

Ripple Voltage: 0.05 Volts Max.

Battery Charger Max: 150mA @ 12VDC Maximum recommended battery size: 7 ah

(Replace batteries every 3 years)

MODEL 621P POWER SUPPLY MODULE WITH PLUG IN TRANSFORMER

Input Voltage: 115V AC @ 60Hz

Input Current: .6A Max

Output Voltage: 12/24VDC (Regulated)

Output Current: 1 amp

Ripple Voltage: 0.05 Volts Max.

Battery Charger Max: 150mA @ 12VDC Maximum recommended battery size: 7 ah

(Replace batteries every 3 years)

