



**Notes:**

1. Do not scale drawing.
2. Dimensions are given in inches (mm).

**Electrical Ratings: Two types of wiring are offered:**

Specify EH340-2 for two-wire #18 AWG circuits, rated 3 amps continuous. Low voltage only.  
 Specify EH340-4 for four-wire #22 AWG circuits rated 2 amps continuous. Low voltage only.

**Installation Instructions:**

1. Prepare door and frame per details shown.
2. To insure proper operation of door, the centerline of the top pivot pin must be straight and plumb with bottom spindle.
3. Connect wires in door frame and install jamb portion with pin retracted.
4. Place door on bottom pivot and raise door so that its top is within two feet of the top jamb.
5. Push wires through door portion bearing hole and connect wires in door.
6. Install door portion.
7. Raise door to vertical position while carefully pushing wires down inside door.
8. Engage top pivot pin by turning adjusting screw clockwise when door portion is in alignment with the jamb portion.
9. Test the electrical installation for proper operation of the wired door devices.

**EH340 Top Pivot  
 Center Hung, Non Handed  
 With Concealed Wires**

**RIXSON®**  
**ASSA ABLOY**

www.rixson.com

TEMPLATE NUMBER

**IS-EH340**

DATE

**07-09**