1. Make sure closer is st

5030 SERIES
INSTALLATION INSTRUCTION SHEET


1. Make sure hand of closer and door correspond. Hand of closer is stamped on mounting plate. Hand of closer can not be changed.


- 2. Determine if door is to be hung on hinges, offset pivots ot center pivots. If frame is not prepared for closer, prepare to dimensions shown on proper template. Note: On butt hinge applications, closer can be templated for 100° or 180° of opening.
- **3.** Install closer in prepared frame with fasteners provided. Be sure mounting plate is flush with soffit. Install head stop.
- 4. Hang door. Be sure there is no bind or friction. Place main arm on shaft and push up into position. Insert arm screw and tighten securely. Close door and install shoe. Open door slightly and insert rod in forearm. Close door. Starting with main arm at right angle to door, move arm toward latch until holes in rod and tube line up. Insert and tighten screw.
- 5. REGULATION: Door closer regulation is preset at the factory. Adjust as follows only if necessary: A "normal" closing time from a 90° open position is 5 to 7 seconds, evenly divided between main speed and latch speed (see figure below). Use a 3/32" hex wrench to adjust regulating screws. To slow main speed of door, turn middle regulating screw clockwise. To slow latch speed, turn regulating screw closet to hinge clockwise.

 BACKCHECK: To increase backcheck intensity,

turn regulating screw screw closest to the latch clockwise.

DO NOT USE ABRUPT BACKCHECK. DO NOT USE DOOR CLOSER AS A DOOR STOP.

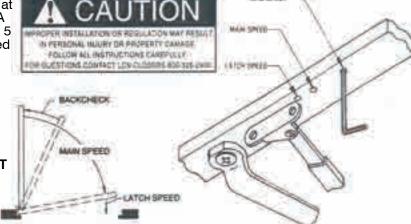

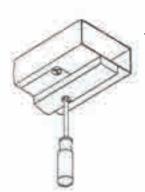



- 7. To adjust 90° hold-open arm (up to 100° opening). The hold open features is at the elbow. Arm is preset to hold door open at approximately 90°. To change setting, loosen adjusting nut, open door to desired hold open position, tighten adjusting nut.
- 6. Adjust CLOSING POWER only if more power is needed. Closer is shipped with minimum closing power pre-set. To increase CLOSING POWER turn spring adjusting screw clockwise. Maximum adjustment 36 turns.
- 8. To adjust for additional closing power at latch. (Regular & 90° H.O. only)
 - A Remove screw "Y" (step 4) and separate rod
 - B Remove shoe screws and turn shoe over.
 - C Reassemble arm.





STANDARD FOWER HICREASED FOWER

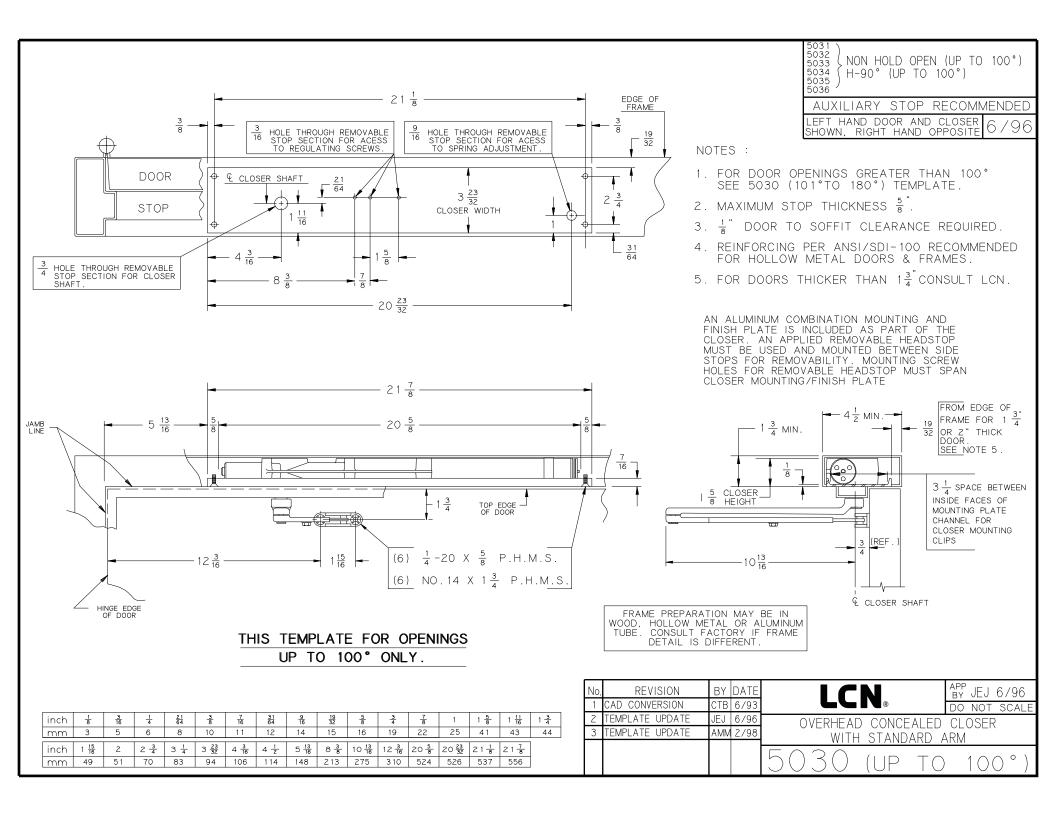

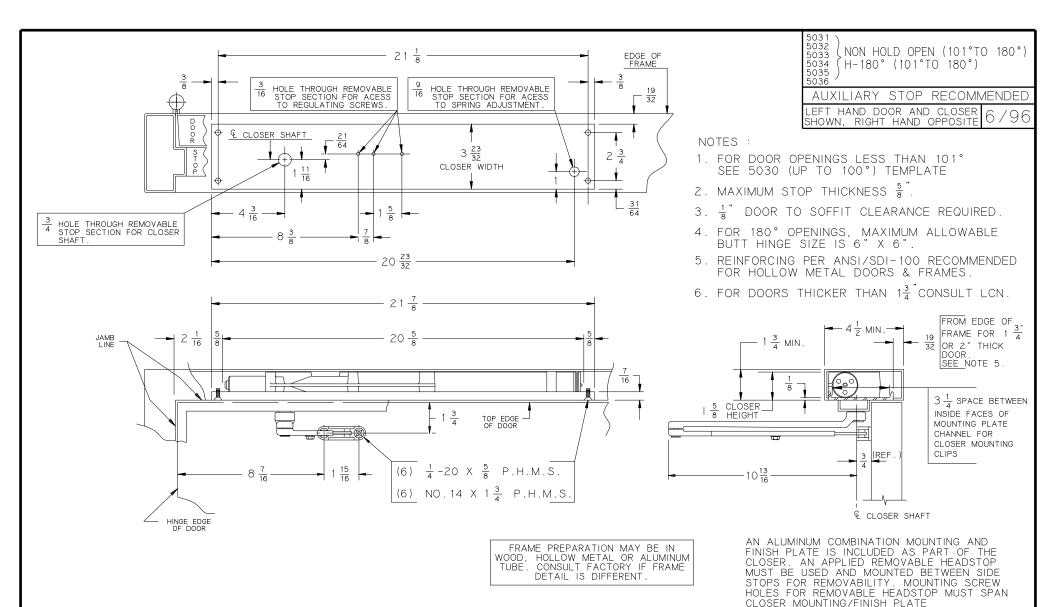

THIS TEMPLATE FOR OPENINGS FROM 101°TO 180° ONLY.

inch	18	3 16	1 4	21 64	3 8	716	31 64	9 16	19 32	5 8	3 4	7 8	1	1 5	1 11	1 3	1 15 16
mm	3	5	6	8	10	11	12	14	15	16	19	22	25	41	43	44	49
inch	2	2 1/16	2 1/2	2 3	3 1/4	3 23 32	4 3	4 1/2	6	8 3	8 7/16	10 13	20 5	20 23	21 1	21 7]
mm	51	52	64	70	83	94	106	114	152	213	214	275	524	526	537	556	

	No.	REVISION	BY	DATE	APP JEJ 6/96					
٦	1	CAD CONVERSION	СТВ	6/93		DO NOT SCALE				
	2	TEMPLATE UPDATE	JEJ	6/96	OVERHEAD CONCEALED	CLOSER				
4	3	TEMPLATE UPDATE	AMM	2/98	WITH STANDARD ARM					
	4	REMOVED H180 ARM	JDT	9/09	WITH STAINDAID 7	VI VIVI				
					5030(101°TC) 180°)				

