SEM 7810 Extension

IMPROPER INSTALLATION OR REGULATION MAY RESULT IN PERSONAL INJURY OR PROPERTY DAMAGE FOLLOW ALL INSTRUCTIONS CAREFULLY, FOR QUESTIONS, CALL LCN AT 800 - 526 - 2400

- Contact Plate Locking Screw 2 (2) Plastic spacer disk 0 Contact Plate Armature Base 0 Ball Link Armature Base 0 0
 - 1. Remove contact plate locking screw.
 - 2. Pull contact plate away from armature base. (Caution: the 2 plastic spacer disks on the contact plate may fall out.)
 - 3. Insert ball link into armature base. Reinsert and tighten locking screw.
 - 4. Insert contact plate with plastic spacer disks in place into connector link. Reinsert and tighten screw.
 - Attach extension link(s) as needed. (Note: Using just the ball link and connector link will create a 1 ½" link. Extension Links are available in different lengths and can be combined together to achieve the desired length.)
 - 6. Attach contact plate and connector link assembly to extension link (s). Align contact plate with magnet and tighten all set screws.



Extension Link

Screws