

CK700 CYLINDRICAL KNOB SET **INTERCHANGABLE CORE (IC) INSTRUCTIONS FOR CHANGING HAND**



The keyed knob of this lock is reversible for right hand or left hand doors. If nessary, to change the hand of the lock so that keyway will be right side up, follow these instructions:

 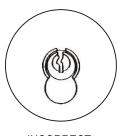


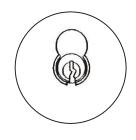


INCORRECT


CORRECT


1. REMOVE KNOB With interchangeable core removed, depress knob keeper and pull out



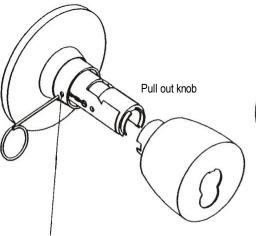

 
2. REMOVE CORE RETAINER Insert a screw driver of a stick into the



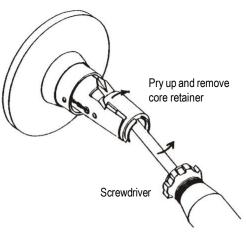


3. REVERSE AND REPLACE CORE **RETAINER**

Reverse retainer in opposite direction; hold retainer at approx. 15 degrees, slide and push retainer into position. (Note: If the seating for retainer is difficult, exert force or tap lightly on outer face of retainer if needed.)

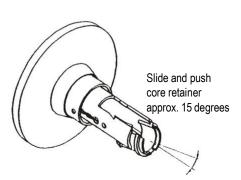

4. REPLACE KNOB

With "figure 8" (IC) hole of knob in up position, align the lug with the notch in core retainer, depress knob keeper and push knob onto sleeve until knob keeper engages with keeper hole in shank.

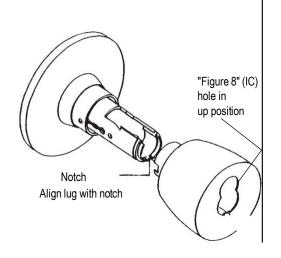

WD-OD002(040) CK700-IC

Depress knob catch