

Detex Corporation, 302 Detex Drive, New Braunfels, Texas 78130


(830)629-2900 /1-800-729-3839 /FAX(830)620-6711

E-MAIL: detex@detex.com

INTERNET: www.detex.com

INSTALLATION INSTRUCTIONS FOR MORTISE 03WM TRIM

MORTISE

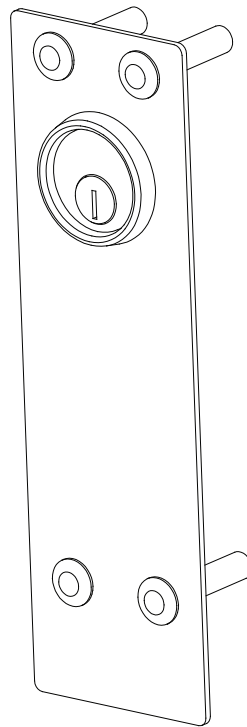

WM TRIM INSTALLATION INSTRUCTIONS


NOTE:

- 1) Mortise lock NOT supplied with TRIM device.
- 2) For a retrofit application, remove lock and device before installing new trim.
- 3) LHR installation shown (Reverse all steps for RHR).

STEP 1: PREP DOOR


1 TRIM side: Use plastic template to mark and drill TRIM holes

MARK HOLES

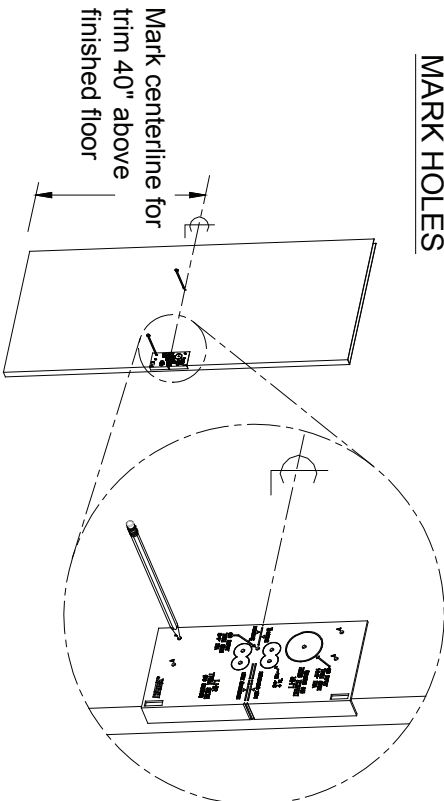

Mark centerline for trim 40" above finished floor

DRILL HOLES

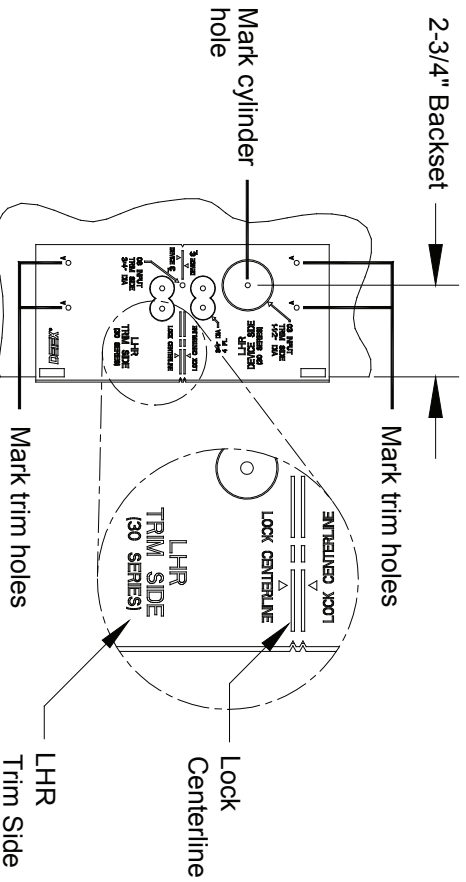

2-3/4" Backset

Mark trim holes

Mark cylinder hole


Lock Centerline

LHR TRIM SIDE (30 SERIES)

LHR Trim Side





Mark trim holes

DRILL HOLES

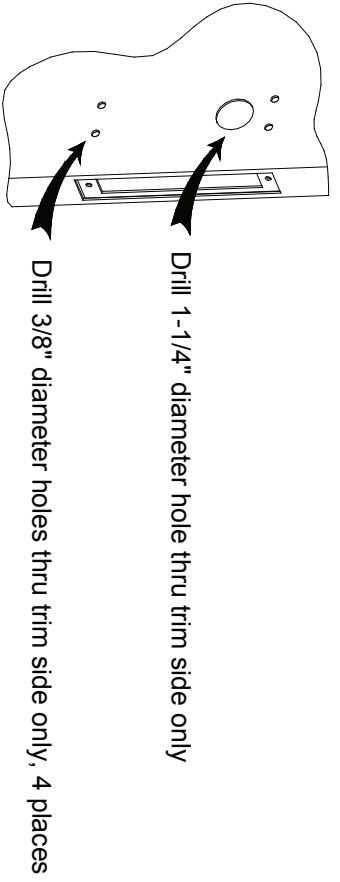

Drill 1-1/4" diameter hole thru trim side only

Drill 3/8" diameter holes thru trim side only, 4 places

Machine Screws	Sheet Metal / Wood Screw	Lock Washer	Sex Nut
A #1/4-20 x 1"	I #12-24 x 1/2"	J #12 x 1"	#1/4 Lock Washer
			
			#1/4-20 Sex Nut


STEPS 2-4: INSTALL TRIM DEVICE AND MORTISE LOCK

2 Install TRIM device

#1/4 Lockwasher


#1/4-20 Sex nuts

Install backplate with (4) "A" screws.

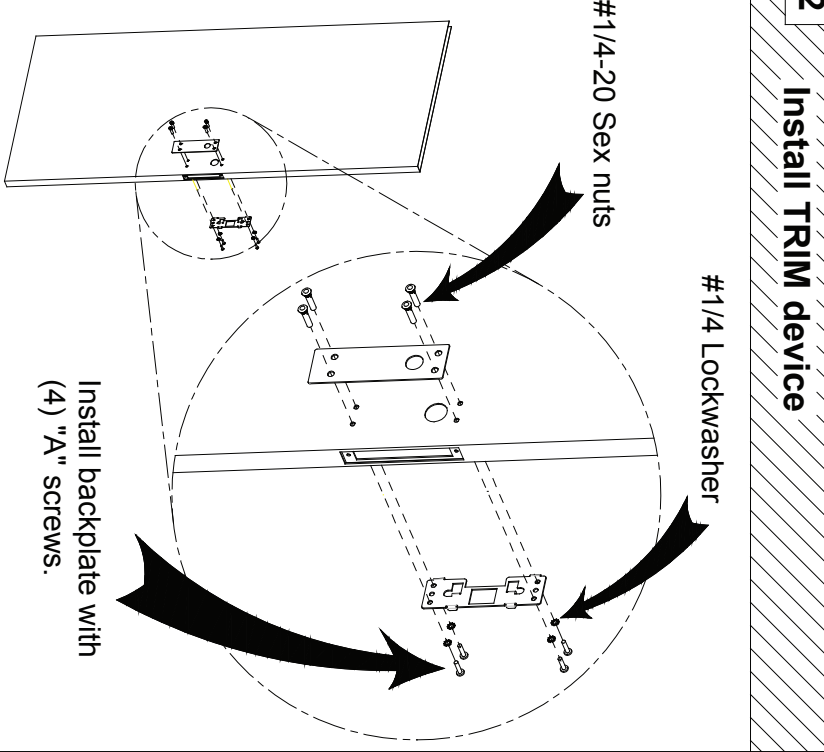

3 Install MORTISE lock

Install lock with (2) "I" screws or (2) "J" screws for wood doors. Fasten screws loosely. (See step 4)

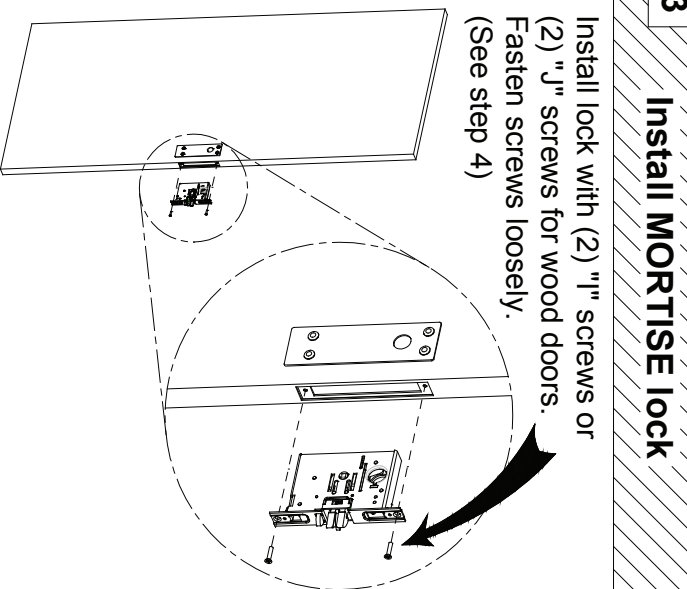


IMPORTANT!
For modular cable devices, see electrical instructions for cable routing.

4 Install mortise cylinder

Turn cylinder CW

Cylinder P/N: 102281-X
Collar P/N: 103303

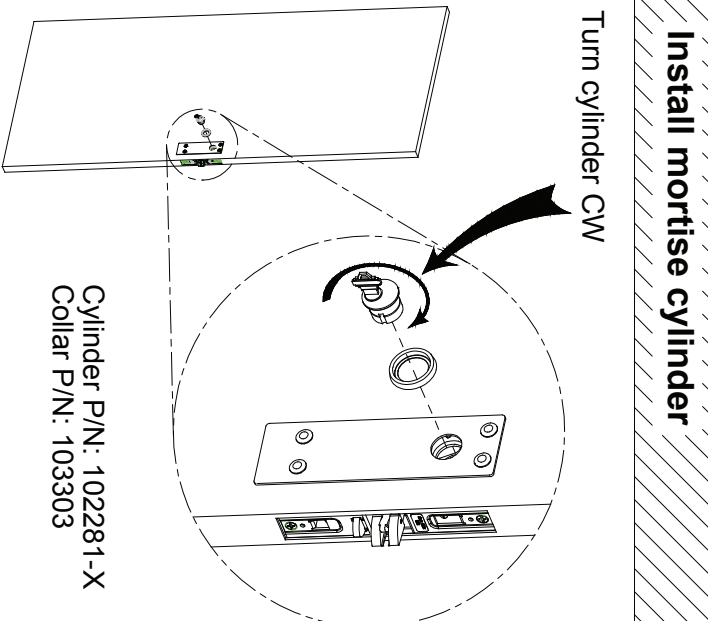

SECURE CYLINDER

Tighten screws (Reference step 3)

Tighten screw nearest trim side of door only

TRIM INSTALLATION COMPLETE
Continue installation using device instructions (p/n: 101349)

