



Detex Corporation, 302 Detex Drive, New Braunfels, Texas 78130-3045
(830)629-2900 / 1-800-729-3839 / Fax (830)620-6711
E-MAIL: detex@detex.com INTERNET: www.detex.com

INSTALLATION INSTRUCTIONS FOR DETEX[®] 02WP WIRE PULL TRIM

ADVANTEX[®]

02WP TRIM FOR ADVANTEX EXIT DEVICES
12" center to center X 4-1/2" offset X 1" diameter, Wire Pull

Drawing no. 105670

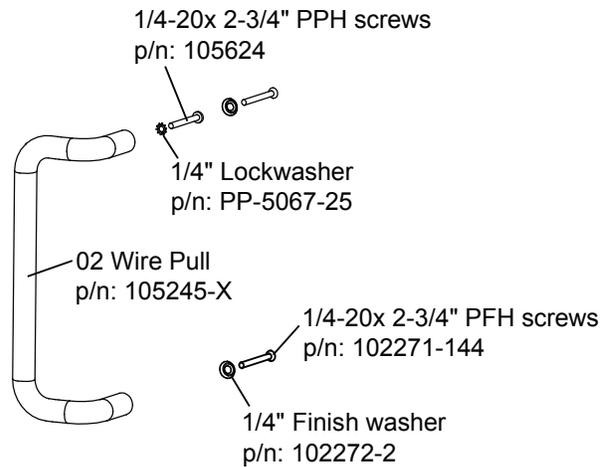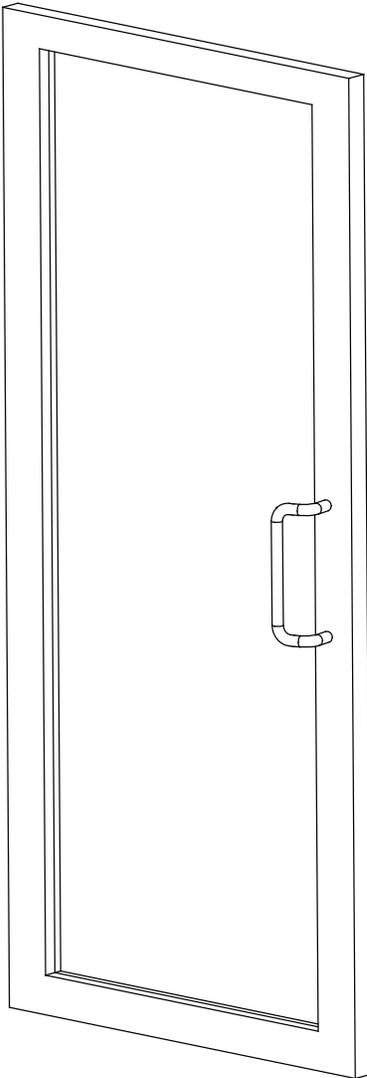


TOOLS AND SUPPLIES

Safety Glasses
**(Always put on safety glasses prior
to beginning installation of unit)**

Pencil
Center Punch
Hammer
Power Drill
Drill Bit & Tap Set
Screw Driver (Phillips Drive)
Tape Measure


Owner's Copy

Door Prep for trim on device vertical \varnothing mounting (not to scale)

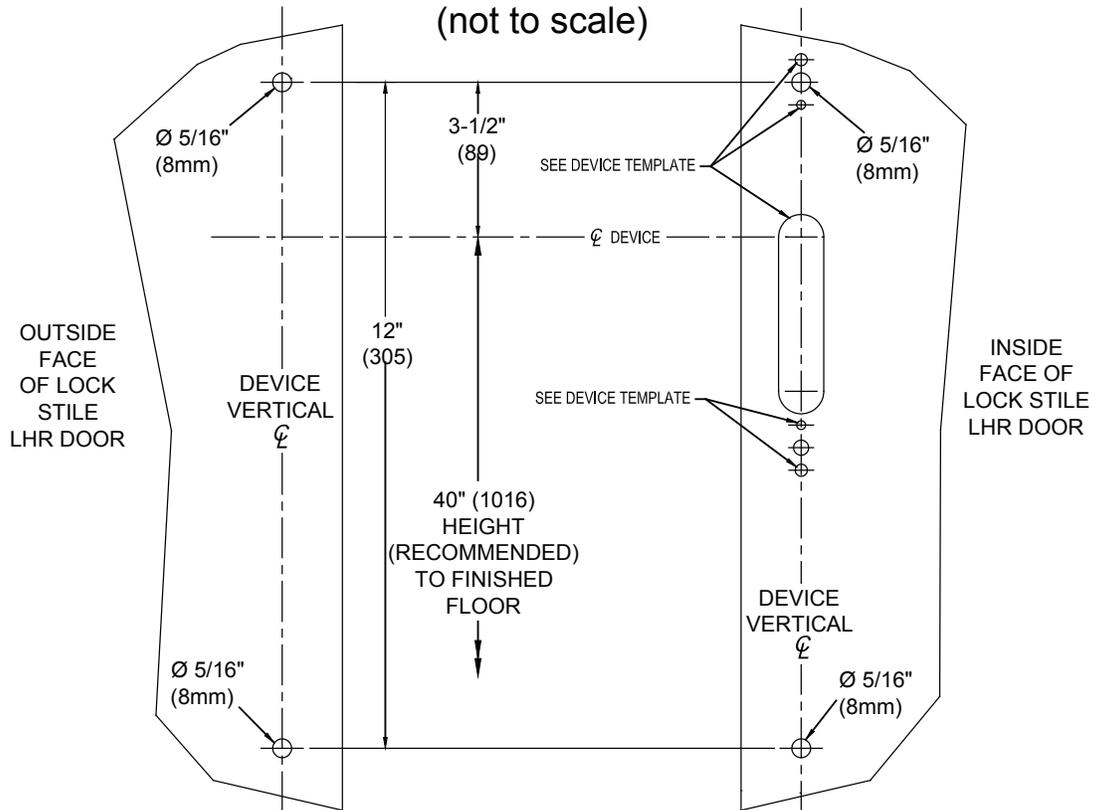

Trim installation (Concealed Vertical Rod device installation shown)

Wire Pull mounted
on device vertical \varnothing .

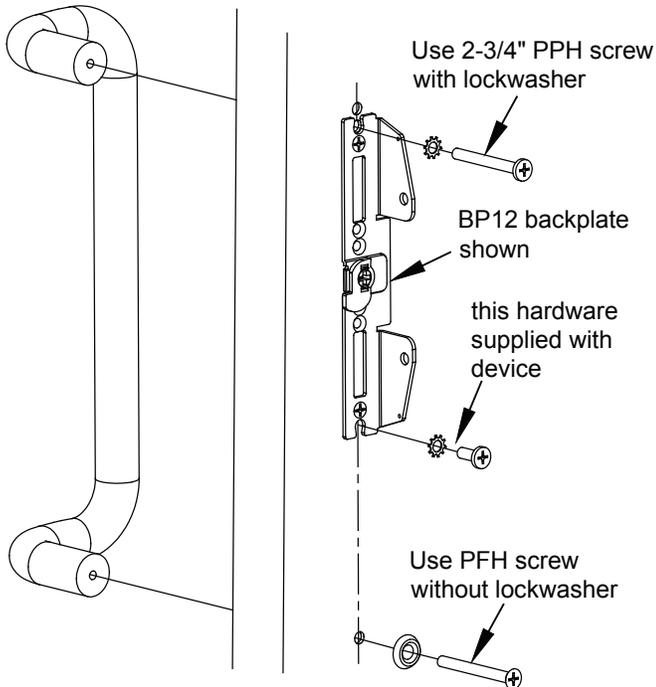

Wire Pull mounted beside* device vertical \varnothing .
Note: may not be possible on narrow stile
aluminum applications.

