

WALL DOOR STOP
(self-adhesive backing)


FOR USE ON SMOOTH, FLAT WALLS TO STOP DOOR AND PREVENT DAMAGE TO WALL, DOOR AND DOOR KNOB.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Pencil.

1. Apply at room temperature (approximately 60°F).
2. Clean surface, let dry.
3. Mark center point where door knob touches wall.
4. Remove protective backing, position in center of mark on wall and press firmly for good contact.

NOTE: Do not remove to reposition.

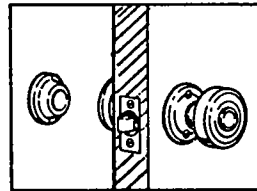

POCKET DEPTH
= .449

ASK FOR OTHER FINE HARDWARE BY H.B. IVES



WINDOW
LOCKS



DOOR
STOPS



COAT &
HAT HOOKS



DOOR
BOLTS



0 44074 00749 7

WALL DOOR STOP C411 R-W
MADE IN CHINA

H. B. Ives, New Haven, CT. 06511