


060 - FLEXIBLE DOOR STOP

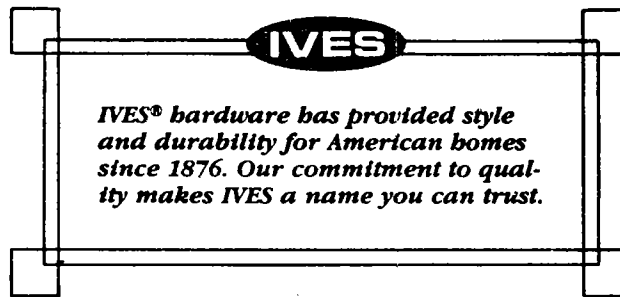


FLEXIBLE DOOR STOP

FOR USE ON WALLS TO STOP DOOR AND PREVENT DAMAGE TO WALL, DOOR AND DOOR KNOB. SHOCK ABSORBING RUBBER TIP.

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED: Phillips screwdriver, awl or pencil.

1. Locate stop in the center of baseboard and approximately 1" from door edge and mark.
2. Secure base with screw provided.
3. Attach flexible spring to base.

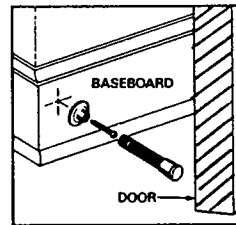

ASK FOR OTHER FINE HARDWARE BY H.B. IVES



WINDOW
LOCKS



DOOR
STOPS



COAT &
HAT HOOKS



DOOR
BOLTS



FLEX DOOR STOP C060F3 BRASS

MADE IN U.S.A.