

# Cover plates

## 889 Kit

**(For 373L Control)**

Required when 373L controls are used with sex bolts. Four studs on cover plate allow through bolting to the device center case  
**Note:** Sex bolts must be used on wood or composite fire doors. Specify device type R, M, or V and finish.

## 998 Kit

**(For 994L Trim)**

For use with 994 lever trim to cover existing 992 lever trim cut-out. Specify finish

## #10 WDA Kit

**(For 370 Series controls)**


For wood door applications, used to cover up door preparations for control, also prevents the control from boring into the wood door. Finished to match control.

## 33A WDA Kit

**(For 360 Series controls)**


For wood door applications to cover up door preparations for control, also prevents the control from boring into the wood door. Finished to match control.

## Dog keys

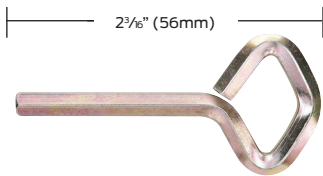

**222 Dog key (old style)**

$\frac{5}{32}$ " (4mm) hex

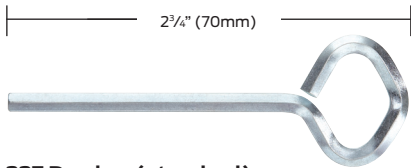

**227 Dog key (standard)**

$\frac{7}{32}$ " (4mm) hex

