

INSTALLATION INSTRUCTIONS

8893 Exit Device Inactive Trim

SARGENT

ASSA ABLOY

FOR ASSISTANCE CONTACT SARGENT AT 800-727-5477 or www.sargentlock.com

ASSA ABLOY, the global leader in door opening solutions

U.S. Patent No. 268003
Canadian Patent No. RD 1981

BEFORE STARTING


- Door should be fitted and hung
- Mullion should be installed if used
- Available stock lengths

Length E – 32" Door. No cut-off required.
Can be cut to fit doors down to 24" wide*

Length F – 36" Door. No cut-off required.
Can be cut to fit doors down to 30" wide*


Length G – 48" Door. No cut-off required.
Can be cut to fit doors down to 36" wide*

*Flush doors only

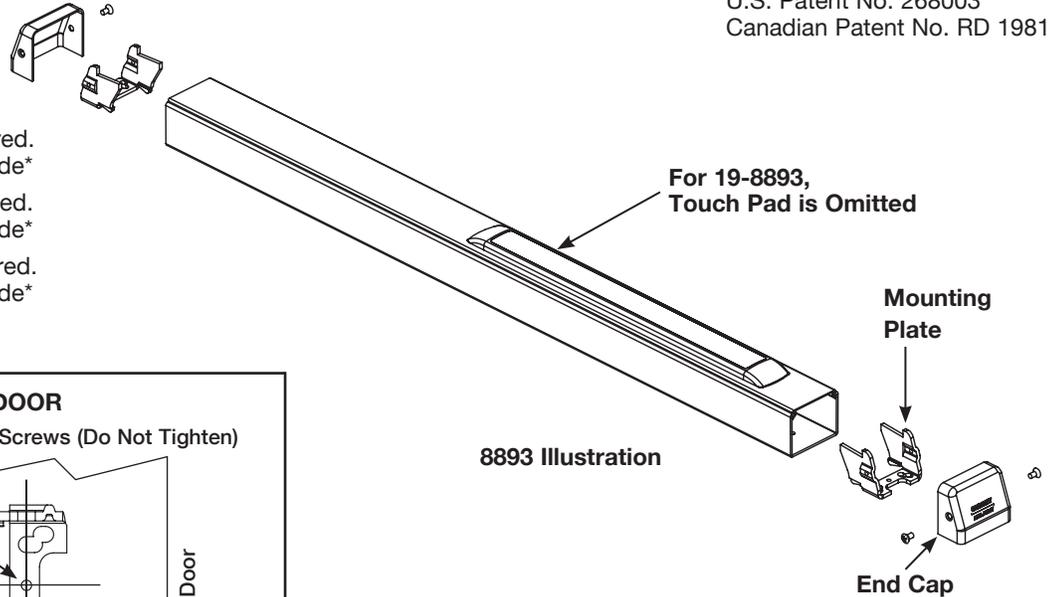



1 ATTACH MOUNTING PLATE TO DOOR

Use (2) Round Head Screws (Do Not Tighten)

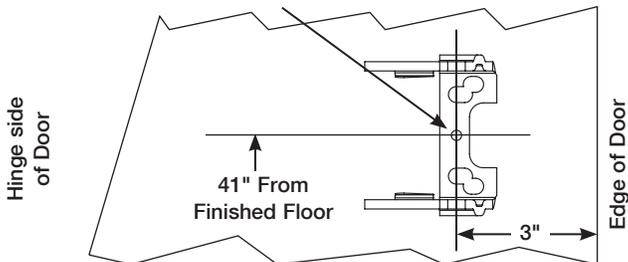


2 IF CUTTING IS REQUIRED, DETERMINE CUT-OFF LENGTH X BY SUBTRACTING 1-3/4" FROM LENGTH Y. MARK CUT-OFF POINT ON BACK END OF RAIL ASSEMBLY.

CUT-OFF AND DE BURR

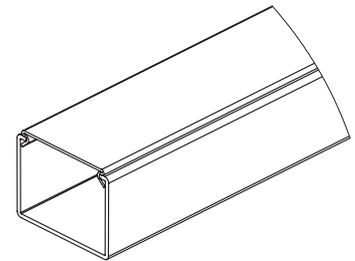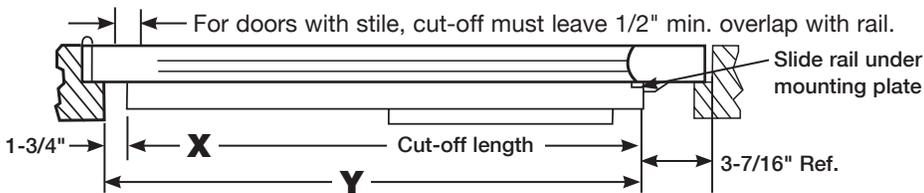


3 LEVEL RAIL AND ATTACH SECOND MOUNTING PLATE

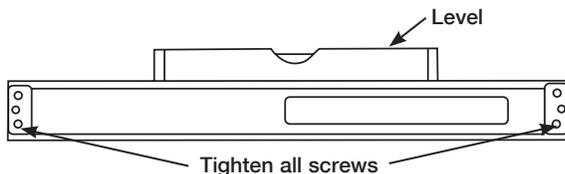

BOTH MOUNTING PLATES TIGHT AGAINST INSERT

THRU-BOLTING APPLICATION

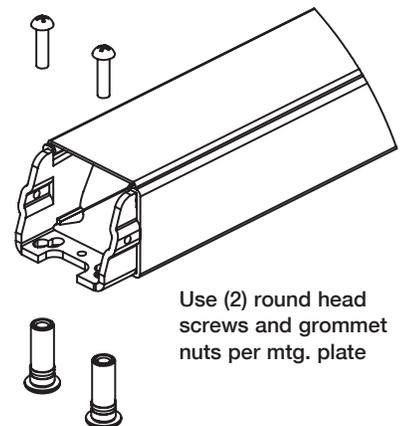

4 ATTACH END CAPS TO MOUNTING PLATES WITH COVER SCREWS

