


INSTRUCTIONS FOR INSTALLING BORED LOCK

A


INSTALL LATCH UNIT
AFTER PREPARING DOOR AND JAMB ACCORDING TO TEMPLATE PROVIDED, MOUNT LATCH UNIT IN DOOR.

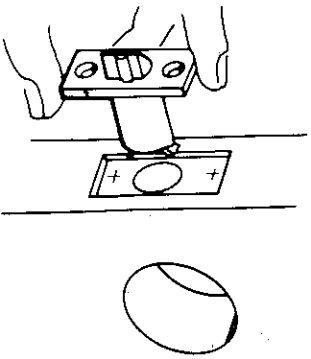

LATCH UNITS WITH DRIVE IN FRONTS MUST BE POSITIONED WITH BOLT FACE VERTICAL

B

REMOVE INSIDE KNOB
IF RECEIVED WITH KNOB ENGAGED, DEPRESS KNOB CATCH WITH PUSH PIN PROVIDED AND PULL KNOB OFF SPINDLE.

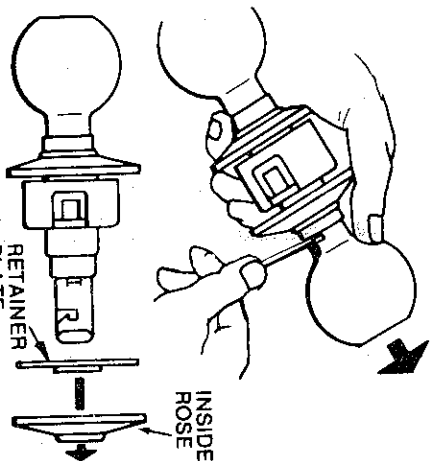


REMOVE ROSE AND RETAINER PLATE

C


ADJUST FOR DOOR THICKNESS
ROTATE OUTSIDE ROSE IN OR OUT DEPENDING ON DOOR THICKNESS. LOCK WILL FIT ANY DOOR FROM 1 1/8" TO 1 3/4".

1/8" GAP FOR 1-3/8" DOORS
1/4" GAP FOR 1-3/4" DOORS

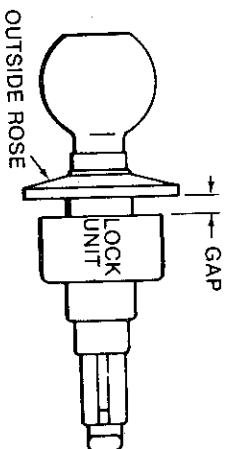


D

INSTALL LOCK UNIT
LOCK UNIT HOUSING MUST ENGAGE LATCH UNIT PRONGS AND RETRACTOR. LATCH UNIT MUST ENGAGE LATCH TAILPIECE. NOTE: IF GUARD BOLT FUNCTION IS INSTALLED, DO NOT ATTEMPT TO MOUNT LOCK UNIT WHEN DOOR IS CLOSED. GUARD BOLT TAILPIECE WILL INTERFERE. NOTE: DEPRESS LATCH BOLT SLIGHTLY TO ALLOW RETRACTOR TO ENGAGE LATCH TAILPIECE.

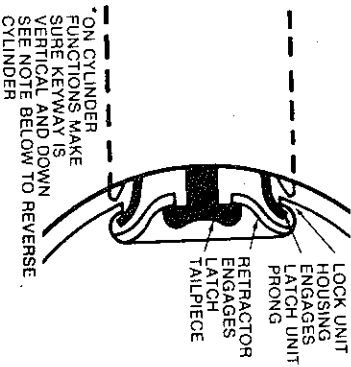


E

ATTACH INSIDE ROSE
SNAP ON ROSE; SLIP ON RETAINER PLATE AND FASTEN WITH TWO MACHINE SCREWS. POSITION SPRING CLIP NOTCH AND SNAP ROSE OVER RETAINER PLATE.

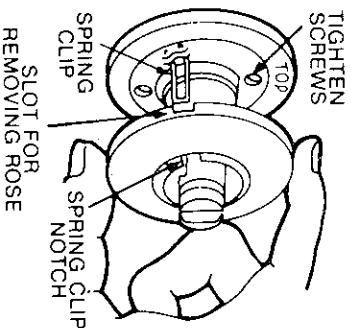

F


REPLACE INSIDE KNOB
LINE UP SLOT IN SHANK WITH KNOB CATCH IN SPINDLE. SLIDE KNOB ON TO SPINDLE. DEPRESS KNOB CATCH AND PUSH KNOB INTO ENGAGED POSITION.

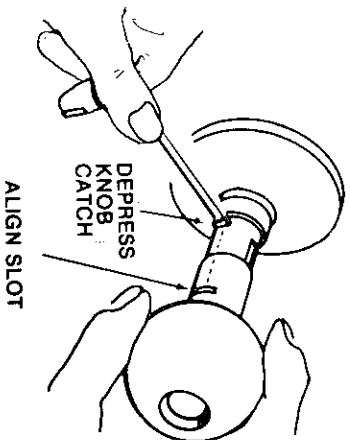

NOTE: WHEN A CYLINDER FUNCTION LOCK IS CORRECTLY INSTALLED, THE KEY SHOULD ENTER IN THIS POSITION.




- IF NOT, REVERSE CYLINDER AS FOLLOWS:**
1. WITH OUTSIDE KNOB UNLOCKED, INSERT KEY INTO CYLINDER. ROTATE KEY 1/4 TURN COUNTERCLOCKWISE.
 2. PRESS KEY WRENCH INTO HOLE IN SLEEVE AND PULL OUT KNOB UNTIL SLOT AT TOP OF SPINDLE IS VISIBLE.
 3. USING KNOB, TURN CYLINDER 180° (SO THAT KEYWAY IS VERTICAL AND DOWN) THEN PUSH KNOB BACK UNTIL IT HITS KNOB CATCH (WIGGLE KEY SLIGHTLY IF NECESSARY).
 4. ROTATE KEY 1/4 TURN COUNTERCLOCKWISE. DEPRESS KNOB CATCH AND PUSH KNOB UNTIL CATCH CLICKS INTO POSITION.

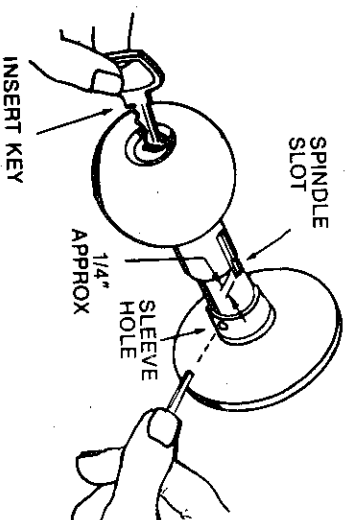

SEE REVERSE SIDE FOR CYLINDER KNOB REASSEMBLY

CYLINDER REASSEMBLY

WHEN THE CYLINDER HAS BEEN REMOVED COMPLETELY (AS FOR PURPOSES OF REKEYING) REASSEMBLE AS EXPLAINED IN THE REASSEMBLY INSTRUCTIONS

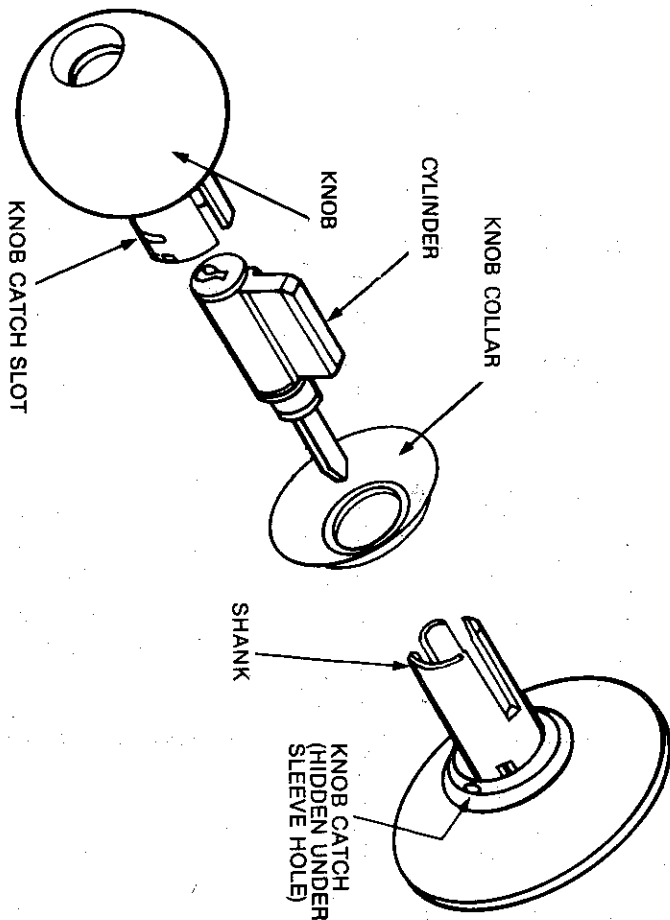

REASSEMBLY INSTRUCTIONS

1. ASSEMBLE CYLINDER INTO KNOB.
2. SLIP KNOB COLLAR OVER KNOB SHANK.
3. FULLY SEAT KNOB COLLAR AGAINST BACK OF KNOB.
4. INSERT KEY COMPLETELY INTO CYLINDER (FOR 37 FUNCTION SEE LINE #5, FOR 04 & 05 FUNCTIONS SEE LINE #6)
5. CHECK THAT THE SLOTTED MEMBER IN LOCK BODY WHICH ENGAGES CYLINDER TAIL PIECE HAS BEEN ROTATED CLOCKWISE COMPLETELY AND IS IN A HORIZONTAL POSITION PRIOR TO PUSHING KNOB ON TO SHANK.
6. PUSH KNOB ASSY. ON TO SHANK, (KEYWAY VERTICAL & DOWN) UNTIL IT HITS KNOB CATCH. (FOR 04, 05 & 37 FUNCTIONS SEE LINE #7)
7. ROTATE KEY COUNTERCLOCKWISE 1/4 TURN.
8. DEPRESS KNOB CATCH WITH KEY WRENCH, PUSH KNOB UNTIL KNOB CATCH "CLICKS" INTO POSITION.