



### **Installation Instructions**

- **1.** Check box contents. See other side for components.
- 2. After marking door inside face for device location (Device Instructions), transfer "Vertical Reference Centerline" from inside to outside door face.

  Follow steps 2a and 2b below.




2a. MEASURE INSIDE LINE LOCATION.



TO OUTSIDE FACE.

- **3.** Transfer "Horizontal Reference Centerline" from inside to outside door face.
- 4. Align trim template and tape to outside door face.
  CAUTION: Office copiers and facsimile machines may change the size of a drawing and make the template inaccurate to use as a door marker. If this is not the original template packed with the trim, use only the dimensions written on the template to locate the holes on the door (do not use the template as a door marker).
- **5.** Spot holes and prepare door for trim.
- 6. Mount trim to door thru holes "B". Fasten, finger tight only, with 3 screws and washers seating on door, as shown in Figure 1. Bottom screw and washer engages lower post on null
- **7.** Continue as shown in device instructions.

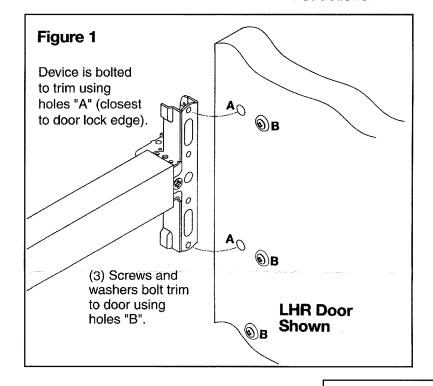




#### **ASSA ABLOY**


#### TH950 Heavy Duty Thumbpiece Trim Installation Instructions

For use with ED5000 Series Exit Device (Metal, Wood or Composite Doors)

FM258 10/07 (617417701)

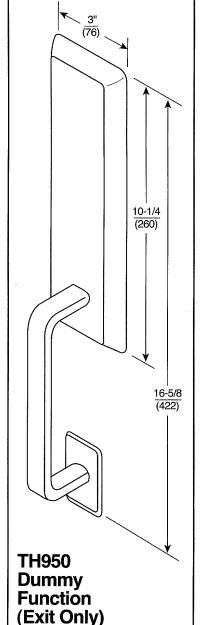

## **Trim Components**

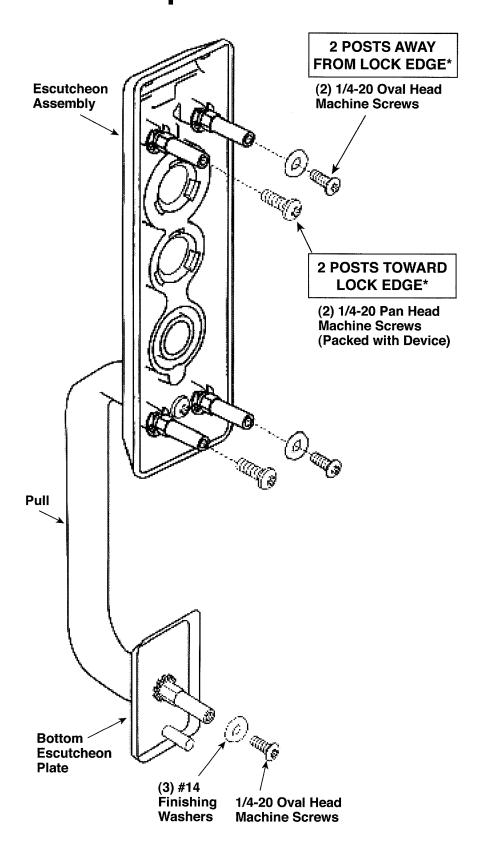

\*Shown for LHR Door



In U.S.: Corbin Russwin, Inc. 225 Episcopal Road Berlin, CT 06037-4004 www.corbinrusswin.com

Technical Product Support: Phone: 888-607-5703 Fax: 800-659-7293

In Canada: Yale-Corbin Canada LTD 6940 Edwards Boulevard Mississauga, ONT, L5T 2W2 www.yalecorbin.on.ca

# TH950 Heavy Duty Thumbpiece Trim Installation Instructions

For use with ED5000 Series Exit Device (Metal, Wood or Composite Doors)

FM258 10/07 (617417701)