
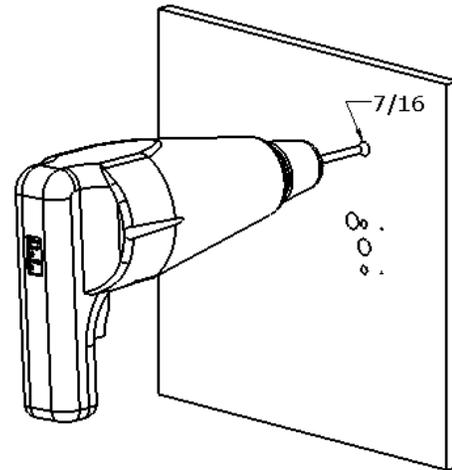


HES K100 Aperio® Series Wireless Cabinet Lock V2 To V3 Retrofit Preparation.



Experience a safer
and more open world

Note: This instruction is intended to cover the modifications required to retrofit a V3 K100 on a V2 opening. Reference installation instructions (3080006.016) for additional installation steps.

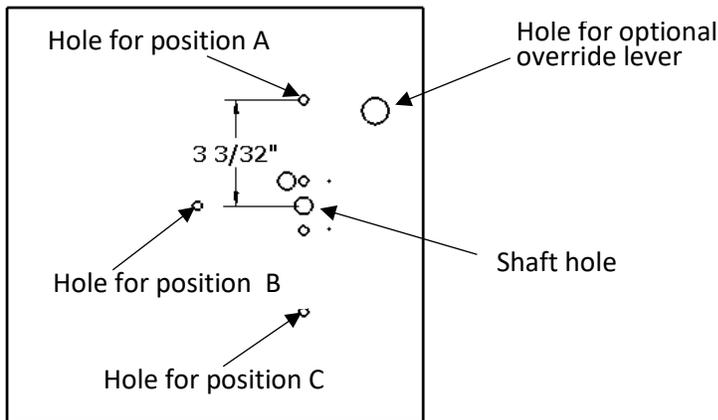

1. Verify the following installation hole pattern present on the door.

2. Increase the size of the current reader preparation top hole (A,B or C) to 7/16"

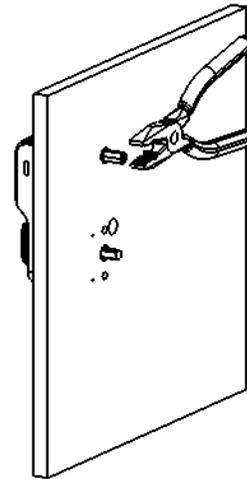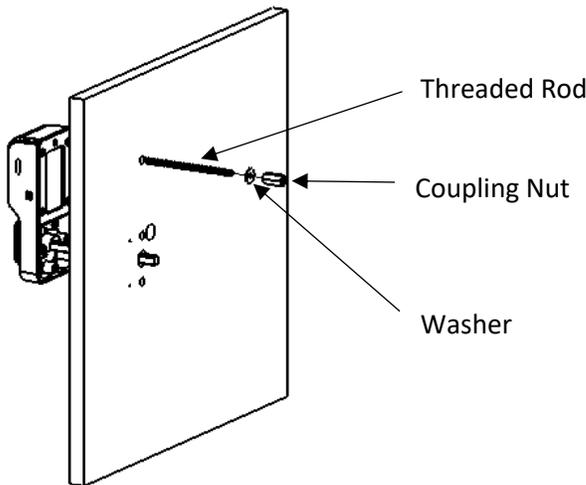

3. Add threadlock to threaded rod and align reader in the same position as step 1 and 2.

4. Secure reader to cabinet/drawer using the cut threaded rod, the .812 OD washer and coupling nut provided in the hardware pack. Do not overtighten.