



Mark center of door thickness for 1" (25mm) or 7/8" (22mm) hole, depending on latch housing diameter

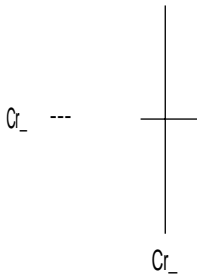

INSTALLATION TEMPLATE

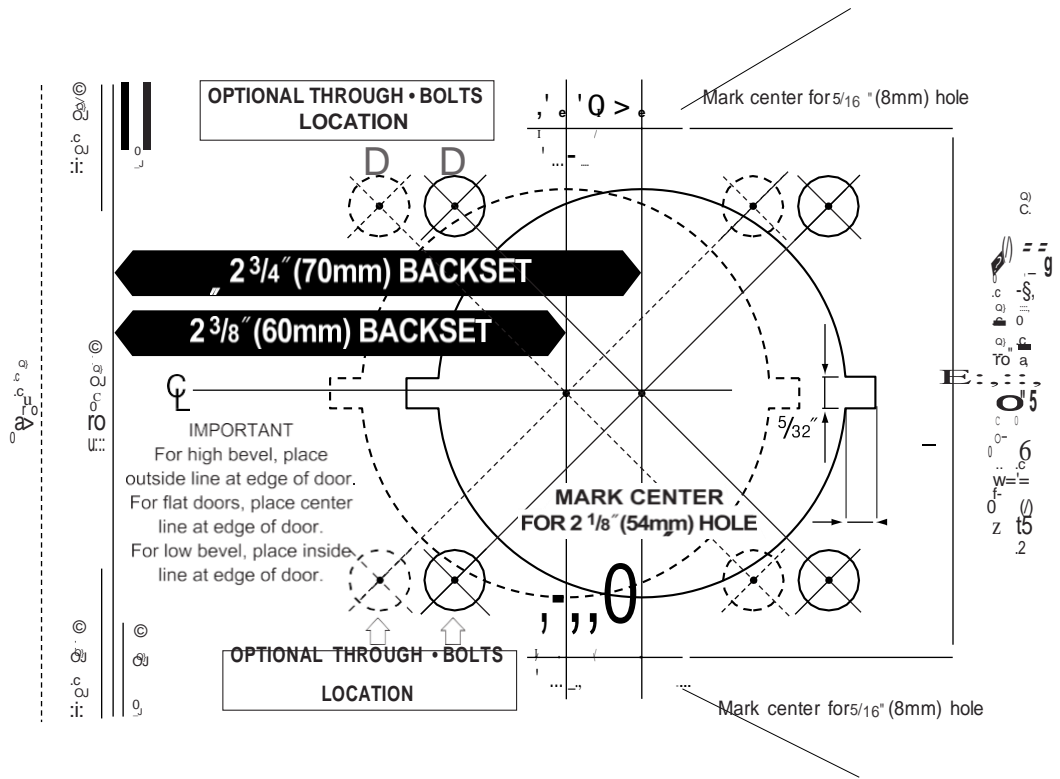

IMPORTANT
 For high bevel, place outside line at edge of door.
 For flat doors, place center line at edge of door.
 For low bevel, place inside line at edge of door.

2
 15
 5
 9