



- Notes**
1. Allow plus tolerance for clearance per ANSI A115.2.
 2. Lock and latch case support by door manufacturer.
 3. Plaster guard by door manufacturer.
 4. Prepare for a #8-32 screw.
 5. Prepare for a #12-24 screw.
 6. When a strike box is used, 9/64"
 7. For 93KW locks, use the KD303 drill jig to ensure that through-bolts and levers are properly aligned.


8. For all electrified products that require concealed wiring, a 3/8" diameter raceway through the door is required.
9. Extend the latch bore to provide room for TCM connections. (1" dia x 3" deep)
10. For 3-3/4" and 5" backsets, position the vertical centerline of the lock appropriately.

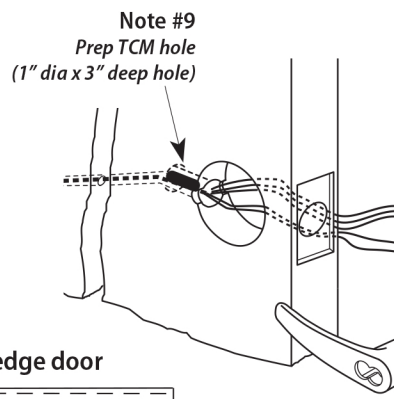

Title		Installation Specifications for		BEST ACCESS SYSTEMS	
Series	83KW, 93KW	Backset	2 3/4"	Rev date	10/2015
Functions	DEU, DEL	Strike	Large ANSI strike (S3)	Template number	W21
Door thickness	1 3/4"-2 1/4"	Rev	E		

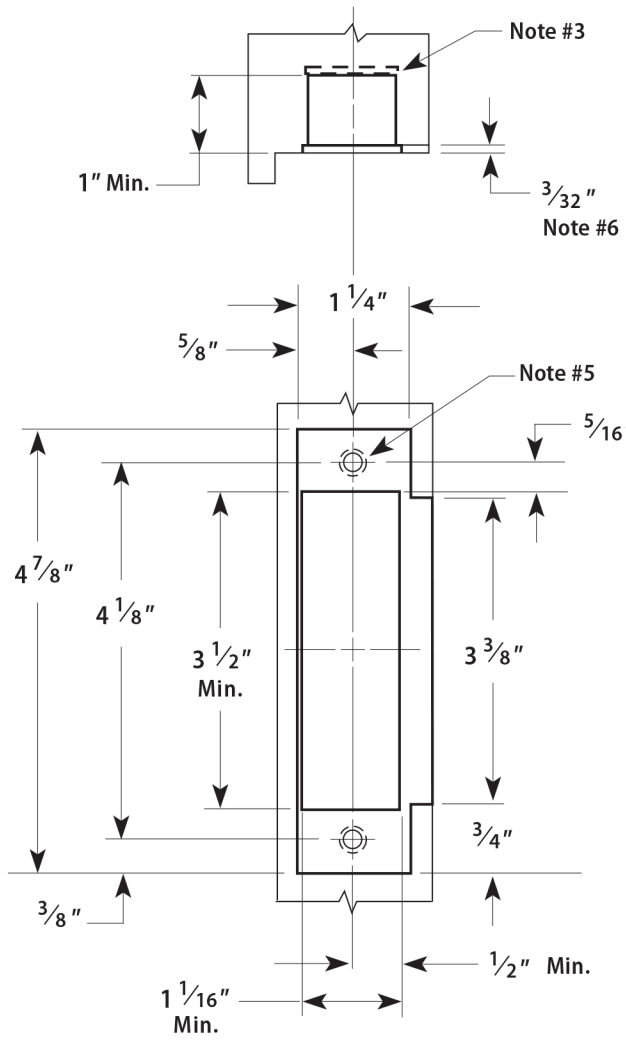

Frame Preparation

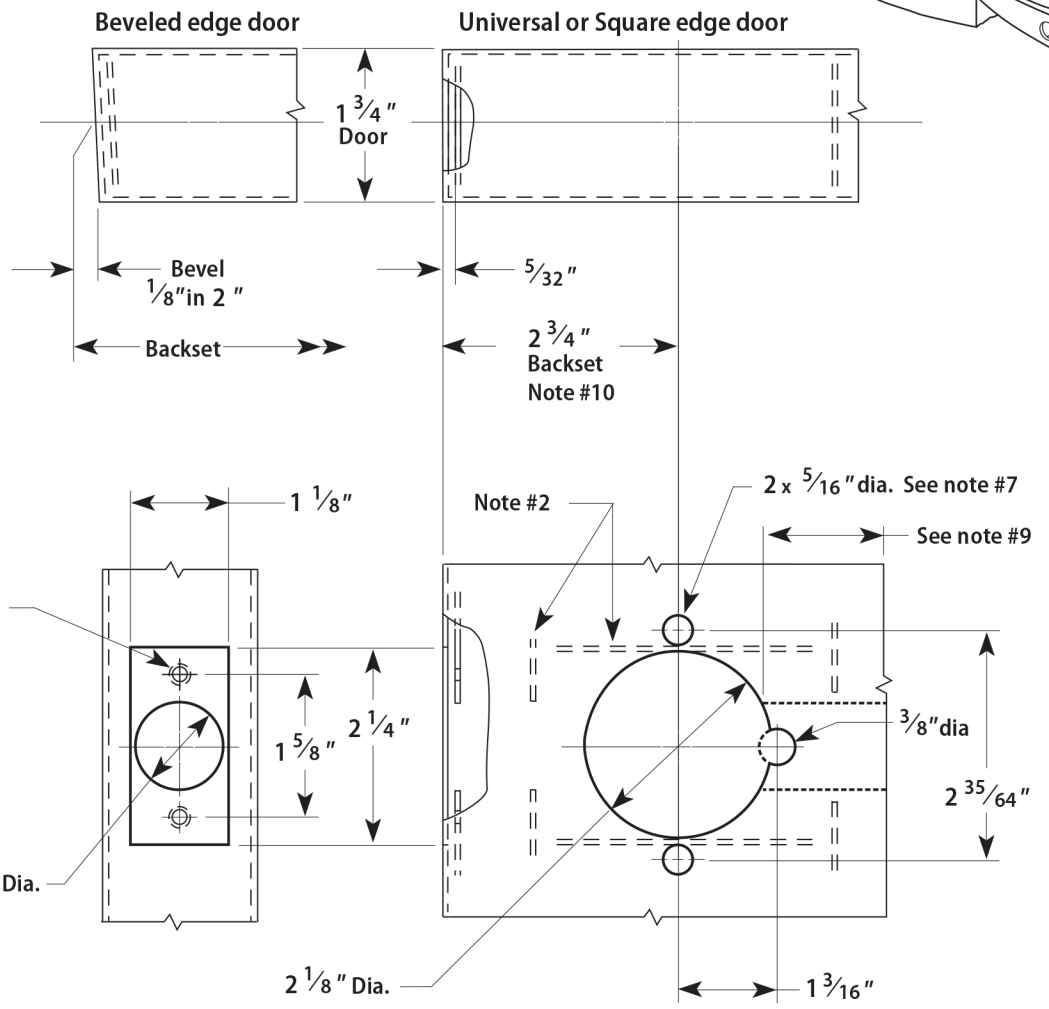

2 3/4" Backset Door Preparation