

# ED900

Low Energy Swing Door Operator  
(Fine cover)  
Single door

## Installation Instructions

08125310 – 02-2020

| EN |

dormakaba 

# Table of contents

<b>Table of contents</b>	<b>2</b>	<b>12</b>	<b>ED900 installation overview</b>	<b>27</b>
<b>1 General information</b>	<b>4</b>	12.1	Installation preparation	27
1.1 General information	4	<b>13</b>	<b>ED900 installation templates</b>	<b>28</b>
1.2 ED900 Arm configurations	4	13.2	Installation templates – pull arm	28
<b>2 Product description</b>	<b>5</b>	13.3	Installation templates – pull as push	31
2.1 Product description	5	13.4	Installation templates – push arm	32
2.2 Handing of door	5	<b>14</b>	<b>ED900 operator and mounting plate preparation</b>	<b>34</b>
<b>3 Safety information</b>	<b>6</b>	14.1	Remove mounting plate from ED900 operator	34
<b>4 ED900 Product overview</b>	<b>7</b>	14.2	Options – Customer 115 Vac connection to terminal blocks	36
4.1 ED900 push arm system	7	<b>15</b>	<b>ED900 mounting plate and operator installation</b>	<b>38</b>
4.2 ED900 pull arm system	7	15.1	Mounting plate attachment to jamb or wall	38
4.3 ED900 operator RH door configurations	8	15.2	Connect customer 115 Vac to ED900 mounting plate terminal block	39
4.4 ED900 operator LH door configurations	9	15.3	Route accessory wiring to mounting plate	39
4.5 ED900 operator full length cover options	10	15.4	Remove protective film strips from operator	40
4.6 ED900 operator component views	11	15.5	Install ED900 operator onto mounting plate	40
<b>5 ED900 hardware – double door</b>	<b>12</b>	15.6	Full width cover (option) installation instructions	41
5.1 ED900 operator and mounting plate	12	<b>16</b>	<b>J/Push arm installation</b>	<b>43</b>
5.2 Door decal kit, low energy	12	16.1	Push arm installation templates	43
5.4 Arm assemblies	13	16.2	Push arm installation	43
5.5 Axle extension sleeves and extensions	13	<b>17</b>	<b>Arm with track mount installation</b>	<b>46</b>
5.6 ED900 mounting plate screw kit	14	17.1	Arm with track installation	46
5.7 ED900 arm mounting screw kits	14	17.2	Splined arm and track assemblies	46
5.8 ED900 standard cover kit	14	17.3	Splined arm and track hardware	46
5.9 ED900 full width cover kit – option	15	17.4	Slide shoe assembly	47
5.10 Key switch panels – option	16	17.5	Install hardware into track	47
5.11 Push arm door stop - option	16	17.6	Fasten track assembly to door	48
5.12 Conduit box and wiring kit – options	17	17.7	Arm assembly	49
<b>6 Technical data</b>	<b>18</b>	17.8	Arm assembly with CPD lever	49
6.1 ED900 Technical data	18	17.9	Fasten arm to ED900 operator	50
6.2 Operating specifications	19			
<b>7 Operational mode overview</b>	<b>19</b>			
7.1 ED900 door closer modes	19			
7.2 Low energy product	19			
<b>8 User interface</b>	<b>20</b>			
8.1 Overview	20			
8.2 4 button keypad and display	20			
8.3 Program and Exit Only switches	21			
8.4 Operator status LEDs	21			
<b>9 System accessories</b>	<b>22</b>			
9.1 System accessory electrical connections	22			
9.2 System accessories	22			
9.3 ED900 terminal board interfaces	23			
<b>10 ED900 door signage</b>	<b>24</b>			
10.1 Low energy operator	24			
10.2 Door signage, low energy single swing door	24			
10.3 Safety Information label, low energy swing doors	25			
<b>11 Recommended tools and torque chart</b>	<b>26</b>			
11.1 Recommended tools	26			
11.2 Standard tightening torque	26			
11.3 Drill bits	26			

<b>18</b>	<b>Measure door width, reveal depth</b>	<b>52</b>	<b>30</b>	<b>ANSI/BHMA standards</b>	<b>70</b>
18.1	Door width parameter Tb	52	30.1	A156.19 Low energy power operated doors	70
18.2	Record door width measurement, Tb value	52	<b>31</b>	<b>Upgrade cards</b>	<b>72</b>
18.3	Tb parameter values	52	31.1	Upgrade cards	72
18.3	Reveal depth parameter rd	53	31.2	Container module	72
18.4	Measure and record reveal depth	53	31.3	Installing upgrade cards	73
18.5	rd parameter values	53	<b>32</b>	<b>Maintenance</b>	<b>74</b>
<b>19</b>	<b>Operator spring tension</b>	<b>54</b>	32.1	Safety label, low energy swing doors	74
19.1	Set ED900 operator spring tension	54	32.2	ED900 environment and cleaning	75
<b>20</b>	<b>Braking circuit plug</b>	<b>55</b>	32.3	Yellow LED, service level	75
20.1	Braking circuit plug position	55	32.4	Pull arm maintenance	76
<b>21</b>	<b>Power fail closing speed</b>	<b>56</b>	32.5	Arm fasteners – torque requirements	77
21.1	Set power fail closing speed	56	32.6	Push arm maintenance	78
<b>22</b>	<b>Parameters</b>	<b>57</b>	32.7	ED900 brake maintenance	79
22.1	Parameters	57	<b>Appendix A – Driving parameters – detail</b>	<b>81</b>	
<b>23</b>	<b>Single door first commissioning</b>	<b>60</b>	A.1	Driving parameters detail	81
23.1	First commissioning	60	<b>Appendix B – Troubleshooting</b>	<b>90</b>	
23.2	Set configuration parameters	61	B.2	Red LED status codes	91
23.3	Set parameter PS, program switch type	62	B.3	Troubleshooting chart, "In" codes	92
23.4	Perform learning cycle	63	B.4	Troubleshooting chart, "E" codes	93
<b>25</b>	<b>Connect accessory wiring and test</b>	<b>64</b>	<b>Appendix C – dormakaba handheld</b>	<b>95</b>	
25.1	Install accessory wiring	64	C.1	dormakaba handheld terminal	95
25.2	Test all accessories	64	C.2	dormakaba handheld; configuration parameters	96
<b>26</b>	<b>Set track bumper stop</b>	<b>65</b>	C.3	dormakaba handheld; driving parameters	97
26.1	Set track bumper stop position	65	C.4	dormakaba handheld; special functions (Upgrade cards) ED900	98
<b>27</b>	<b>Install push arm door stop</b>	<b>66</b>	C.5	dormakaba handheld; diagnostics	99
27.1	Install push arm door stop (optional assembly)	66	C.6	New dormakaba handheld; language change to English	101
<b>28</b>	<b>Install ED900 cover, end caps and spindle caps</b>	<b>67</b>	C.7	dormakaba handheld; firmware update	102
28.1	Install cover and end caps	67	<b>Appendix D - Wiring diagrams</b>	<b>104</b>	
28.2	Optional full length cover	68	D1.1	Key Switch Panel with RJ45 connector	104
28.3	Install spindle caps	69	D2.1	Key Switch Panel	105
<b>29</b>	<b>Install door signage</b>	<b>69</b>			
29.1	Install door signage	69			

# 1 General information

## 1.1 General information

### 1.1.1 Installation Instructions

This manual provides installation instructions for ED900 low energy swing door operators used in single door installations.

### 1.1.2 Manual storage

This document must be kept in a secure place, and accessible for reference as required.

If the door system should be transferred to another facility, insure that this document is transferred as well.

### 1.1.3 dormakaba.com website

Manuals are available for review, download, and printing on the [dormakaba.com/us](http://dormakaba.com/us) website.

### 1.1.4 Dimensions

Unless otherwise specified, all dimensions are given in inches (").

### 1.1.5 Building codes and standards

ED900 installation: observe applicable national and local building codes.

### 1.1.6 Symbols used in these instructions.



#### WARNING

This symbol warns of hazards which could result in personal injury or threat to health.

#### CAUTION

This symbol warns of a potentially unsafe procedure or situation.

#### NOTICE

Draws attention to important information presented in this document.



#### TIPS AND RECOMMENDATIONS

Clarifies instructions or other information presented in this document.

## 1.2 ED900 Arm configurations

### 1.2.1 Arm configurations.

ED900 is suitable for installation using the following arm configurations:

- **J8** – Standard push arm, 0 - 8" reveal
- **J12** – Deep reveal push arm, 8" - 12" reveal
- **T** – Arm and track, 0 - 1" reveal
- **T275** – Deep reveal arm and track, 1" - 2 3/4" reveal

# 2 Product description

## 2.1 Product description

### 2.1.1 Intended use.

The ED900 is a low energy electromechanical operator used exclusively for opening and closing interior swing doors.

The ED900 operator must be installed on an interior building surface.


### 2.1.3 ED900 maximum door specifications.

Reference Para. 6.2, Operating specifications.

### 2.1.4 Hardware as shipped, single swing door.

Reference Chapter 5 for ED900 hardware overview.

Fig. 2.1.1 ED900 operator

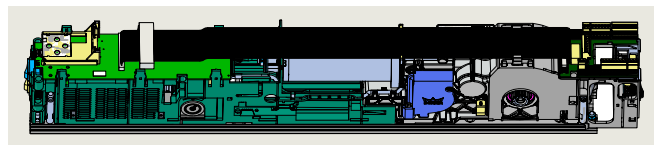

### 2.1.2 Low energy operator.

ED900 is supplied only as a low energy operator.

- The operator is supplied with a reduced power motor and a brake (Para. 4.6 - component view).
- The brake is used during door hold open time.



#### WARNING

To reduce risk of injury to persons, use this ED900 operator only with a swing door for which the ED900 is designed for.

- Reference Chapter 6, Technical data.




#### TIPS AND RECOMMENDATIONS

Insure operator door configuration is qualified for use on the respective smoke or fire rated door.

## 2.2 Handing of door

### 2.2.1 Handing of door.

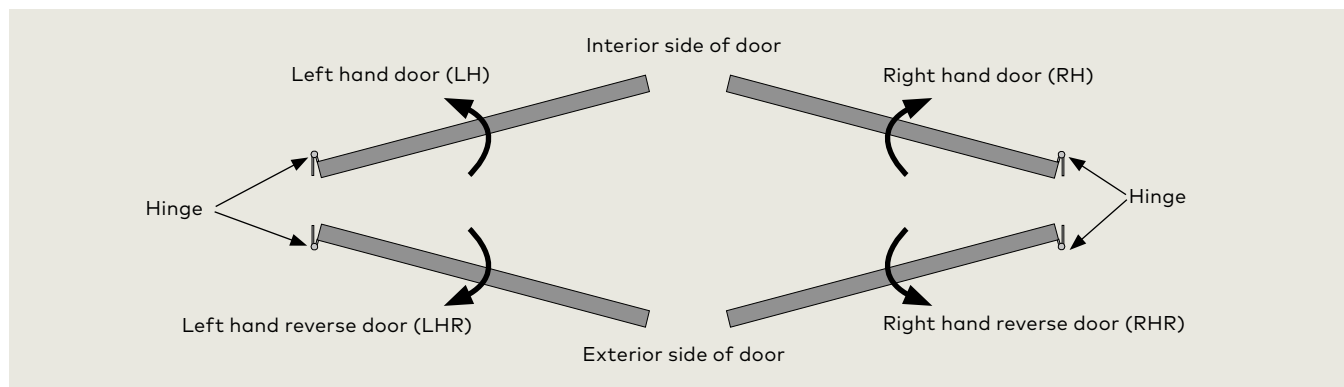

# 3 Safety information

## 3.1 Safety instructions.

This document contains important instructions for installation of the ED900 swing door operator. Review these instructions thoroughly prior to installation, and follow them carefully during installation, commissioning, troubleshooting and maintenance.

## 3.2 Door signage requirements.

Proper signs and labels, per ANSI/BHMA A156.19 Standard for Power Assist and Low Energy Power Operated Doors, shall be applied and maintained on the door controlled by the ED900 swing door operator.

- Reference Chapter 10, ED900 Door Signage.

## 3.3 Safety warnings.



### WARNING

An incorrect installation may result in damage to equipment or incorrect equipment operation.



### WARNING

Hazard to mechanical processes by use of control settings, elements, or procedures not documented in this manual!



### WARNING

Electric shock hazard!  
By use of control elements, settings, or procedures not documented in this manual!



### WARNING

Work on electrical equipment and 115 Vac wiring installation must be only be performed by qualified personnel!



### WARNING

Metallic doors must be grounded per national and local codes!



### WARNING


Hand pinch point and crushing hazards at door closing edges!



### WARNING

Crushing hazards at door closing edges!

Fig. 3.1 Door closing edges

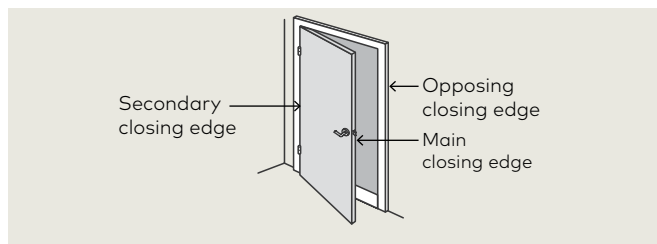

## 3.4 Residual hazards.



### WARNING

After installation, hazards such as minor crushing, impact with limited force, and risk to unsupervised children may exist depending on structural design of door area, type of door, and any safeguards that have been implemented.



### WARNING

Hand pinch point and crushing hazards at push arm and arm and track!

Fig. 3.2 Push arm


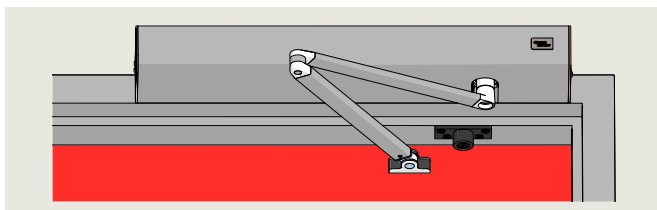


Fig. 3.3 Arm and track

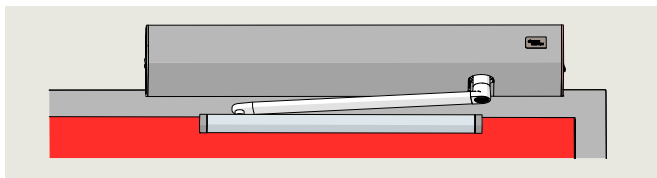


# 4 ED900 Product overview

## 4.1 ED900 push arm system

- 1 ED900 operator
- 2 J/pull arm assembly
- 3 Axle extension
- 4 Standard cover
- 5 End cap, program switch
- 6 End cap, power switch
- 7 Mounting plate
- 7.1 115 Vac terminal block
- 8 Spindle cap
- 9 Spindle cap


Fig. 4.1.1 ED900 RH push arm system example

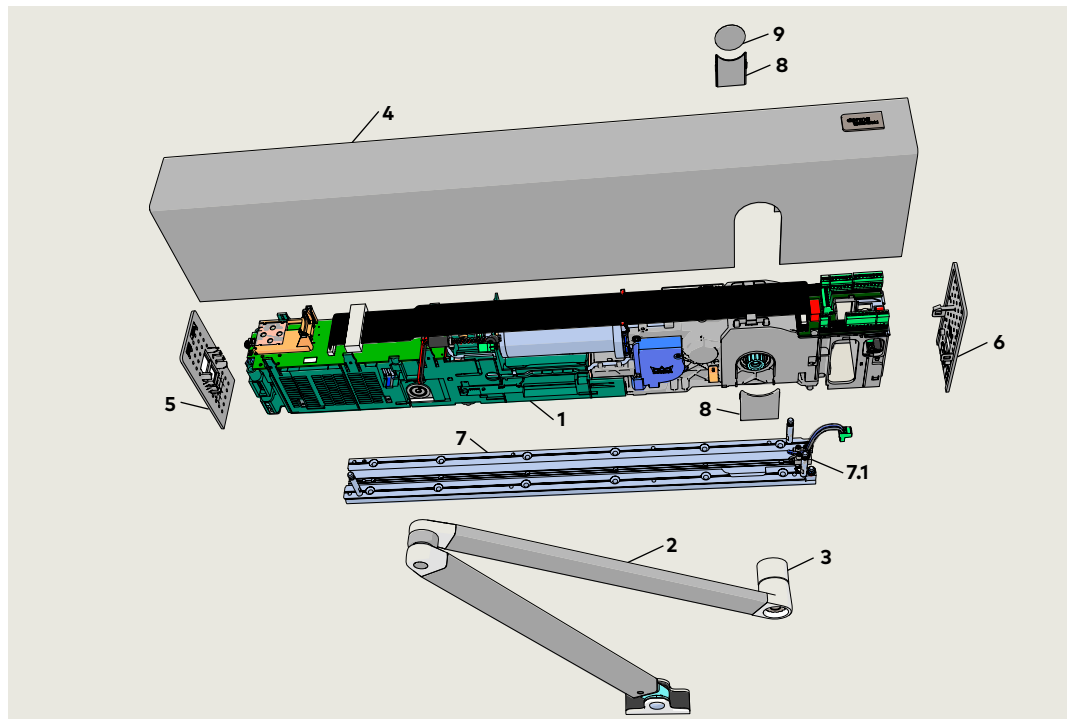

## 4.2 ED900 pull arm system

- 1 ED900 operator
- 2 T/track/arm assembly
- 3 Axle extension
- 4 Standard cover
- 5 End cap, program switch
- 6 End cap, power switch
- 7 Mounting plate
- 7.1 115 Vac terminal block
- 8 Spindle cap
- 9 Spindle cap

Fig. 4.2.1 ED900 RH pull arm system example

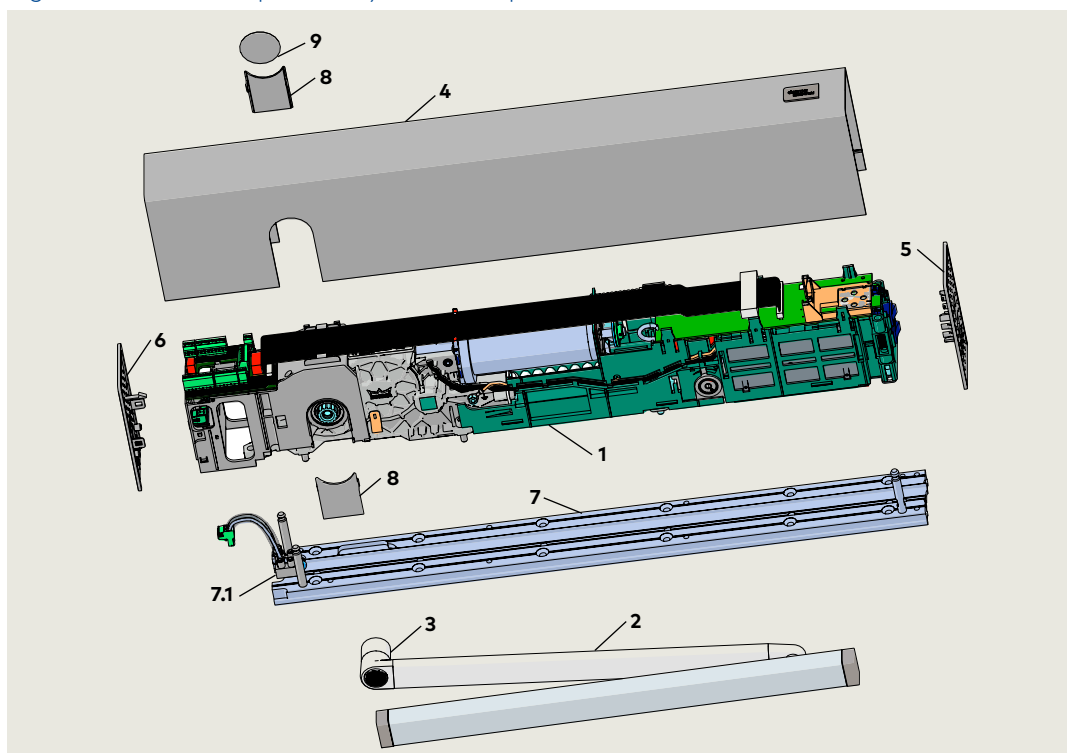

### 4.3 ED900 operator RH door configurations

Fig. 4.3.1 ED900 J8 – Top jamb installation – RH push

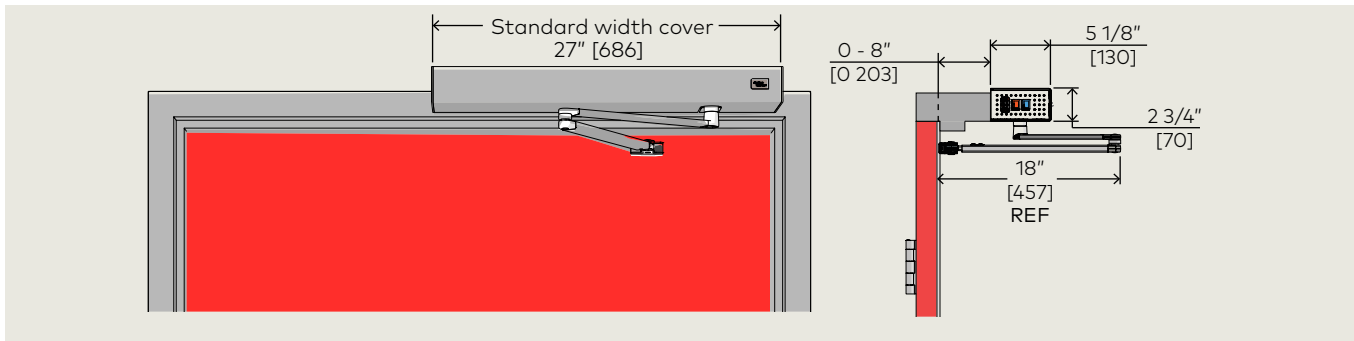


Fig. 4.3.3 ED900 J12 – Above jamb installation – RH push, deep reveal

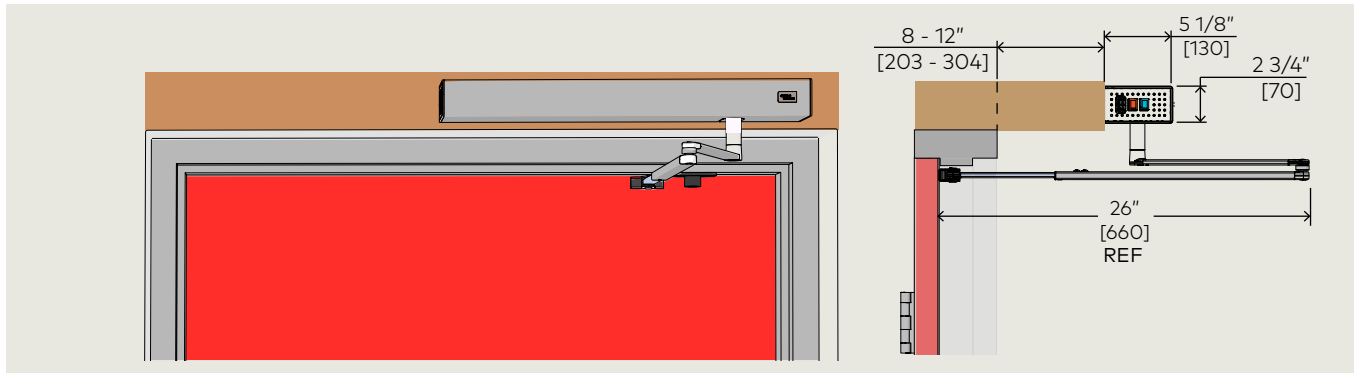


Fig. 4.3.2 ED900 T – Track mount installation – RH pull

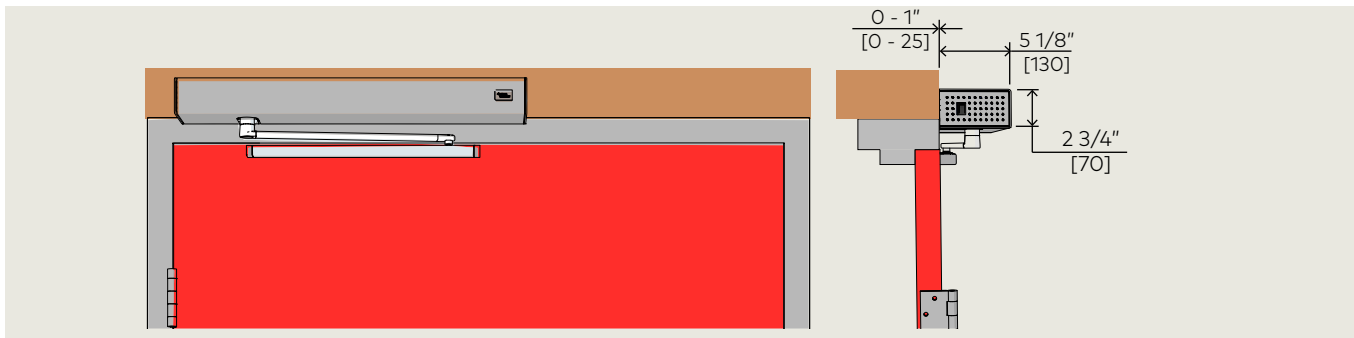


Fig. 4.3.4 ED900 T275 – Above jamb installation – RH pull, track mount, deep reveal


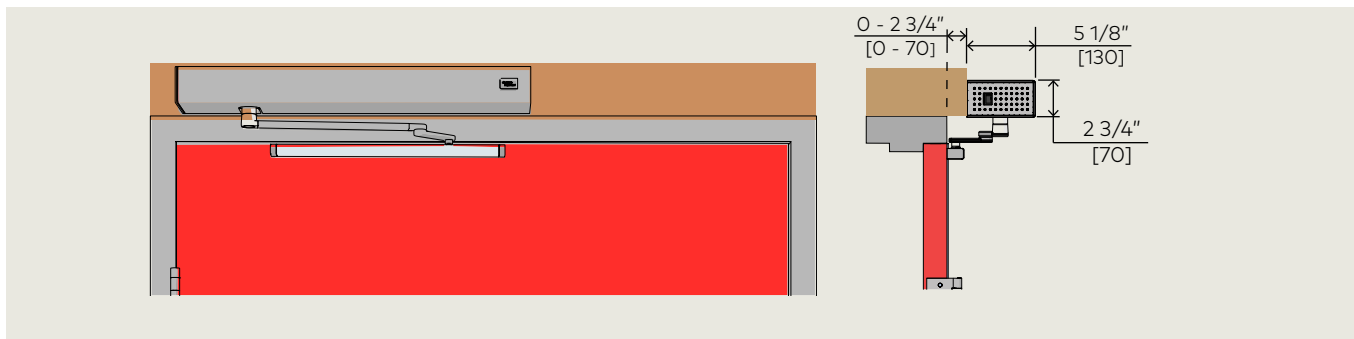




Fig. 4.3.5 ED900 T275 – Track mount installation – RH pull as a push

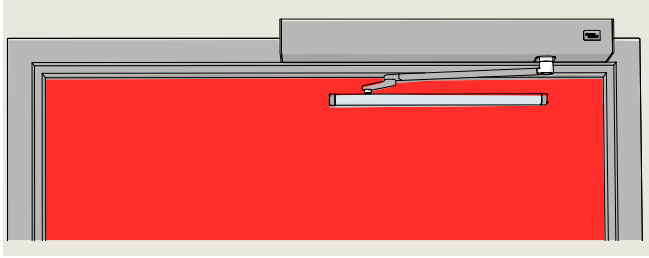

#### 4.4 ED900 operator LH door configurations

Fig. 4.4.1 ED900 J8 – Top jamb installation – LH push

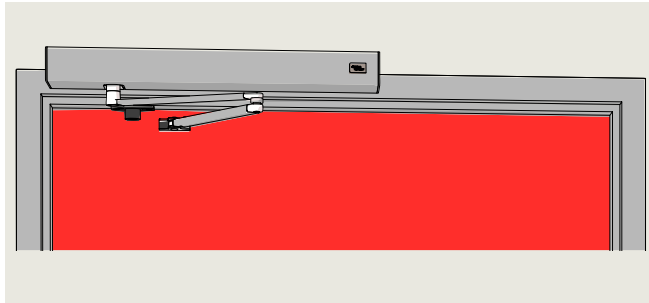


Fig. 4.4.3 ED900 T – Track mount installation – LH pull

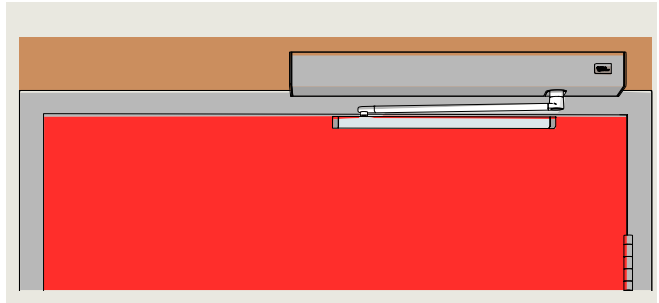


Fig. 4.4.2 ED900 J12 – Above jamb installation – LH push, deep reveal

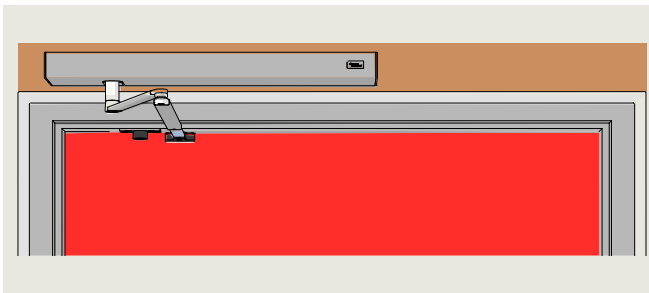


Fig. 4.4.4 ED900 T275 – Track mount installation – LH pull, deep reveal


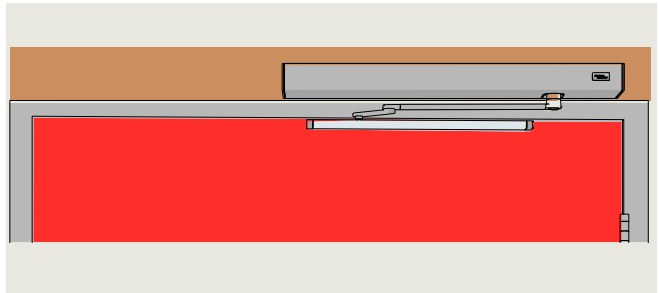


Fig. 4.4.5 ED900 T275 – Track mount installation – LH pull as a push

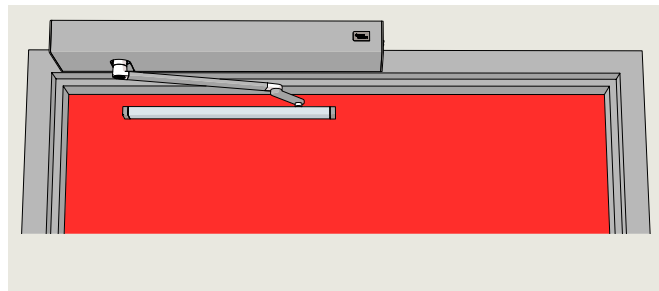

## 4.5 ED900 operator full length cover options

Fig. 4.5.1 T/ LH pull

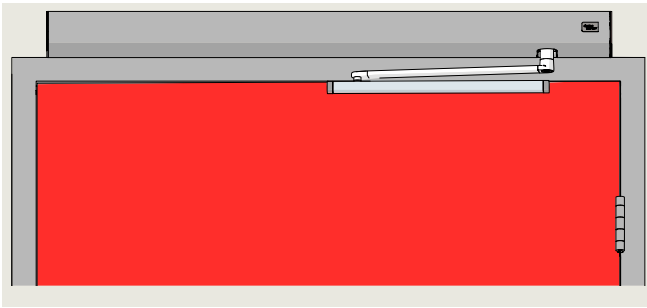


Fig. 4.5.6 J/ LH push

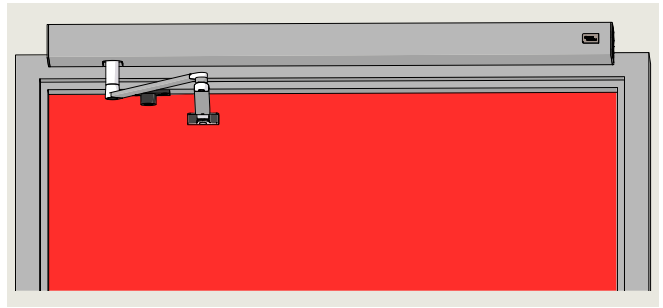


Fig. 4.5.2 T/RH pull

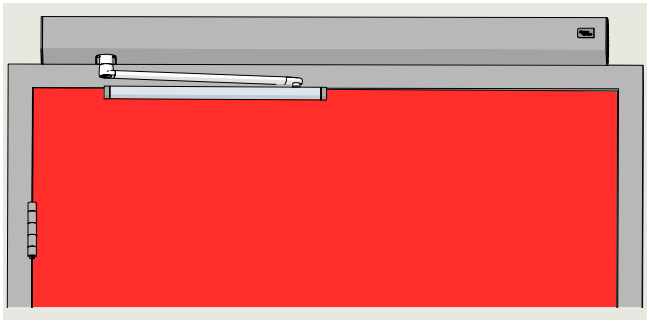


Fig. 4.5.7 J/ RH push

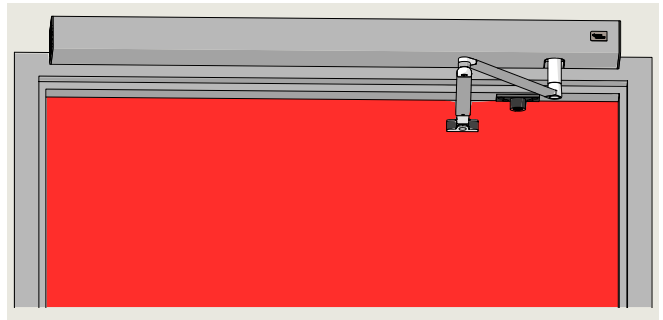


Fig. 4.5.3 T275/RH deep pull

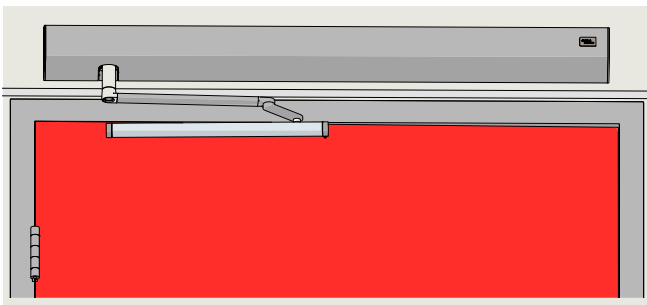


Fig. 4.5.8 J12/RH deep push

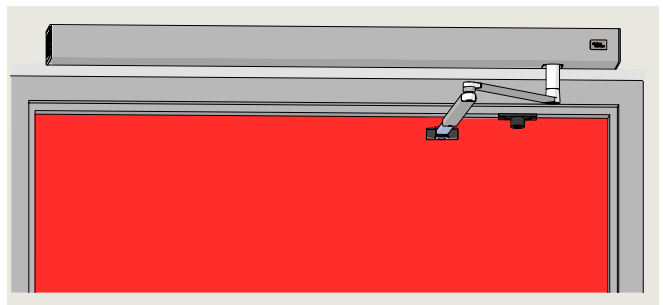


Fig. 4.5.4 T275/LH deep pull

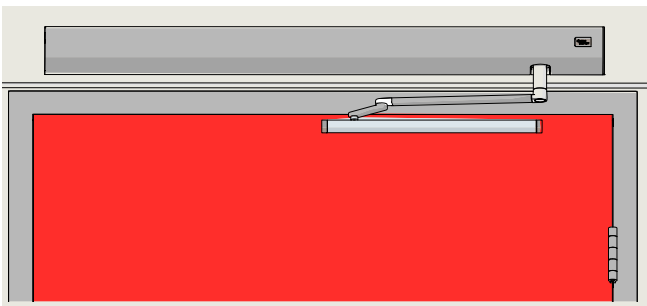


Fig. 4.5.9 J12/LH deep push

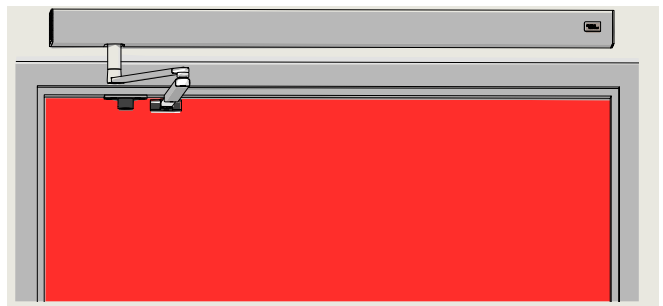


Fig. 4.5.5 T275/LH pull as push


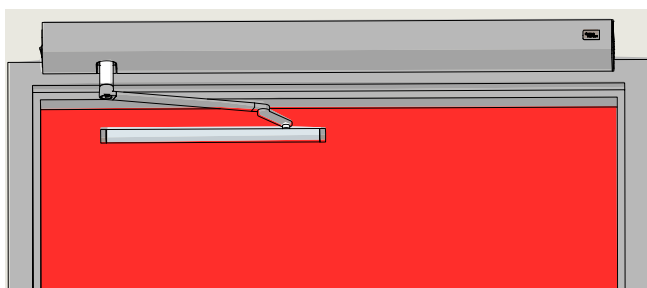


Fig. 4.5.10 T275/RH pull as push

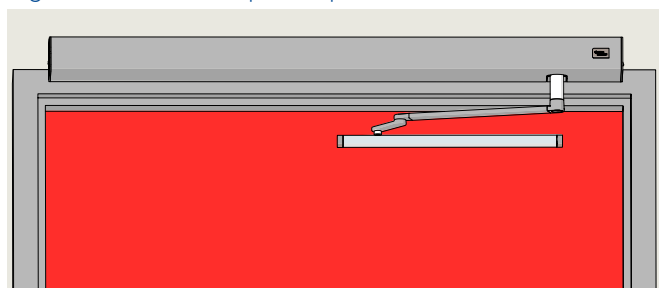

## 4.6 ED900 operator component views

Fig. 4.6.1 ED900 component view 1

- 1 Power switch
- 2 120 Vac cable
- 4 Splined shaft spindle
- 5 Operator (motor, gear, spring)
- 6 Spring tension adjustment, closing force
- 7 Program switches
- 8 4 button user interface
- 9 Information display
- 11 Potentiometer, power fail closing speed adjustment
- 12 Terminal jumper socket, push or pull mounting
- 15 RJ45 socket, double door operator synchronization
- 16 Com 1 service connector
- 17 Accessories terminal board
- 18 Mounting plate
- 19 Customer ground terminal
- 20 Guide pin
- 21 Ribbon cable
- 22 Ribbon cable socket
- 23 Upgrade card socket
- 24 Motor
- 25 Encoder socket and cable
- 26 Motor socket and cable
- 27 Control board
- 28 Motor brake

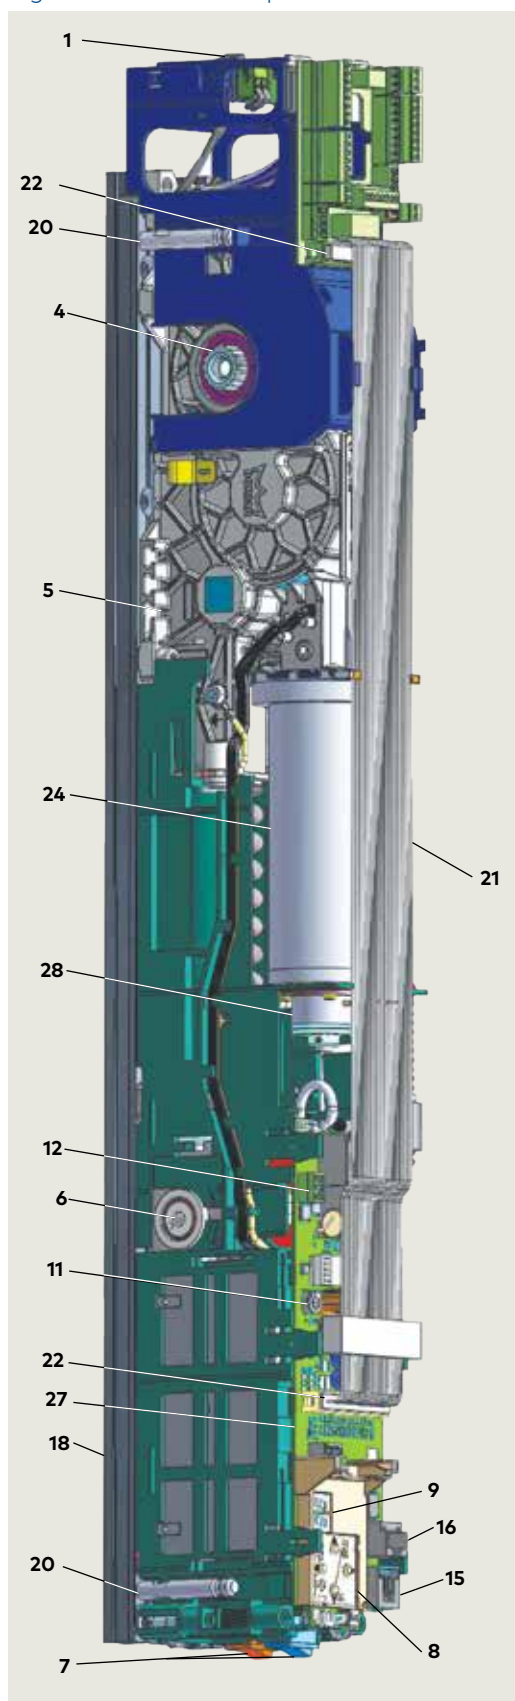


Fig. 4.6.2 ED900 component view 2



# 5 ED900 hardware – double door

## 5.1 ED900 operator and mounting plate

Fig. 5.1.1 Two - ED900 operator and mounting plate

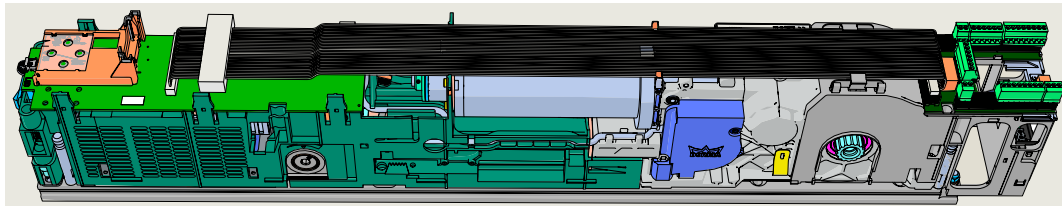


Fig. 5.1.2 Accessory terminals

- 1 Terminals for accessory wiring
  - 2 Bag containing terminals and third guide pin\*
  - 3 Guide pin
  - 4 5 mm T-handle hex key 08120720
- \* Included with operator


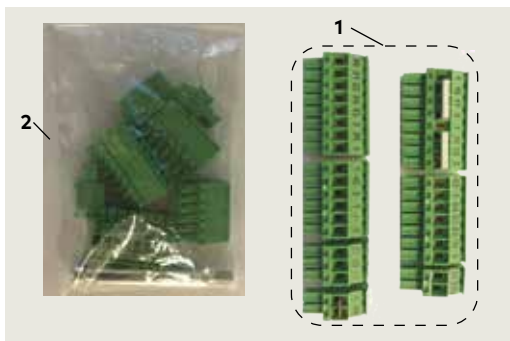



Fig. 5.1.3 5 mm T-handle hex key

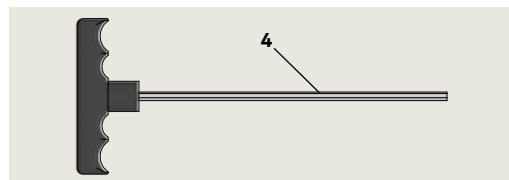

## 5.2 Door decal kit, low energy

Fig. 5.2.1 Decal kit, low energy 08087770

- 1 Decal, Automatic Caution door (both sides)
- 2 Decal, Activate Switch to Operate
- 3 Decal, Push to Operate
- 4 Decal, Pull to Operate
- 5 Decal, AAADM safety Information label, low energy

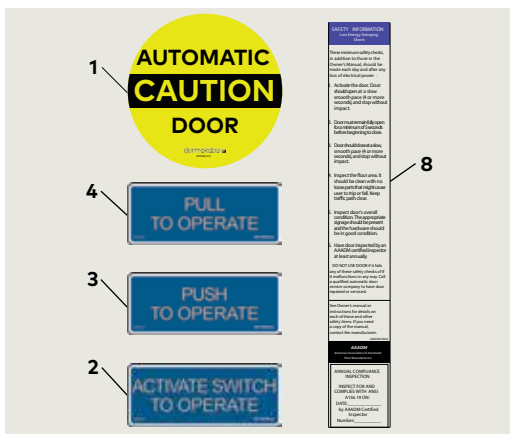

## 5.4 Arm assemblies

Fig. 5.4.1 J8 – Splined push arm assembly, 225 mm, 0 - 8" reveal

- 1 Drive arm
- 2.1 Adjustment shaft tube, 225 mm
- 2.2 Adjustment shaft, 225 mm
- 3 Shoe
- 4 Axle extension
- 5.1 Adjustment shaft tube, 450 mm
- 5.2 Adjustment shaft, 450 mm

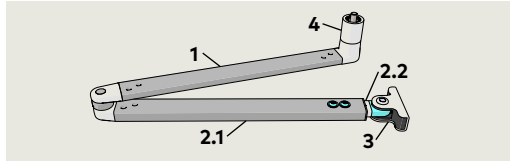


Fig. 5.4.2 J12 – Splined push arm assembly, 500 mm, 8" - 12" reveal

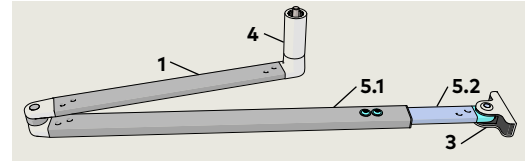


Fig. 5.4.3 T275 – Splined pull arm assembly, LH, 1 - 2 3/4" reveal

- 1 Drive arm
- 2 CPD lever
- 3 Track

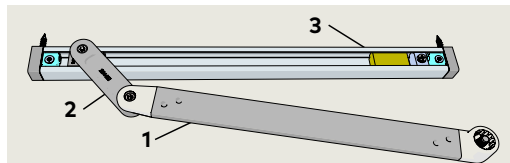


Fig. 5.4.5 T – Splined pull arm assembly, 0 - 1" reveal


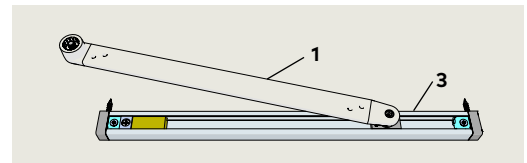


Fig. 5.4.4 T275 – Splined pull arm assembly, RH, 1 - 2 3/4" reveal

- 1 Drive arm
- 2 CPD lever
- 3 Track

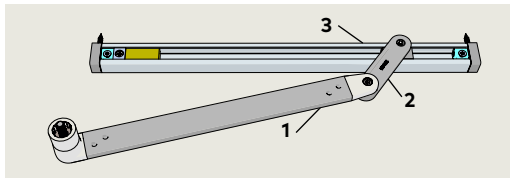

## 5.5 Axle extension sleeves and extensions

Fig. 5.5.1 [20 mm] 08125201

- 1 20 mm axle extension sleeve
- 1.1 20 mm axle extension
- 2 M8 -1.25 x 40 SHCS
- 3 30 mm axle extension sleeve
- 3.1 30 mm axle extension
- 4 M8 -1.25 x 50 SHCS
- 5 60 mm axle extension sleeve
- 5.1 60 mm axle extension sleeve
- 6 M8 -1.25 x 80 SHCS

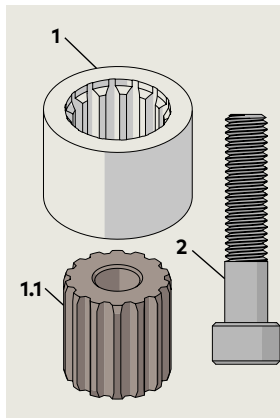


Fig. 5.5.2 [30 mm] 08125202


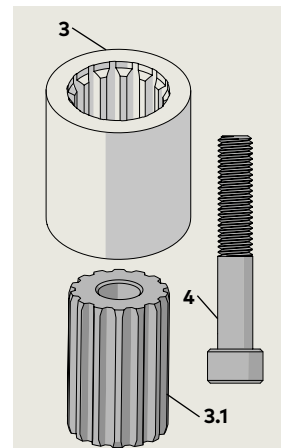


Fig. 5.5.3 [60 mm] 08125203

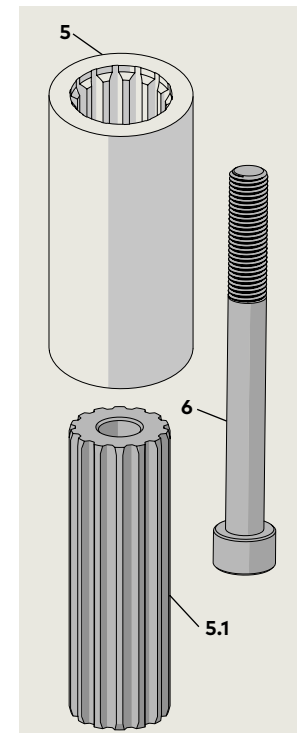


## 5.6 ED900 mounting plate screw kit

Fig. 5.6.1 Two sets - Mounting plate fasteners

**15,16 Mounting plate fastener kit**  
08120570

- 15** 1/4-20 x 1" FH machine screw
- 16** No. 14 x 2 1/2" FH wood screw

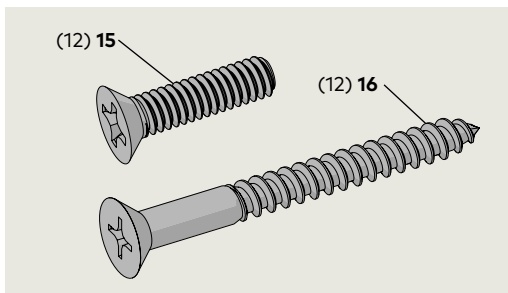

## 5.7 ED900 arm mounting screw kits

Fig. 5.7.1 Two sets -Push arm screw kit

**9** Push arm screw kit  
08120550

- 9.1** 10-24 x 1 1/2" barrel nut
- 9.2** 10-24 x 1" PPHMS
- 9.3** #14 x 1 1/4" pan head wood screw


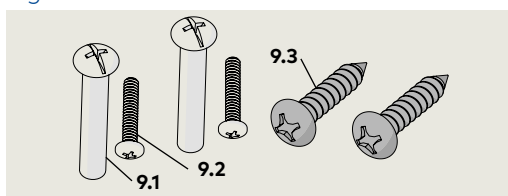


Fig. 5.7.2 Two sets -Pull arm screw kit

**10** Pull arm screw kit  
08122740

- 10.1** 10-24 x 1 1/2" barrel nut
- 10.2** 10-24 x 1 1/4" FHSCS (flat head socket screw)
- 10.3** #14 x 1 1/4" pan head wood screw

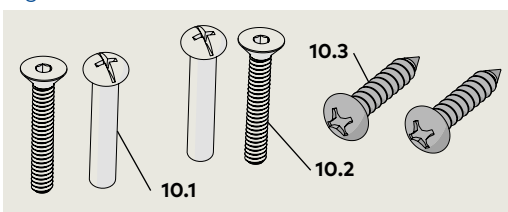

## 5.8 ED900 standard cover kit

Fig. 5.8.1 ED900 standard width 27" cover

- 3** Standard width cover



Fig. 5.8.2 ED900 operator end caps

- 2** End cap, program switches
- 3** End cap, power switch
- 4** Spindle cap
- 5** Spindle cap


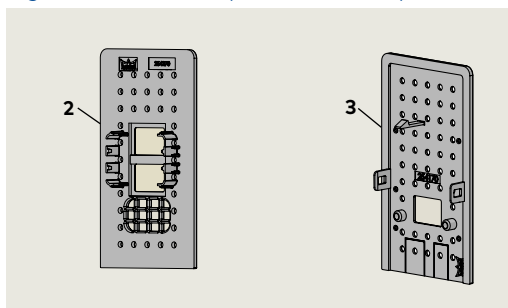


Fig. 5.8.3 Spindle cops

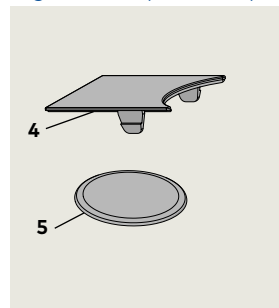


## 5.9 ED900 full width cover kit – option

### 5.9.1 Full width cover kit.

Single door, from 29" [737] to 48" [1219].

Fig. 5.9.1 Full width cover kit 08125259

- 1** Fine cover single  
08120350
- 3** End and spindle  
cap set  
08121260
- 3.1** Program switch  
end cap
- 3.2** Power switch end  
cap
- 3.3** Spindle cap
- 3.4** Spindle cap
- 4** Front cover  
extension  
08121870
- 5** Cover bracket  
08125240
- 8** dormakaba logo  
plate  
08125241
- 11** Program switches  
with cable  
08122770
- 14** Wire retainer  
08125242
- 15** 1/4-20 x 1" FH  
machine screw
- 16** No. 14 x 1 "FH wood  
screw

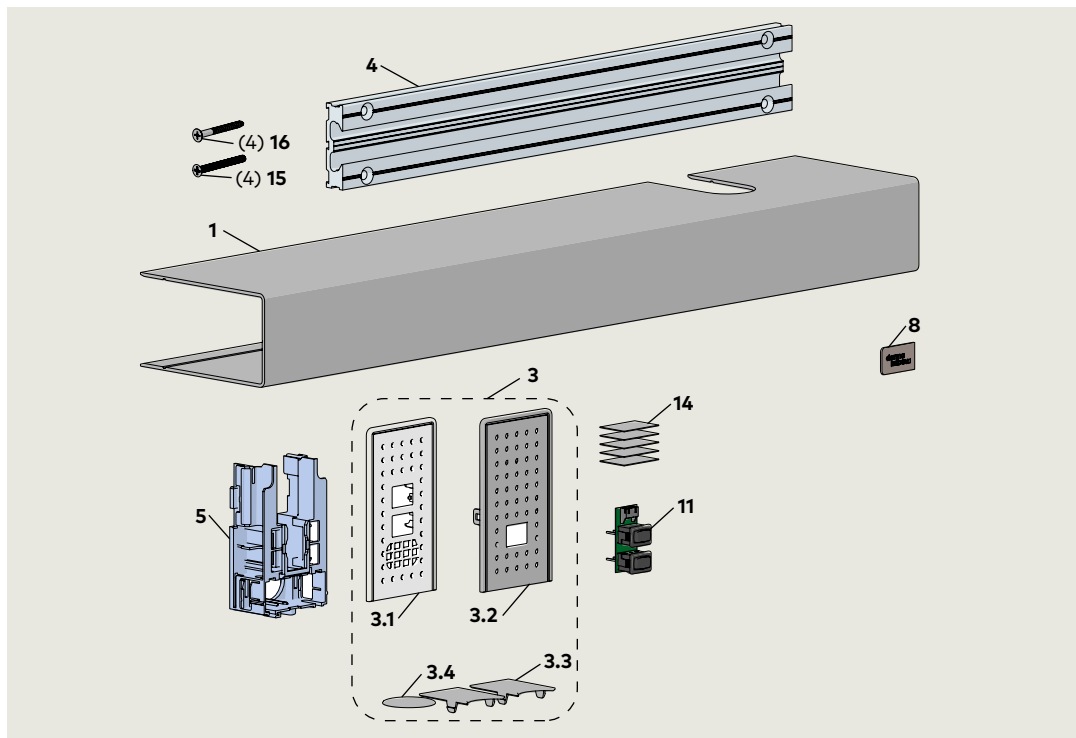

## 5.10 Key switch panels – option

- 2 Key switch panel, with RJ45
- 3 Key switch panel
- 4 Communication cable for program switch panel comm port

Fig. 5.10.1 Key switch panels


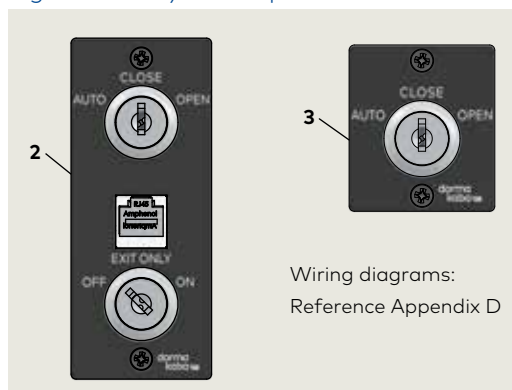


Fig. 5.10.2 Communication cable

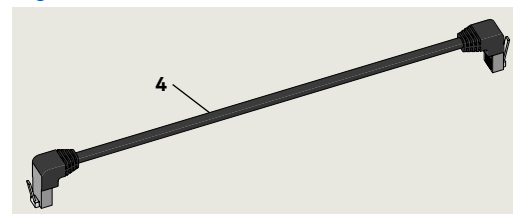

## 5.11 Push arm door stop - option

Fig. 5.11.1 Door stop assembly

**Door stop assembly**

**1/4" thick plate**


08121320

**Door stop assembly**

**1/2" thick plate**

08121330

- 1 Plate, bumper mounting, 1/4" thick 08120774
- 2 Plate, bumper mounting, 1/2" thick 08120770
- 3 Rubber bumper 08120750
- 4 Shoulder bolt 08104231
- 5.1 1/4-20 x 1 1/4" Phillips FHS, black oxide, SS
- 5.2 No. 14 x 1 1/4" Phillips FHMS for sheet metal, zinc plated steel

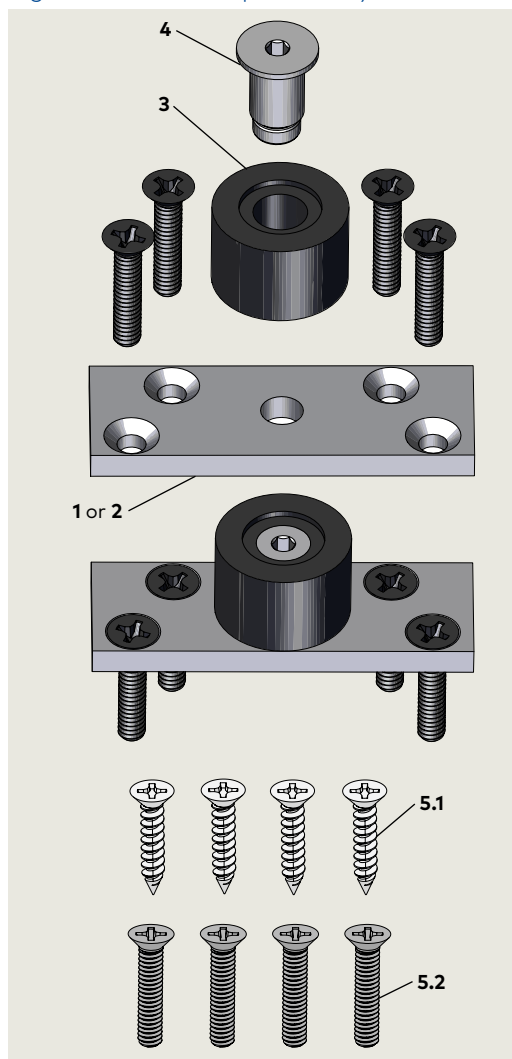



## 5.12 Conduit box and wiring kit – options

Fig. 5.12.1 Conduit box 08120730

- 4 Conduit box  
08120730


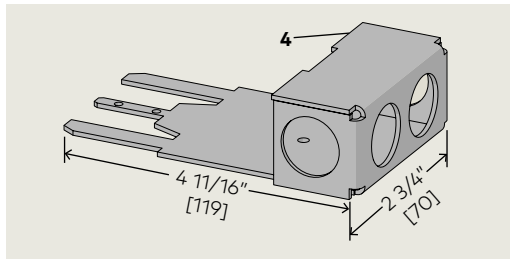


Fig. 5.12.2 Power cord wiring kit 08121110

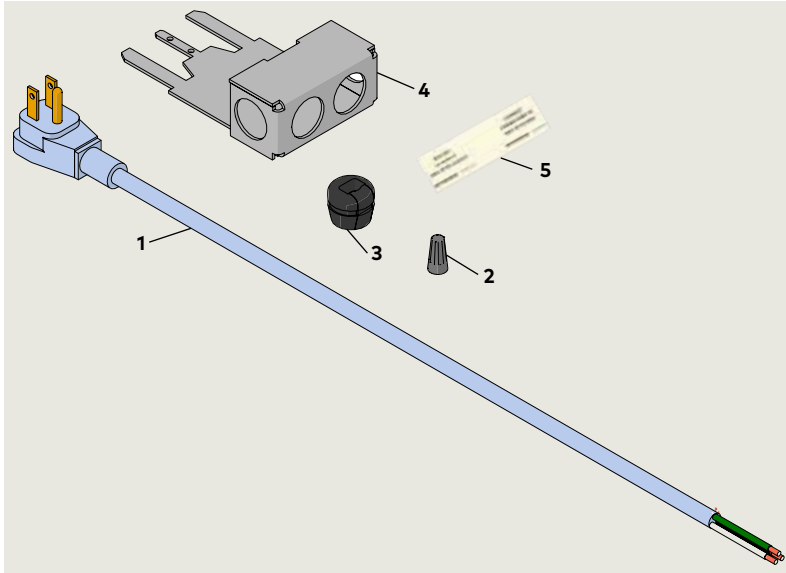

- |   |   |
|---|---|
| <ul style="list-style-type: none"> <li>1 Power cord<br/>08075390</li> <li>2 Wire nut</li> <li>3 Cord grip<br/>08121130</li> </ul> | <ul style="list-style-type: none"> <li>4 Conduit box<br/>08120730</li> <li>5 120 Vac label</li> </ul> |
|---|---|

# 6 Technical data

## 6.1 ED900 Technical data

### 6.1.1 Required operating conditions.

Ambient temperature	5 to 122 °F
Suitable for dry rooms only	Relative air humidity: 93% maximum, non-condensing
Power supply	115 Vac ±10%, 50/60 Hz 6.6 A maximum
Branch circuit protection (provided by others)	15 A maximum, dedicated branch circuit
Protection class	NEMA 1
Power wiring: black, white, bare copper (ground)	12 AWG maximum
Operating noise	Maximum 50 db(A)

### 6.1.2 General specifications.

Operator dimensions (W x H x D)	27" standard cover 27" x 2 3/4 x 5 1/8", [685 x 70 x 130 mm]
Operator weight	26.5 lb [12 kg]
Maximum door opening angle	95 to 110° depending on installation type

### 6.1.3 Inputs

Maximum wire size Connector plug screw size	16 AWG 1/16"
Activation inputs <b>X4*</b>	Interior, exterior N. O. contact
Safety sensors <b>X5</b>	Swing, approach sides
Night-bank (intercom system) <b>X10</b> 57, 57a	8-24 Vdc/Vac +5%
Night-bank (key switch) <b>X1</b> 35, 3	<b>d2</b> parameter Configure for N.O. or N.C. contact
Deactivation of drive function <b>X6</b> 4, 4a	<b>d1</b> parameter Configure for N.O. or N.C. contact



### TIPS AND RECOMMENDATIONS

- **\*X4:** terminal board numbers, reference Chapter 9, System accessories.
- Parameters, reference Chapter 19.

### 6.1.4 Outputs

Maximum wire size Connector plug screw size	16 AWG 1/16"
Door status <b>X7</b> 97,98,99	<b>Sr</b> parameter Door closed Com, N.O., N.C. Door open contacts Door closed, locked

### 6.1.5 Integrated functions.

Hold open time:	
Automatic opening	<b>dd</b> parameter 0 to 30 s
Night / bank	<b>dn</b> parameter 0 to 30 s
Manual opening	<b>do</b> parameter 0 to 30 s
Door blocking behavior	<b>hd</b> parameter Automatic, manual door modes
Electric strike delayed opening for locking mechanism	<b>Ud</b> parameter 0 to 4 s
Locking device feedback <b>X3</b> 43, 3	Motor lock
Wind load control, maximum	<b>Fo, Fc</b> parameters 33.7 lb f 150 N
Voltage independent braking circuit	Chapter 17 Adjustable with potentiometer
LED status indicators Chapter 8	Green 24 Vdc power Red Error codes Yellow Service interval
Program and Exit Only switches	Chapter 8 Auto, Close, Open Exit only; Off, On
User interface	Chapter 8 4 button keypad, 2 digit display
Firmware update	Appendix C Firmware update
TMP, temperature management program	Overload protection
IDC, initial drive control	Driving phase optimization
Cycle counter	<b>CC</b> parameter 0 to 1,000,000
Power assist function	<b>hA, hF, hS</b> parameters Drive support for manual opening of door
Push & go function	<b>PG</b> parameter Auto opening of door at 4° open

## 6.2 Operating specifications

### 6.2.1 ED900

Maximum power consumption	120 watt	
Opening force N (lbf) <b>F<sub>o</sub></b> parameter	Minimum 20 (4.5)	Maximum 60 (13.5.5)
Manual closing force N (lbf) <b>F<sub>c</sub></b> parameter	Minimum 20 (4.5)	Maximum 60 (13.5)
Maximum door weight, pounds	220 at 48" door width	Depending on door width and application
Door width	Minimum 28"	Maximum 48"
Maximum opening speed, %/s	27	May be limited by door weight after learning cycle.
Maximum closing speed, %/s	27	

Axle extensions, [mm] inches	[20] 13/16" [30] 1 3/16" [60] 2 3/8"
Reveal depth for pull arm	1 3/16"
Reveal depth for pull arm and CPD lever	2 1/4"
Reveal depth for standard push arm	0 to 8 3/4"
Reveal depth for deep push arm	8" minimum to 11 13/16"

# 7 Operational mode overview

## 7.1 ED900 door closer modes

### 7.1.1 Automatic mode.

Door closer mode parameter **hd**=0.  
Door opens automatically following pulse generation by a knowing act device or by push/pull.

### 7.1.2 Manual mode.

Door closer mode parameter **hd**=1.  
Designed for doors primarily accessed manually.



#### TIPS AND RECOMMENDATIONS

Parameter descriptions can be found in Chapter 19; Parameters.

### 7.1.3 Power assist.

- Available only in door closer mode (**hd**=1), manual opening drive support is automatically adjusted to operator size.
- Parameter **hA** sets door activation angle for power assist function. Once angle reached, drive support provides easier manual opening of the door.
- Parameter **hF**, power assist function. Parameter values greater than 0 provides additional opening force.
- Parameter **hS**, power assist function support for door in closed position.

## 7.2 Low energy product

### 7.2.1 ANSI/BHMA 156.19.

ED900 operator is configured to meet requirements of a low energy application per ANSI/BHMA A156.19, U.S. Standard for Power Assist and Low Energy Power Operated Doors.

### 7.2.2 Low energy power operated door.

A manual door with a power mechanism that opens the door upon receipt of a knowing act activating signal, does not generate more kinetic energy than specified in ANSI 156.19, and is closed by a power mechanism or by other means.

Required system safety, as a low energy application, is achieved utilizing the following design factors:


- Reduced dynamic door panel contact forces
- Reduced static door panel contact forces
- Low driving speeds
- Force limitation

# 8 User interface

## 8.1 Overview

- 1 2 digit display
- 2 4 button keypad

Fig. 8.1.1 Operator keypad and display

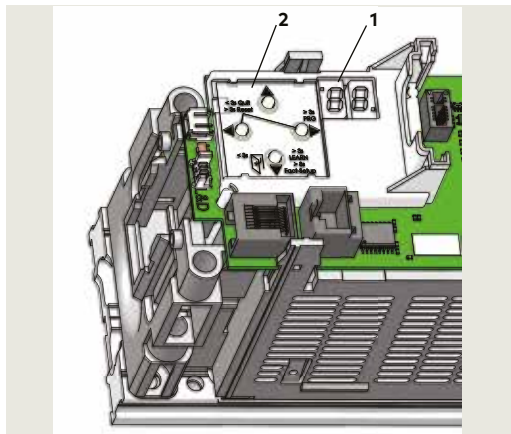


### 8.1.1 Operator user interfaces.

1. 4 button keypad and 2 digit display.
- 4 button keypad; to select, input and adjust door parameter values.
- 2 digit display; parameter values, error and information codes.

## 8.2 4 button keypad and display

- 2 2 digit display
- 5 Button legend

Fig. 8.2.1 Door hinge side on right

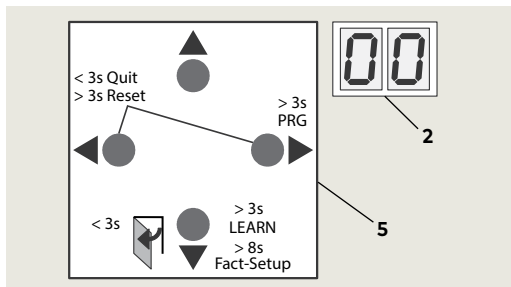

### 8.2.1 4 button keypad.


4 button legend is orientated so buttons have same function and position regardless of operator orientation. Button legend can be removed and rotated.

### 8.2.2 4 button keypad functions.

▶	Right button	<ol style="list-style-type: none"> <li>1. Access parameter menu, press button &gt; 3 seconds.</li> <li>2. Edit selected parameter.</li> <li>3. Save changed value.</li> </ol>
◀	Left button	<ol style="list-style-type: none"> <li>1. Reset, &gt; 3s</li> <li>2. Quit process, &lt; 3 s.</li> </ol>
◀▶	Both buttons together	<ol style="list-style-type: none"> <li>1. Acknowledge errors, press both buttons &lt; 3 s.</li> <li>2. Reset, press both buttons &gt; 3 s.</li> </ol>
▲	Up button	<ol style="list-style-type: none"> <li>1. Scroll through parameters and error messages.</li> <li>2. Increase parameter value.</li> </ol>
▼	Down button	<ol style="list-style-type: none"> <li>1. Scroll through parameters and error messages.</li> <li>2. Reduce parameter value.</li> <li>3. Opening pulse, press button &lt; 3 s.</li> <li>4. Learning cycle, press button &gt; 3 s.</li> <li>5. Reset with factory setting, press button &gt; 8 s (program switches off).</li> <li>6. Identify operator orientation for display</li> </ol>

- 2 2 digit display
- 6 Button legend rotated 180°

Fig. 8.2.2 Door hinge side on left

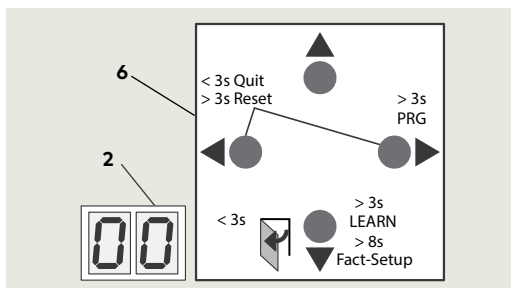

### TIPS AND RECOMMENDATIONS


Symbols

- "<", Less than
- ">", Greater than


## 8.3 Program and Exit Only switches

### 8.3.1 Program switch control modes.


- **Auto**, door opens following pulse generation by a knowing act device or push/pull.
- Door will close after hold open time (adjustable) has expired.
- Knowing act device, Para. 3.2. Door will remain at full open position for not less than five seconds.
- Push/pull actuation of door, Chapter 10. Door will remain at full open position for not less than three seconds.

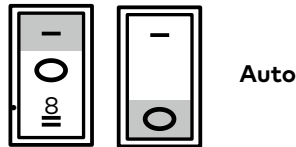

- **Open**, door opens automatically and remains open.

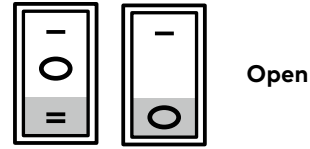

- **Close**, door closes automatically, or remains closed.

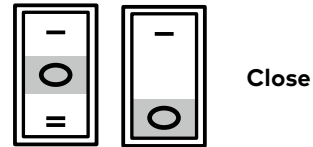


### 8.3.2 Exit only switch.

- Disables exterior switch only.

Fig. 8.3.1 Program and Exit Only switches


- 1 Exit Only switch, 2 position
- 2 Program switch, 3 position

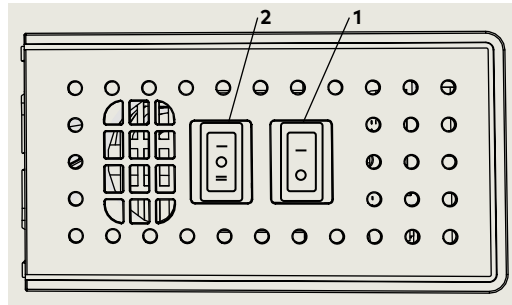

## 8.4 Operator status LEDs

Fig. 8.4.1 Operator status LEDs

- 1 Red LED
- 2 Yellow LED
- 3 Green LED
- 4 Power switch

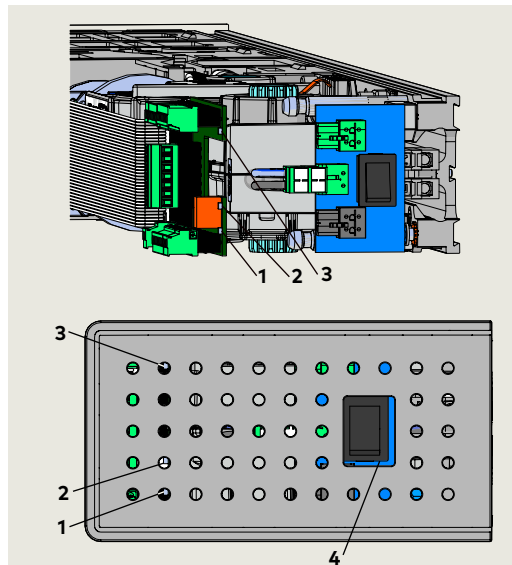

### 8.4.1 Operator status LEDs.

1. Red LED  
Blinking codes are used to indicate "In\_\_" information (system status or operating conditions) or certain error codes "E\_\_".
2. Yellow LED  
Maintenance interval indicator. When illuminated, an indication the operator system has to be serviced.
3. Green LED
  - On, internal 24 Vdc power is On.
  - Off, internal 24 Vdc power is Off.



#### TIPS AND RECOMMENDATIONS


Information on LED status codes and maintenance intervals can be found in Appendix B, Troubleshooting.

# 9 System accessories

## 9.1 System accessory electrical connections

Fig. 9.1.1 Electrical connections, single door

- 1 External program switch, mechanical
- 2 External program switch, electronic
- 3 Key switch
- 4 Pushbutton, night / bank
- 5 Pushbutton, interior
- 6 Pushbutton, exterior
- 7 Door locking device
- 8 Manual release switch
- 9 ED900

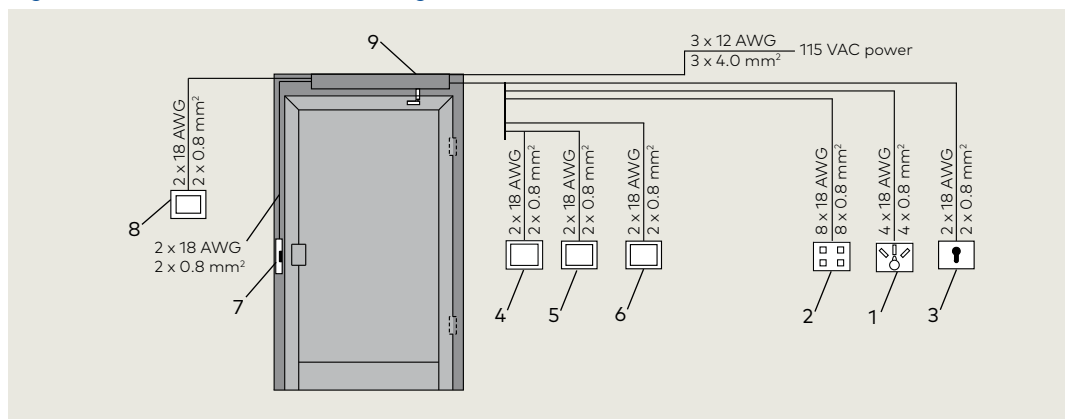

## 9.2 System accessories

### 9.2.1 Overview

ED900 operators are normally used with system accessories available from dormakabaUSA, Inc. or other manufacturers.

### 9.2.2 Accessory electrical installation.

Electrical interfaces from system accessories used with operator must be planned for. This includes routing of wiring from accessories to operator.

### 9.2.3 System accessories, other manufacturers.

dormakaba USA, Inc. cannot guarantee compatibility for other manufacturer's accessories. If any of these accessories are used despite this caution, the operator's full range of functions may be unavailable, or the accessories may not work properly.



**WARNING**

Damage to operator or to connected device is also possible!

### 9.2.4 Power for accessories.

**External DC power supply** is required for external consumers (Para 9.2.6, 9.2.7).

### 9.2.5 Miscellaneous accessories.

- 1. Door status display, red, green

### 9.2.6 Activators

Typical activators:

- 1. Pushbuttons, key switches
- 2. Access control systems
- 3. Telephone systems
- 4. Intercoms



### TIPS AND RECOMMENDATIONS

Refer to Chapter 6, Technical data for electrical interface requirements.

### 9.2.7 Locking devices

Typical locking devices:

- 1. Electric strike plates
- 2. Electromagnetic locks
- 3. Electric locks


To insure that operator and locking device work safely when connected together, locking device must comply with following:

- 1. Operating voltage, external power supply, 48 Vdc/Vac maximum.
- 2. Locking device relay contact, maximum load, 1 A.
- 3. Electric strike plate duty factor, 30% minimum.
- 4. Motor lock duty factor, 100%.

### 9.3 ED900 terminal board interfaces

Fig. 9.3.1 Terminal board electrical connections

- 1 Green LED (Para. 8.4)
- 2 Yellow LED (Para. 8.4)
- 3 Red LED (Para. 8.4)
- 4 Key (red insert) location in socket. Assigned plug has tab in same location broken off.
- 5 Jumpers, factory installed at following terminals:
  - 4 and 4a
  - 15 and 3\*
  - 11 and 3\*
- \* Remove jumpers if safety sensors installed.
- 6 DCW® upgrade card plug (n/a)
- 7 Fire protection upgrade card plug

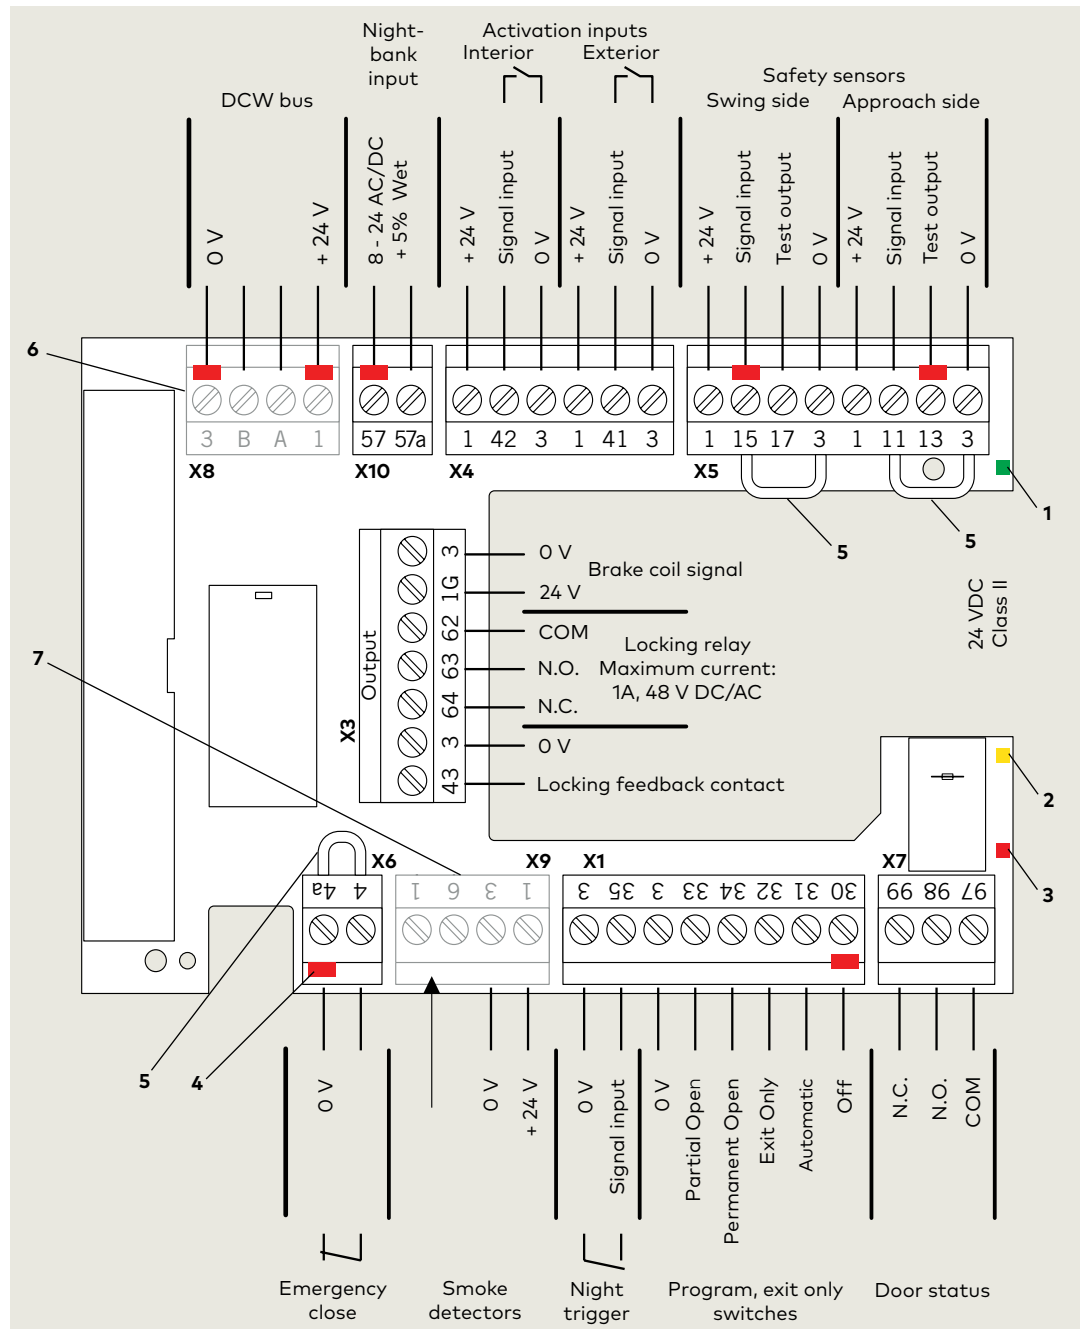

#### TIPS AND RECOMMENDATIONS

Do not connect system accessories to board until operator has been commissioned and learning cycle performed. Reference Chapter 25.

# 10 ED900 door signage

## 10.1 Low energy operator

### 10.1.1 Overview

Signage and warnings are specified in ANSI /BHMA A156.19, American National Standard for power assist and low energy power operated doors.

### 10.1.2 All low energy doors.

1. AUTOMATIC CAUTION DOOR decal.
  - All low energy doors shall be marked with signage visible from both side of door with the words "AUTOMATIC CAUTION DOOR".
  - Signs shall be mounted 50" ± 12" from floor to centerline of sign.

### 10.1.3 Knowing act switch used to initiate door operation.

1. ACTIVATE SWITCH TO OPERATE decal.
  - When a knowing act device is used to initiate operation of door operator, door shall be provided with sign on each side of door where switch is operated with message "ACTIVATE SWITCH TO OPERATE".

### 10.1.4 Push/Pull used to initiate door operation.

1. PUSH TO OPERATE, PULL TO OPERATE decals.
  - When push/pull is used to initiate operation of door operator, doors shall be provided with the message "PUSH TO OPERATE" on push side of door and "PULL TO OPERATE" on pull side of door.

Fig. 10.1.1 AUTOMATIC CAUTION DOOR decal



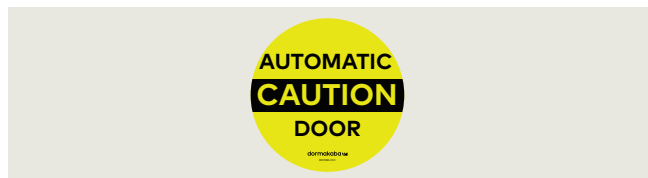


Fig. 10.1.2 ACTIVATE SWITCH TO OPERATE decal



- 1 Activate Switch to Operate


Fig. 10.1.3 PUSH TO OPERATE, PULL TO OPERATE decals

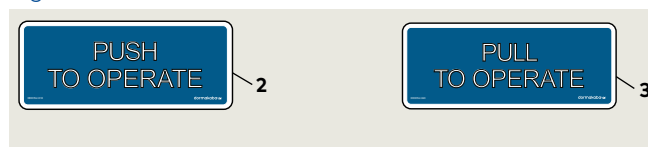

- 2 Push to Operate
- 3 Pull to Operate


## 10.2 Door signage, low energy single swing door

Fig. 10.2.1 Knowing act device initiation of door operation

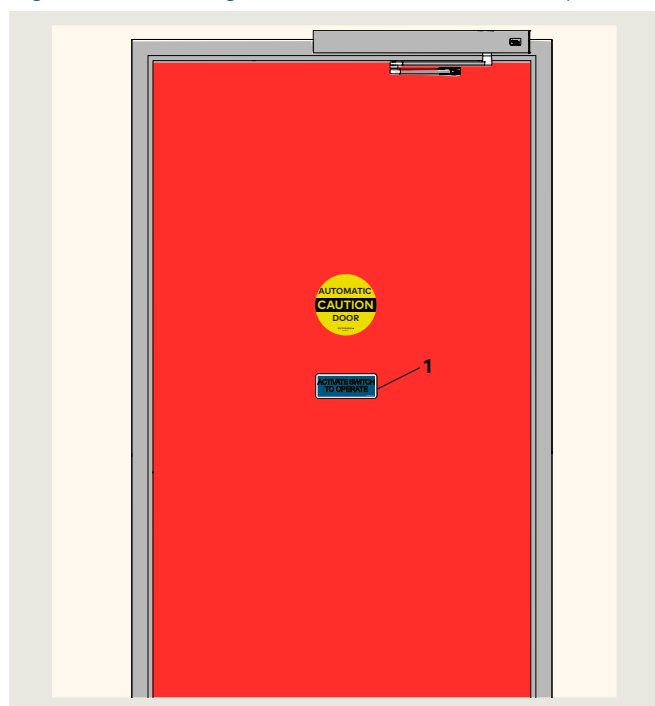

- 1 Activate Switch to Operate

Fig. 10.2.2 Push/Pull initiation of door operation Push to Operate

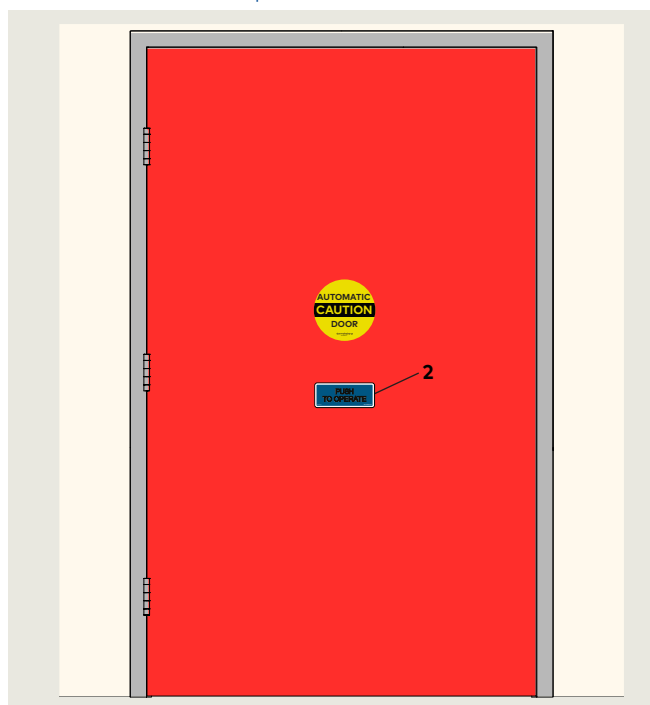

- 2 Push to Operate



## 10.3 Safety Information label, low energy swing doors

### 10.3.1 Low energy swinging door safety information label.

This AAADM label outlines safety checks that should be performed daily on a swinging door controlled by an ED900 low energy operator.

### 10.3.2 Safety information label location.

Place label in a protected, visible location on door frame, near program switch plate if possible.


### 10.3.3 Annual compliance section of label.

This section of label is only completed on low energy swing doors that comply with ANSI/BHMA A156.19 standard and pass inspection by a AAADM certified dormakaba USA, Inc. technician.

### 10.3.4 Additional annual compliance inspection labels.

Place additional labels over annual compliance inspection section of safety information label.

Fig. 10.2.3 Push/Pull initiation of door operation  
Pull to Operate

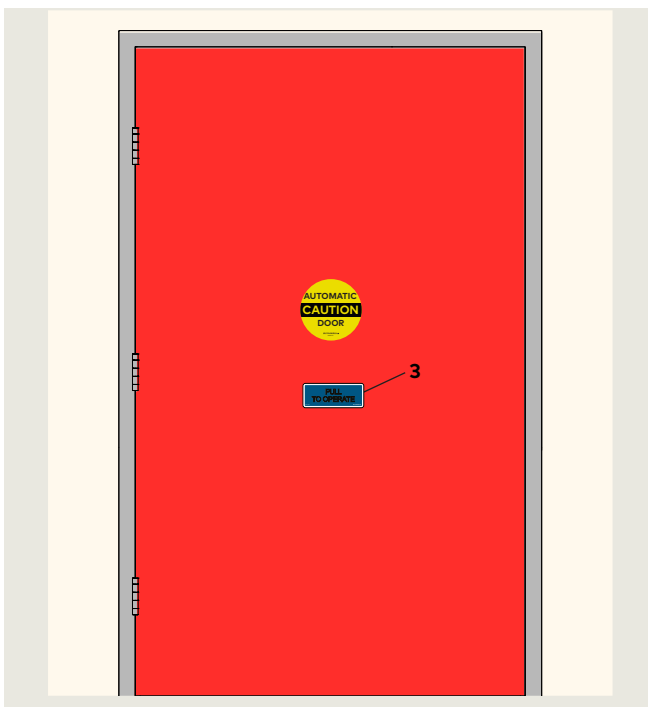

3 Pull to Operate

Fig. 10.3.1 Safety information label

**SAFETY INFORMATION**  
 Low Energy Swinging Doors

These minimum safety checks, in addition to those in the Owner's Manual, should be made each day and after any loss of electrical power .

1. Activate the door. Door should open at a slow smooth pace (4 or more seconds), and stop without impact.
2. Door must remain fully open for a minimum of 5 seconds before beginning to close.
3. Door should close at a slow, smooth pace (4 or more seconds), and stop without impact.
4. Inspect the floor area. It should be clean with no loose parts that might cause user to trip or fall. Keep traffic path clear.
5. Inspect door's overall condition. The appropriate signage should be present and the hardware should be in good condition.
6. Have door inspected by an AAADM certified inspector at least annually.

DO NOT USE DOOR if it fails any of these safety checks or if it malfunctions in any way. Call a qualified automatic door service company to have door repaired or serviced.

See Owner's manual or instructions for details on each of these and other safety items. If you need a copy of the manual, contact the manufacturer.

AAADM-3044

**AAADM**  
 American Association of Automatic Door Manufacturers

**ANNUAL COMPLIANCE INSPECTION**

INSPECT FOR AND COMPLIES WITH ANSI A156.19 ON:

DATE: \_\_\_\_\_

by AAADM Certified Inspector

Number: \_\_\_\_\_

Fig. 10.3.2 Annual compliance inspection label

**ANNUAL COMPLIANCE INSPECTION**

INSPECT FOR AND COMPLIES WITH ANSI A156.19 ON:

DATE: \_\_\_\_\_

by AAADM Certified Inspector


Number: \_\_\_\_\_

# 11 Recommended tools and torque chart

## 11.1 Recommended tools

- 1 T-handle hex key, 5 mm  
Supplied with ED900
- 2 Hex keys, 2.5 mm, 3 mm, 6 mm
- 3 Screwdriver, flat blade
- 4 Door pressure gauge, 0 to 35 ft - lbf
- 5 Screwdriver, Phillips, #2, #3
- 6 Torque wrench, 3 to 50 ft lb min.
- 6.1 Metric hex key sockets
- 7 Open end wrench, 13 mm
- 8 Screwdriver, flat blade, M2 (1/16 to 3/32")

Fig. 11.1.1 Recommended tools

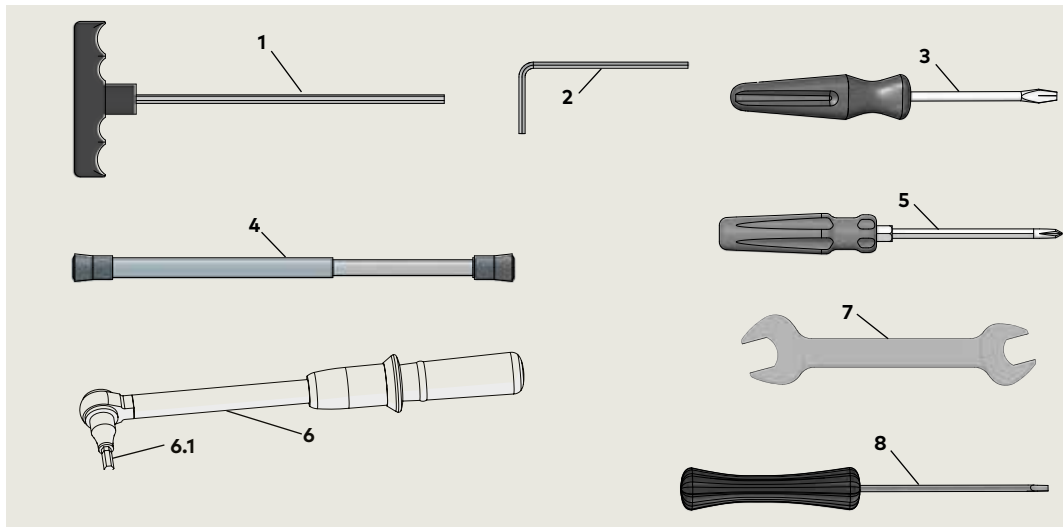

## 11.2 Standard tightening torque

### 11.2.1 Standard tightening torque


Fastener size	ft lb
M5	3.7
M6	7
M8	17
M10	34
M12	58

## 11.3 Drill bits

### 11.3.1 Drill bit sizes for fasteners

Fastener	Drill bit size	
#10 wood screw	Hardwood 9/64"	Softwood 1/8"
#12 wood screw	Hardwood 5/32"	Softwood 9/64"
#14 wood screw	Hardwood 11/64"	Softwood 5/32"
1/4 -20 metal self tapping screw	7/32"	
10-24 barrel nut	5/32"	

Fig. 11.3.1 Drill bit



# 12 ED900 installation overview

## 12.1 Installation preparation

### NOTICE

Installation steps listed in Chapter 12 through 17 are a recommendation. Structural, local conditions, available tools, or other factors or circumstances may require modification to these steps.



### WARNING

Review safety information in Chapter 3!



### WARNING

ED900 system should be installed by trained and knowledgeable installers experienced in installation and commissioning of swing door operators.

The installer should be familiar with all applicable local and national building code requirements, and with requirements of current ANSI/BHMA standard A156.19, Power Assist and Low Energy Power Operated Doors.

### 12.1.1 dormakaba USA, Inc. ED900 hardware.

1. Locate shipping boxes for ED900 operator and hardware.

### 12.1.2 Door frame and door.

#### CAUTION

Insure area around door frame, adjacent walls and door is readily accessible and free of objects and debris.

### 12.1.3 Accessories

1. Verify accessories planned for or in place for the door. Chapter 9, system accessories, list typical accessory types for ED900 operators.



### TIPS AND RECOMMENDATIONS

Accessory wiring to ED900 operator should be planned for prior to operator installation.

### 12.1.4 ED900 mounting plate installation preparation.

#### CAUTION

Using applicable ED900 installation template (Chapter 13), holes for mounting plate fasteners must be located and drilled into door frame, wall or substructure prior to mounting plate installation.

#### CAUTION

Mounting plate installation must be orientated with 115 Vac connection towards door hinge side.

### 12.1.5 ED900 mounting plate extension used with optional full door width cover.



### TIPS AND RECOMMENDATIONS

Mounting plate extension is included for full width cover installation.

- Reference Chapter 15 for mounting base extension and full width cover installation.

### 12.1.6 ED900 115 Vac electrical installation.



### WARNING

Work on electrical equipment and 115 Vac wiring installation must be performed only by qualified personnel!



### WARNING

Electrical shock hazard! 115 Vac branch circuit disconnect for ED900 must be Off prior to start of electrical installation.




### WARNING

115 Vac wiring to ED900 operator must conform to local and national electrical codes.

# 13 ED900 installation templates


## 13.2 Installation templates – pull arm

Fig. 13.2.1 Assembly on hinge side, pull version with slide channel and long pivot pin

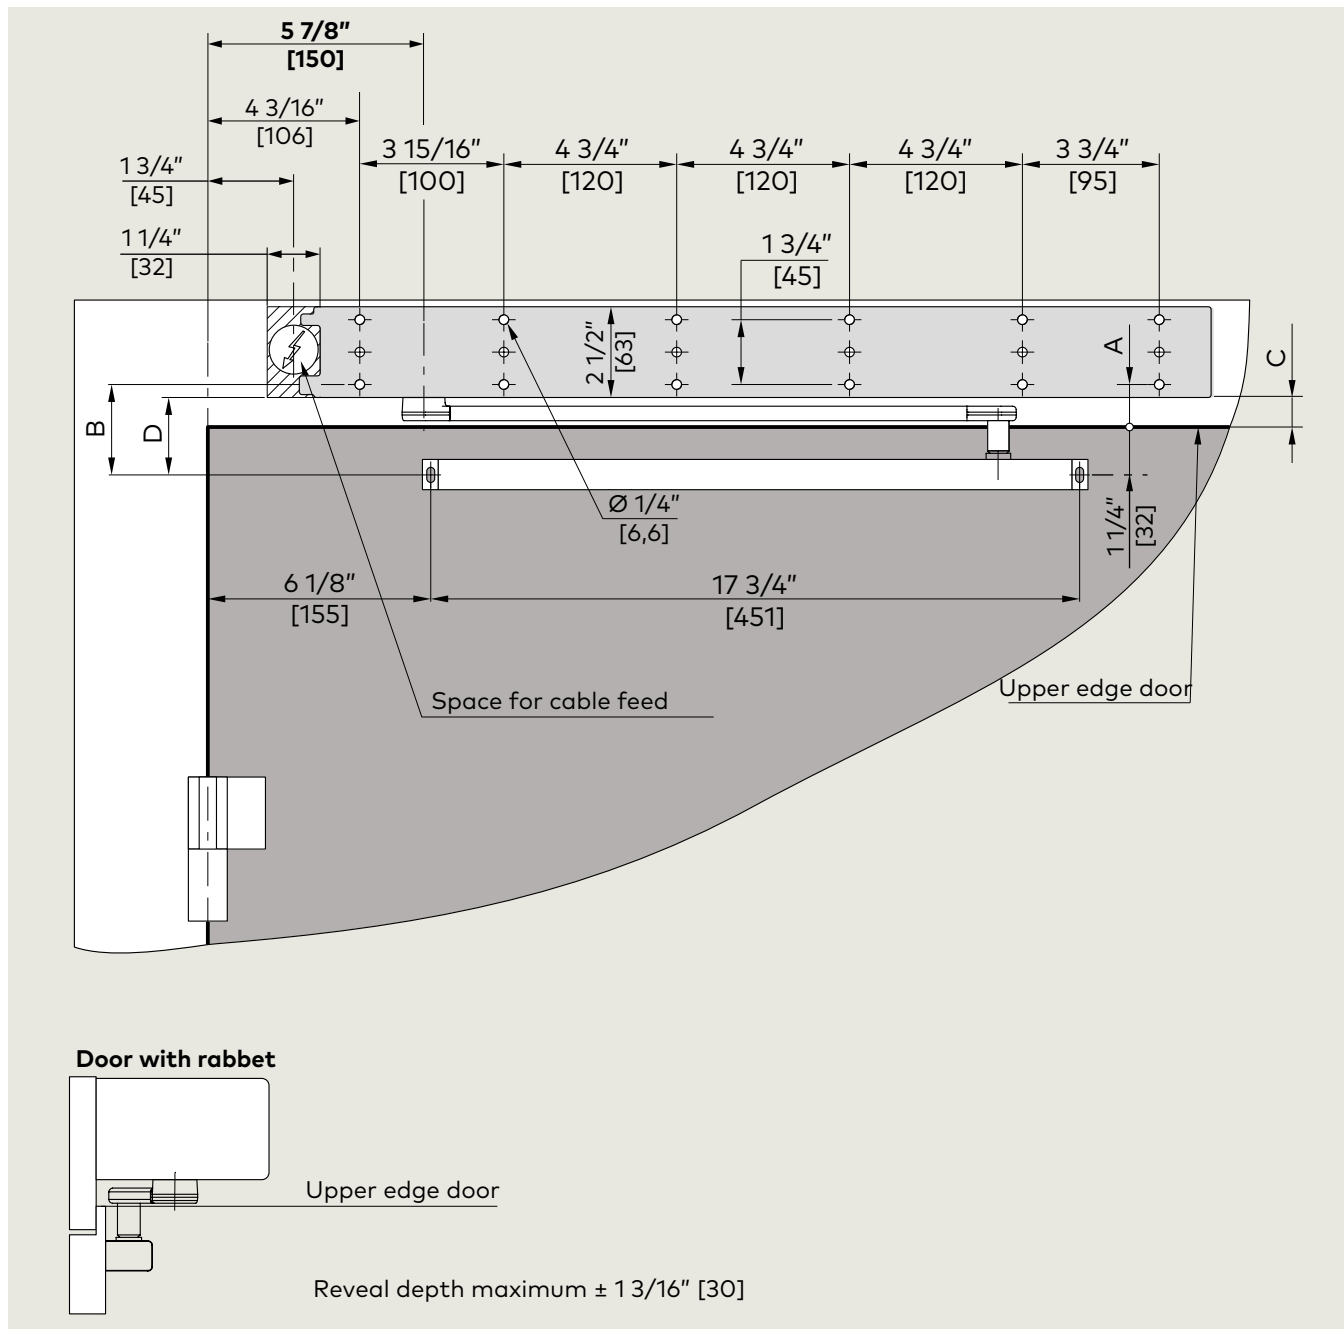


Axle extension	ED900	A		B		C		D	
		Inches	mm	Inches	mm	Inches	mm	Inches	mm
Standard	●	1 7/32	31	2 1/2	63	7/8	22	2 1/8	54
3/4" [20]	●	2	51	3 1/4	83	1 21/32	42	2 29/32	74
1 3/16" [30]	●	2 13/32	61	3 21/32	93	2 1/16	52	3 5/16	84
2 3/8" [60]	●	3 9/16	91	4 27/32	123	3 7/32	82	4 1/2	114

Fig. 13.2.2 Assembly on hinge side, pull version with slide channel CPD and short pivot pin

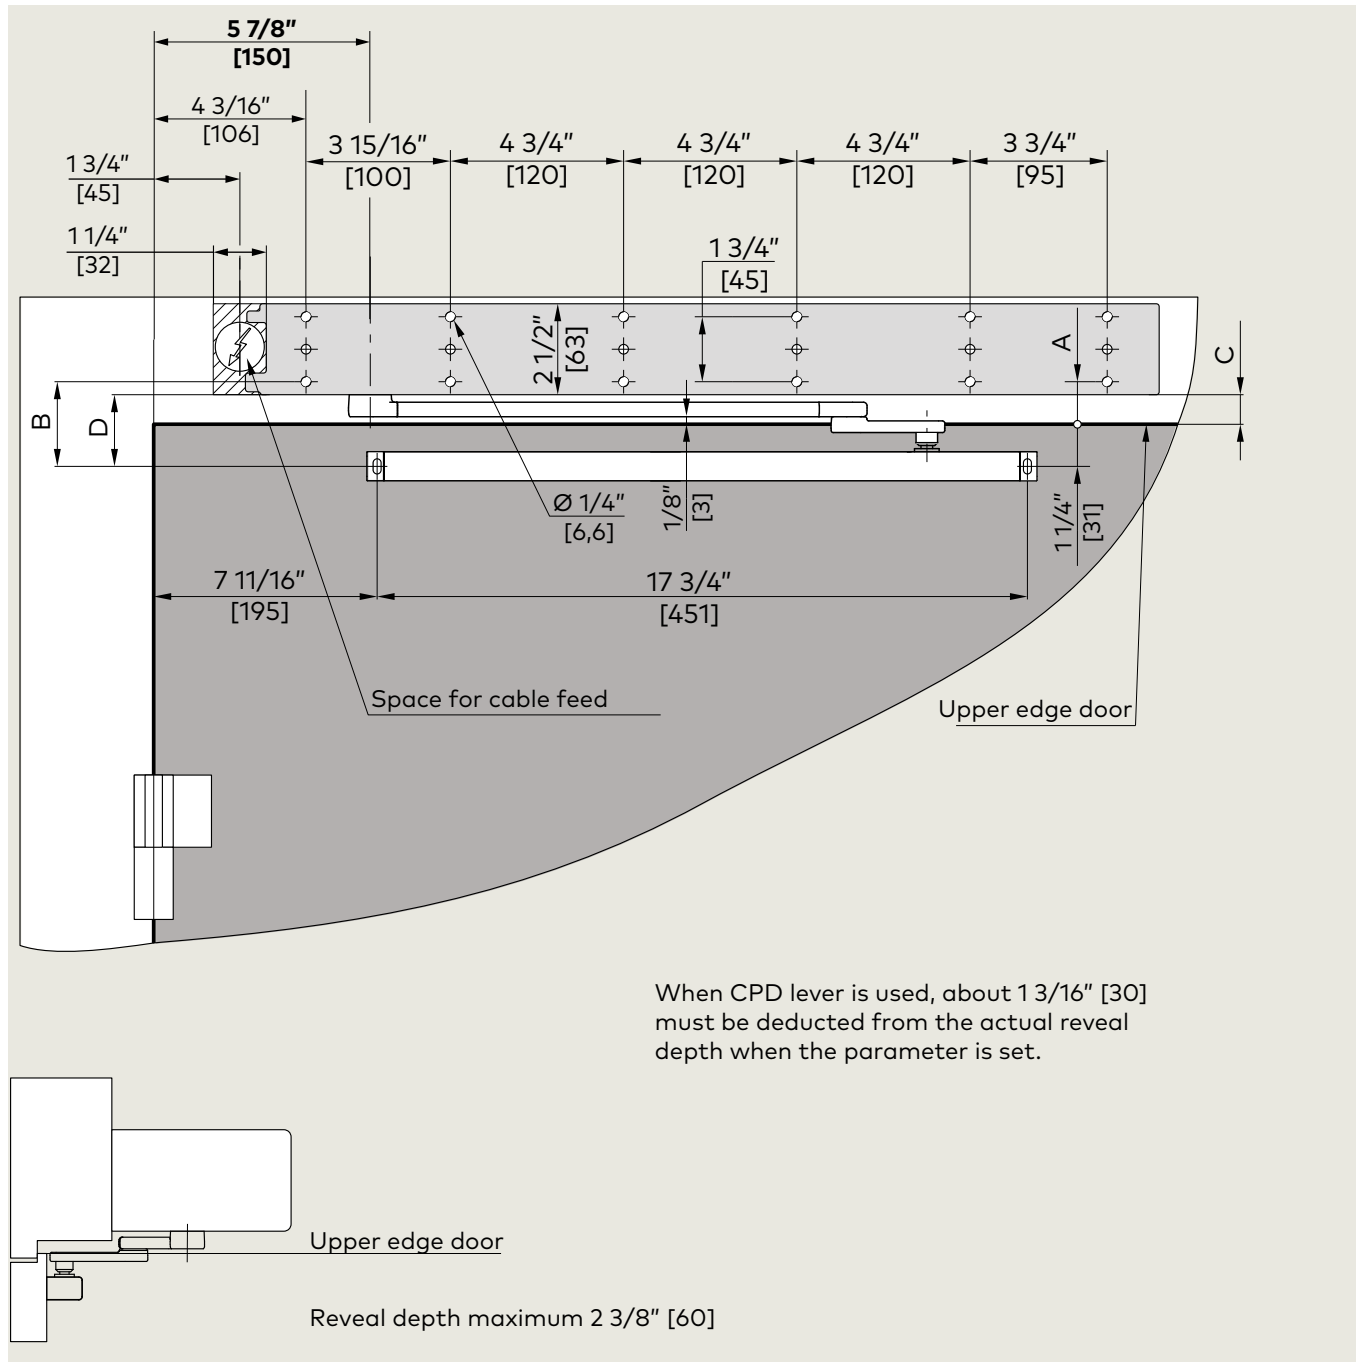

Axle extension	ED900	A		B		C		D	
		Inches	mm	Inches	mm	Inches	mm	Inches	mm
Standard	●	1 7/32	31	2 7/16	62	7/8	22	2 3/32	53
3/4" [20]	●	2	51	3 7/32	82	1 21/32	42	2 7/8	73
1 3/16" [30]	●	2 13/32	61	3 5/8	92	2 1/16	52	3 1/4	83
2 3/8" [60]	●	3 9/16	91	4 13/16	122	3 7/32	82	4 7/16	113


Fig. 13.2.3 Assembly on hinge side, pull version with slide channel CPD and long pivot pin

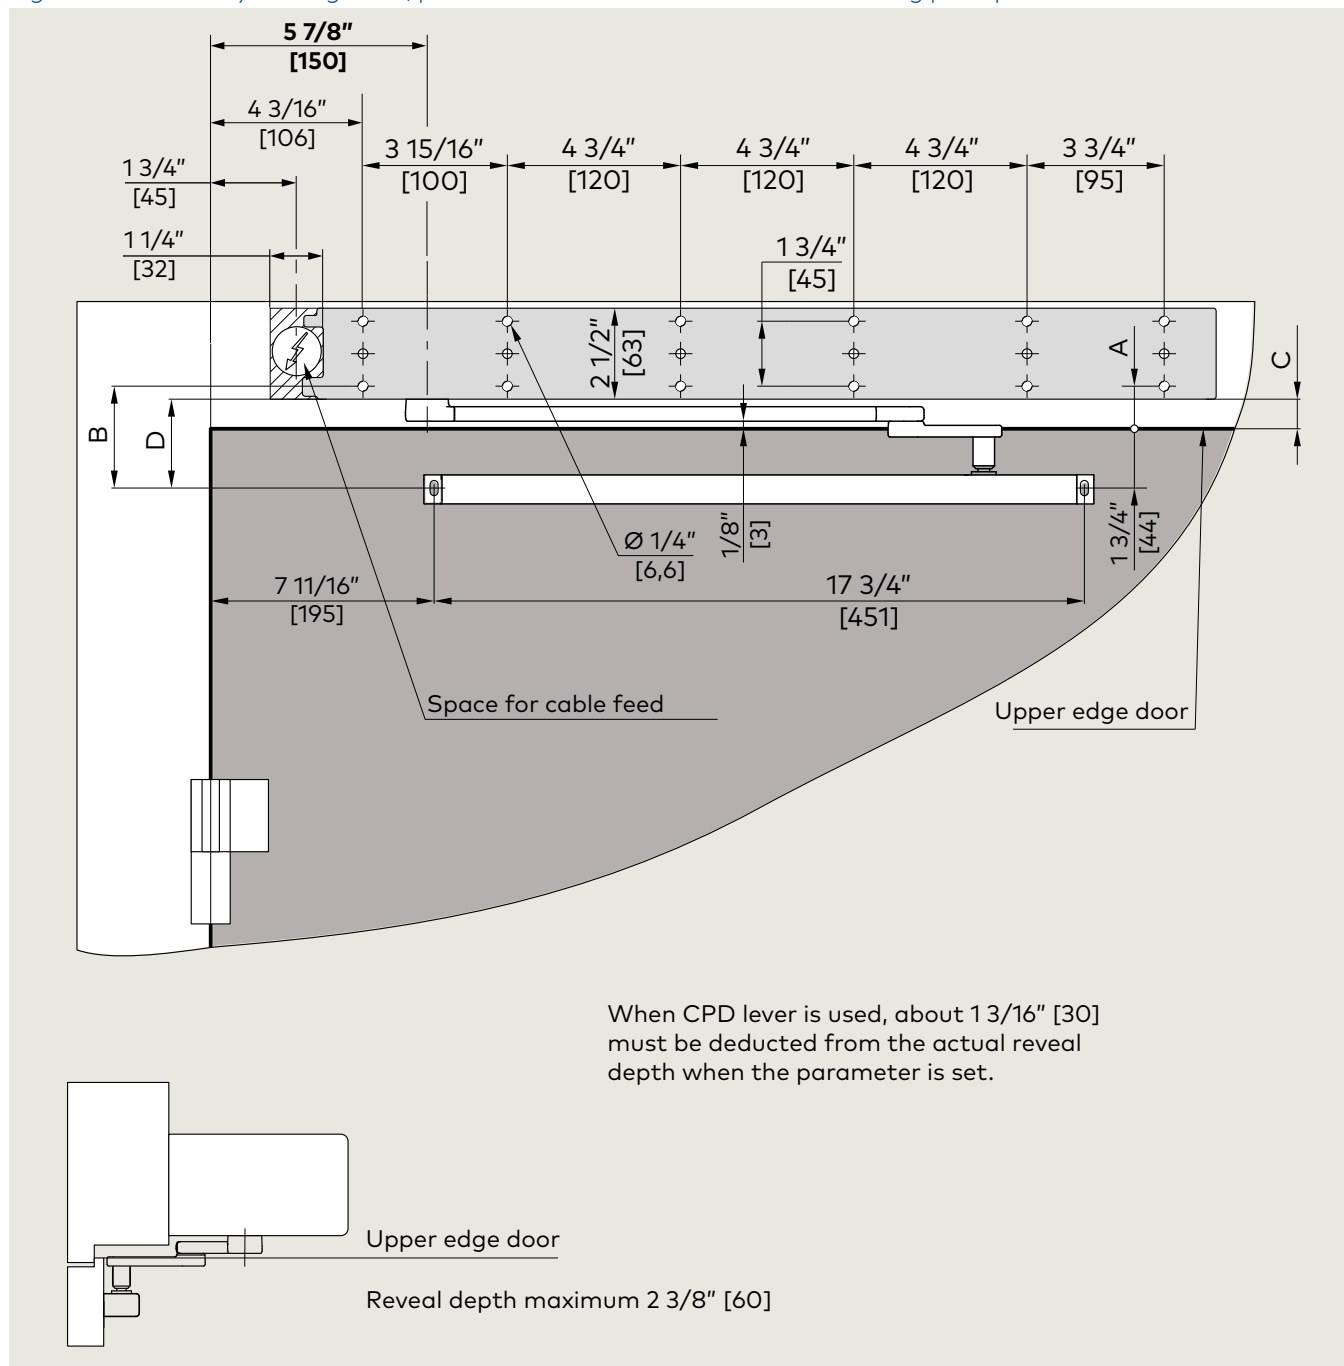

Axle extension	ED900	A		B		C		D	
		Inches	mm	Inches	mm	Inches	mm	Inches	mm
Standard	●	1 7/32	31	2 15/16	75	7/8	22	2 19/32	66
3/4" [20]	●	2	51	3 3/4	95	1 21/32	42	3 3/8	86
1 3/16" [30]	●	2 13/32	61	4 1/8	105	2 1/16	52	3 25/32	96
2 3/8" [60]	●	3 9/16	91	5 5/16	135	3 7/32	82	4 31/32	126

### 13.3 Installation templates – pull as push


Fig. 13.3.1 Assembly on opposite hinge side, push version with slide channel and short pivot pin

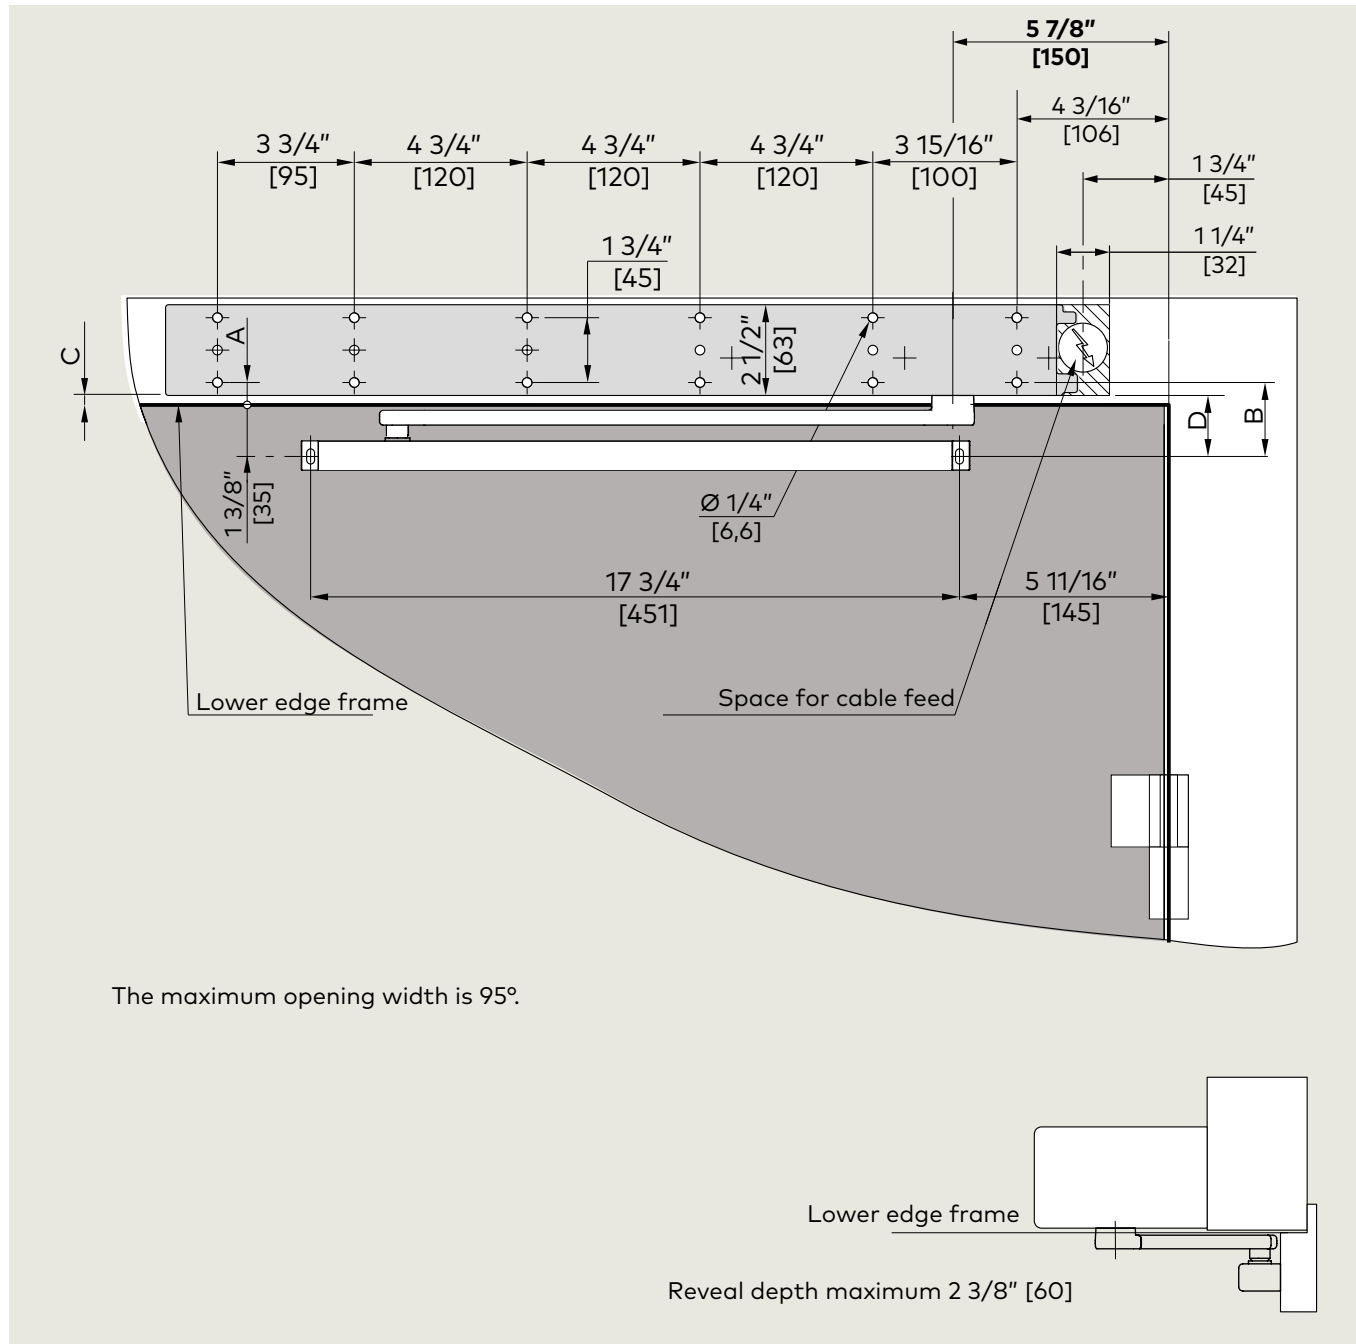

Axle extension	ED900	A		B		C		D	
		Inches	mm	Inches	mm	Inches	mm	Inches	mm
Standard	●	9/16	14	1 15/16	49	3/16	5	1 9/16	40
3/4" [20]	●	1 11/32	34	2 23/32	69	1	25	2 3/8	60
1 3/16" [30]	●	1 3/4	44	3 1/8	79	1 3/8	35	2 3/4	70
2 3/8" [60]	●	2 29/32	74	4 5/16	109	2 9/16	65	3 15/16	100

### 13.4 Installation templates – push arm


Fig. 12.4.1 Assembly on opposite hinge side, push version with J/arm assembly

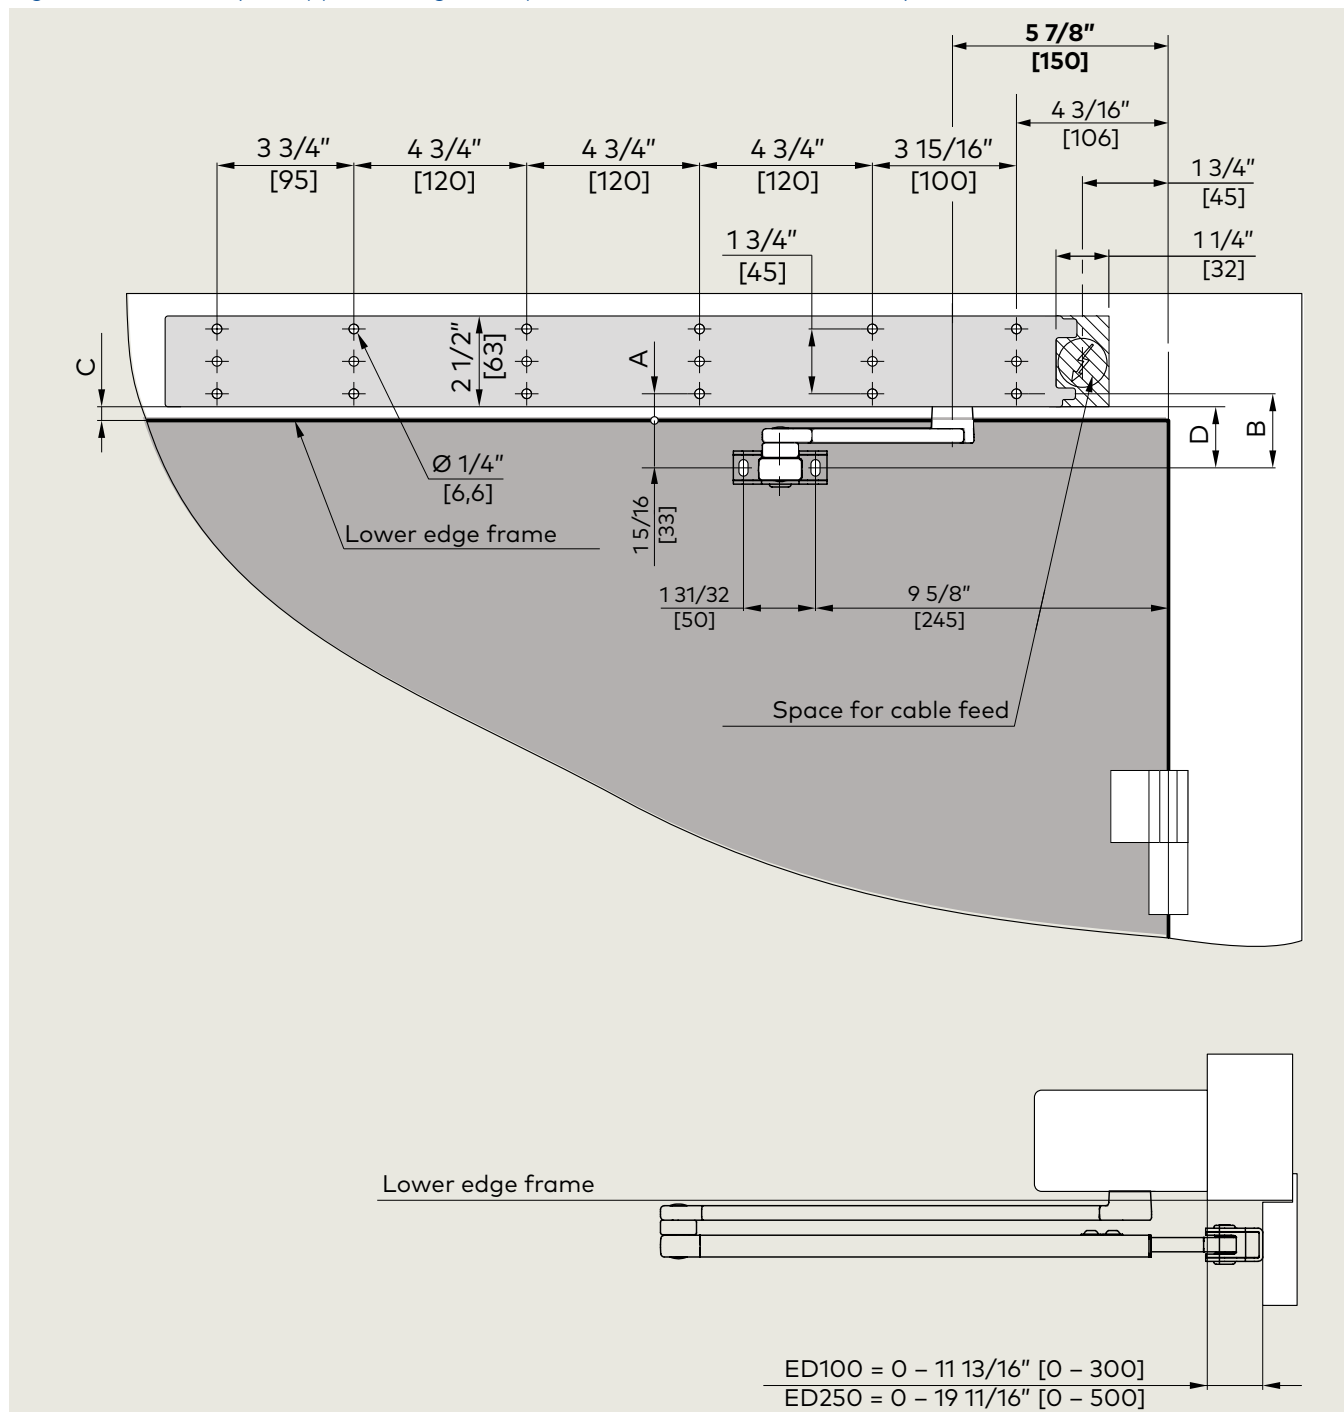

Axle extension	ED900	A		B		C		D	
		Inches	mm	Inches	mm	Inches	mm	Inches	mm
Standard	●	11/16	18	2	51	11/32	9	1 21/32	42
3/4" [20]	●	1 1/2	38	2 13/16	71	1 1/8	29	2 7/16	62
1 3/16" [30]	●	1 7/8	48	3 3/16	81	1 13/32	39	2 13/16	72
2 3/8" [60]	●	3 1/16	78	4 3/8	111	2 23/32	69	4	102



Fig. 13.4.2 Assembly on opposite hinge side, push version with J8/arm assembly

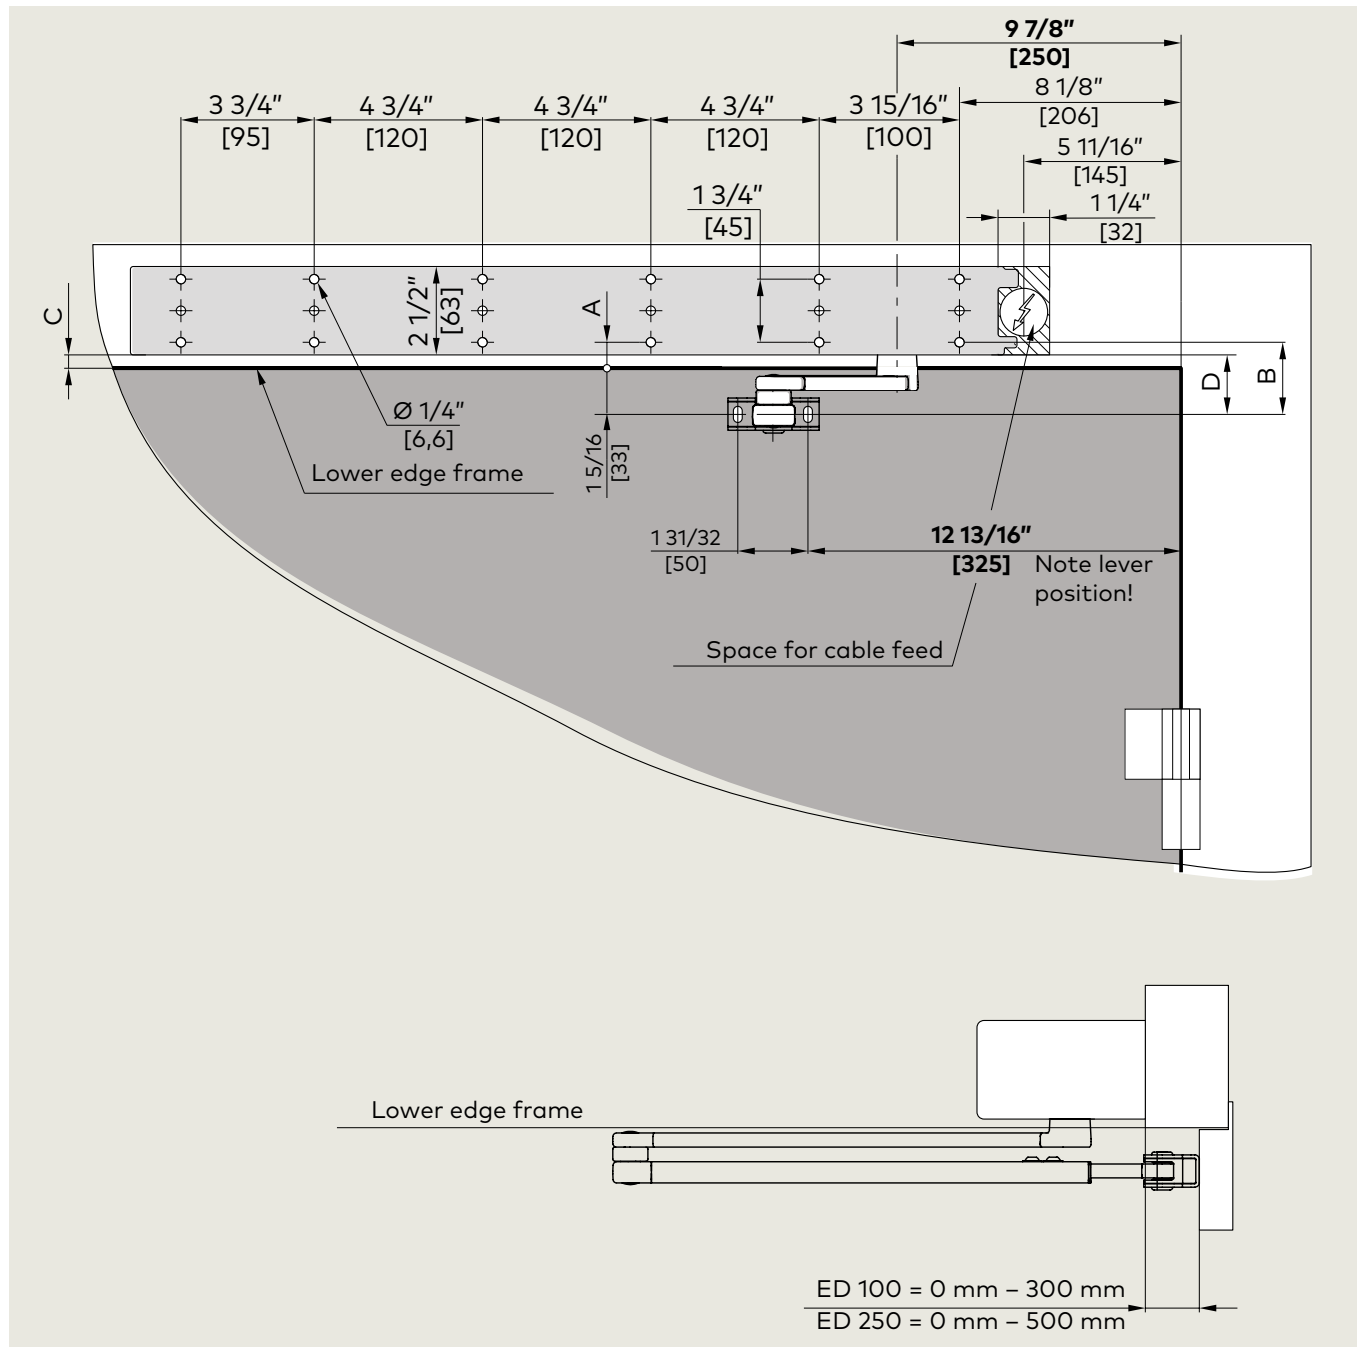


Axle extension	ED900	A		B		C		D	
		Inches	mm	Inches	mm	Inches	mm	Inches	mm
Standard	●	11/16	18	2	51	11/32	9	1 21/32	42
3/4" [20]	●	1 1/2	38	2 13/16	71	1 1/8	29	2 7/16	62
1 3/16" [30]	●	1 7/8	48	3 3/16	81	1 13/32	39	2 13/16	72
2 3/8" [60]	●	3 1/16	78	4 3/8	111	2 23/32	69	4	102

# 14 ED900 operator and mounting plate preparation

## 14.1 Remove mounting plate from ED900 operator

- 5 115 Vac plug
- 6 115 Vac socket

Fig. 14.1.1 115 Vac plug removal

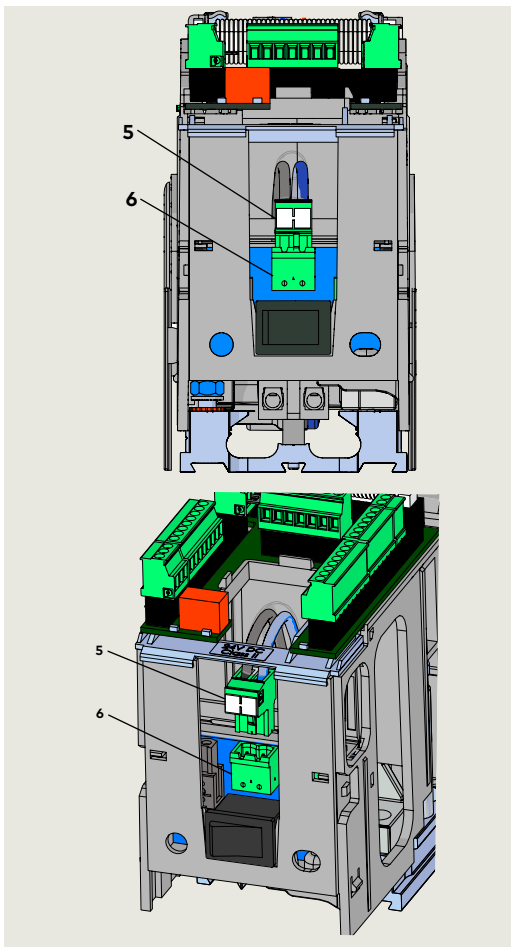

### 14.1.1 Remove 115 Vac plug from receptacle.

1. Remove 115 Vac plug (5) from its receptacle (6).

### 14.1.2 Remove mounting plate from ED900 operator.

1. Loosen all eight captive ED900 M6 socket head cap screws (SHCS) using a 5 mm hex T-handle.

**i** **TIPS AND RECOMMENDATIONS**

Insure all eight fasteners are free of the mounting plate.


2. Remove operator from mounting plate.

**i** **TIPS AND RECOMMENDATIONS**

Guide pin resistance may require screwdriver to start operator removal from end of mounting plate (Fig. 14.1.3).

- 1 ED900 operator
- 2 Mounting base
- 3 M6 x 20 SHCS
- 4 M6 x 10 SHCS
- 5 Guide pin
- 6 115 Vac plug

Fig. 14.1.2 Mounting plate removed from ED900 operator

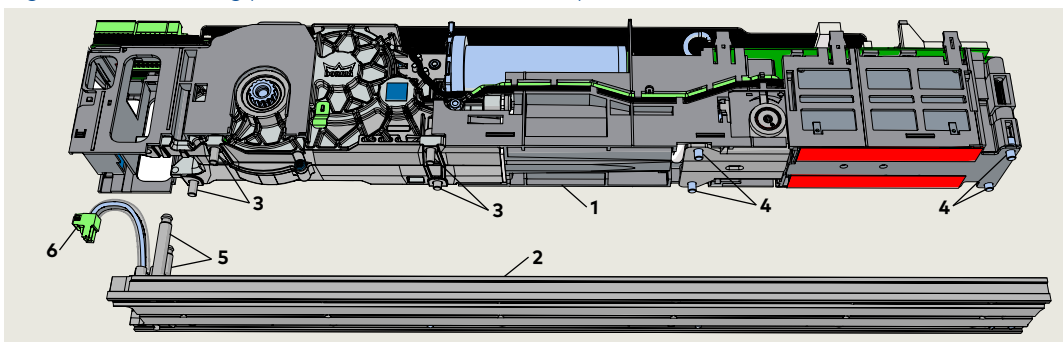

- 4 Guide pin

Fig. 14.1.3 Mounting plate removal


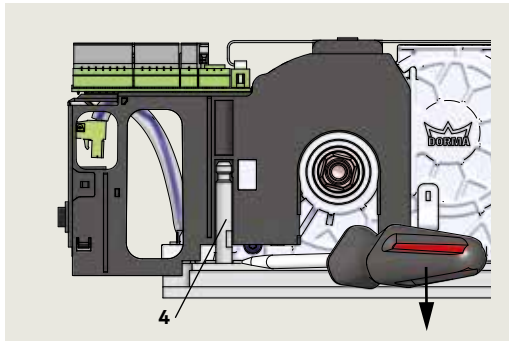


Fig. 14.1.4 5mm T-handle hexkey

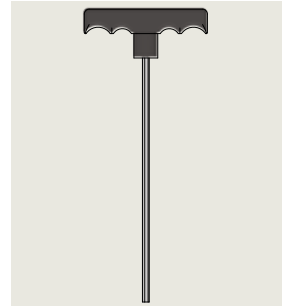

## 14.2 Options – Customer 115 Vac connection to terminal blocks

Fig. 14.2.1 115 Vac terminal block

- 1 115 VAC terminal block
- 2 Ground terminal
- 3 Mains terminal torque and wire label
- 5 M3.5 screw
- 6 115 Vac plug to operator
- L 115 Vac
- N Neutral
- G Ground

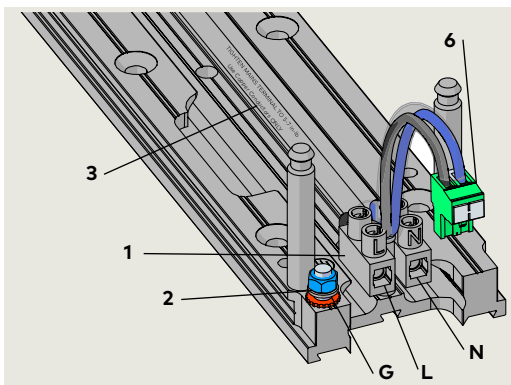


Fig. 14.2.2 Mains terminal torque and wire label

TIGHTEN MAINS TERMINAL TO 5-7 in-lb  
Use Copper Conductors ONLY

Fig. 14.2.3 Conduit box 08120730

- 4 Conduit box


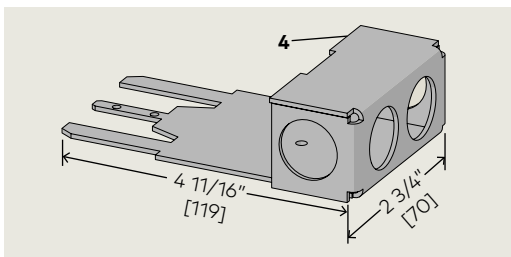


Fig. 14.2.4 Power cord wiring kit 08121110



- 1 Power cord
- 2 Wire nut
- 3 Cord grip
- 4 Conduit box
- 5 120 Vac label

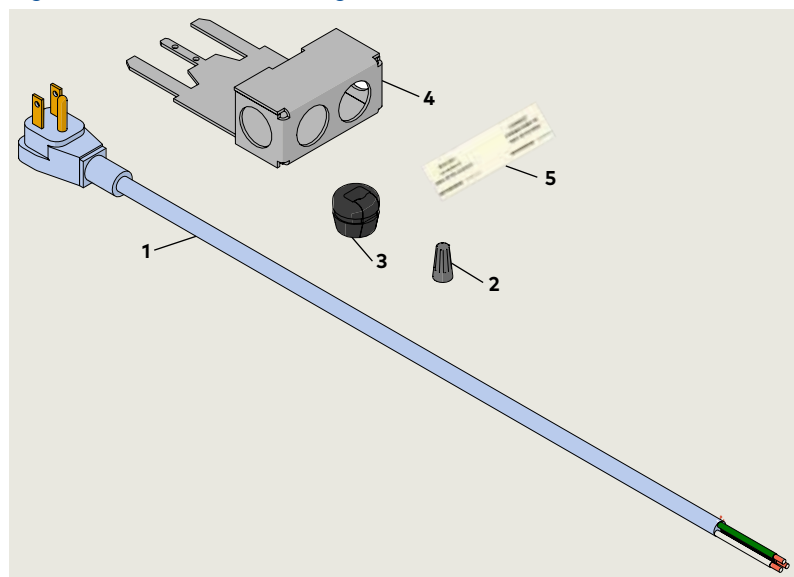

**WARNING**

Work on electrical equipment and 115 Vac wiring installation must be performed only by qualified personnel!

**14.2.1 Conduit box.**

1. Conduit box (Fig. 14.2.3).
  - U/L approved conduit box accessory; provides 115 Vac surface wiring to ED900.
  - Reference Para. 14.2.6 for conduit box installation.

**14.2.2 Power cord wiring kit.**

1. Power cord wiring kit (Fig. 14.2.4).
  - Eliminates need for hard wiring. Permits ED900 to plug directly into 115 Vac receptacle.
  - Power cord length: 15" from end of conduit box to center of plug.

**CAUTION**

Insure power cord installation conforms to local and national electrical codes.

Fig. 14.2.5 115 Vac terminal block mounting

- 1 115 VAC terminal block
- 2 Ground terminal
- 5 M3.5 screw
- 6 115 Vac plug to operator
- L 115 Vac
- N Neutral
- G Ground

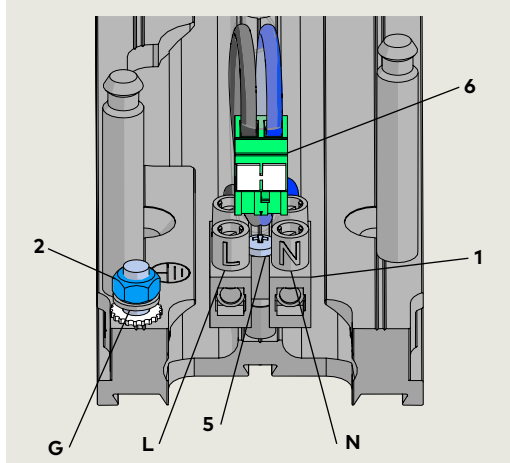


Fig. 14.2.6 Conduit box installed on mounting plate

- 1 115 VAC terminal block
- 2 Ground terminal
- 5 M3.5 screw
- 6 115 Vac plug to operator
- 7 Conduit box
- 7.1 Conduit box mounting hole


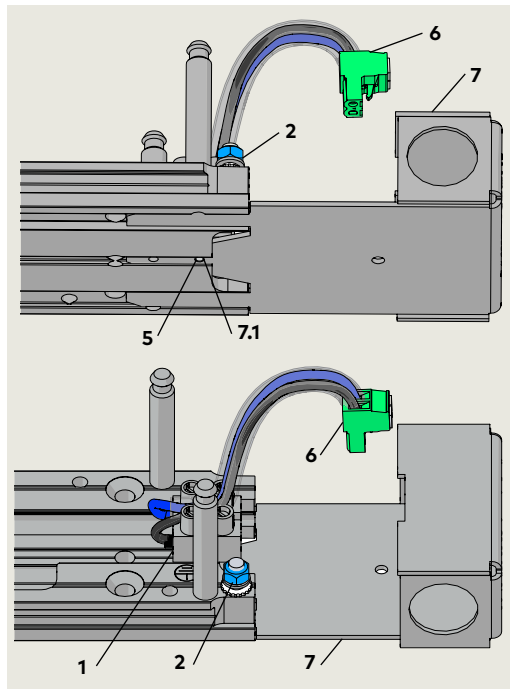


Fig. 14.2.7 Power cord wiring kit assembly (option)

- 1 Power cord
- 3 Cord grip
- 4 Conduit box
- 5 120 Vac label



14.2.3 Install conduit box (option).

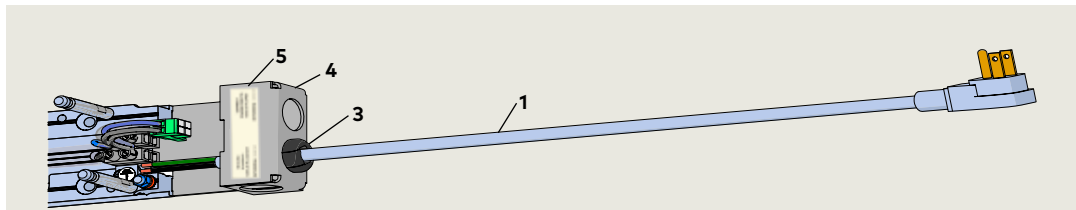

**TIPS AND RECOMMENDATIONS**

115 Vac terminal block is secured to mounting plate by M3 x 25 Phillips head screw.

- Screw must be loosened to allow conduit box tabs to slide into mounting plate slots.
- Screw is then threaded into conduit box mounting hole and tightened.

1. Loosen M3 x 25 Phillips head screw.
2. Slide conduit box tabs into slots in bottom of mounting plate until hole in conduit box lines up with hole in mounting plate.
3. Thread M3 Phillips head screw into conduit box mounting hole and tighten screw.

**CAUTION**

**Terminal block M3 screw torque.**

Tighten M3 screw to a torque of 5 - 7 in-lb.


- Insure screw is threaded into conduit box mounting hole.

4. Mounting plate assembly is ready for installation.

# 15 ED900 mounting plate and operator installation


## 15.1 Mounting plate attachment to jamb or wall

Fig. 15.1.1 Mounting plate installation

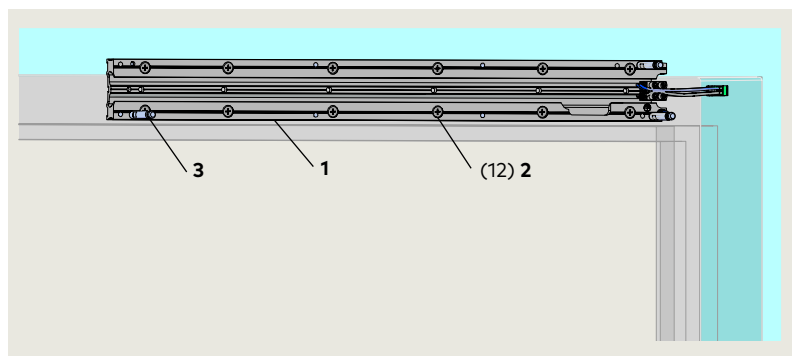


- 1 ED900 mounting plate
- 2 Mounting hole
- 3 Guide pin

Fig. 15.1.2 Mounting plate installation with conduit box

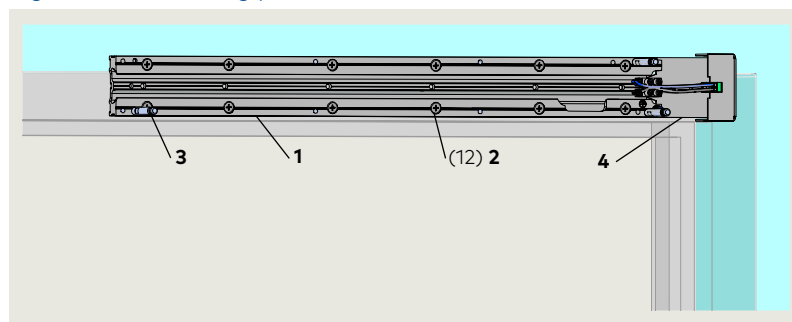


- 1 ED900 mounting plate
- 2 Mounting hole
- 3 Guide pin
- 4 CB conduit box

Fig. 15.1.3 Mounting plate fasteners

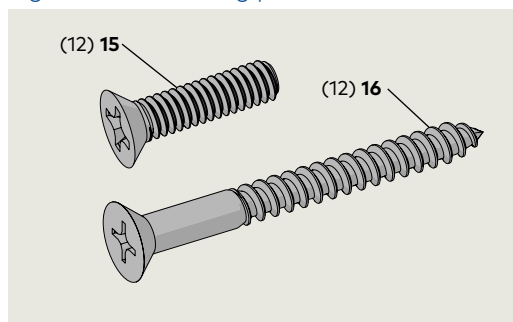

- 15,16 Mounting plate fastener kit**  
08120570
- 15 1/4-20 x 1" FH machine screw
  - 16 No. 14 x 2 1/2" FH wood screw

Fig. 15.1.4 Guide pin

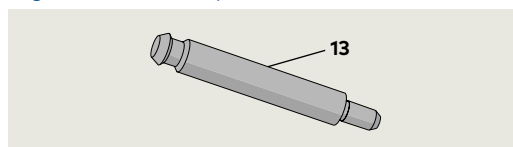

- 13 Guide pin

**NOTICE**

**Installation templates**  
Mounting plate installation location based on selected installation template.  
 • Reference Chapter 13 for installation templates.

**CAUTION**

**Optional full width cover installation.**  
Reference Para. 15.5 for mounting plate extension installation.

**15.1.1 Fasten mounting plate to jamb and/or wall.**

**CAUTION**

**ED900 conduit box (if used):**

- Insure ED900 conduit box or plate is prepared with applicable conduit fitting or cord grip.
- Insure jamb or wall is prepared for wiring to ED900 conduit fitting or cord grip.

1. Using selected template as a guide, prepare twelve mounting holes for mounting plate fasteners (Fig. 15.1.3).

**CAUTION**

- Select fasteners based on door frame and wall material.
- Use fasteners provided with ED900 (Chapter 5).

2. Fasten mounting plate to door frame and/or wall.

**12.7.2 Install third guide pin.**

1. Install third guide pin (Fig; 15.1.2/3) in mounting plate.
  - Use 3 mm hex T-handle or hex key.

## 15.2 Connect customer 115 Vac to ED900 mounting plate terminal block

- 4 115 Vac terminal block
- 5 Ground post

Fig. 15.2.1 115 Vac wiring example

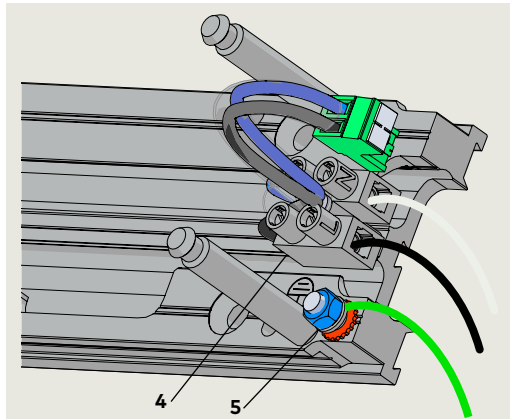


Fig. 15.2.2 Conduit box installation


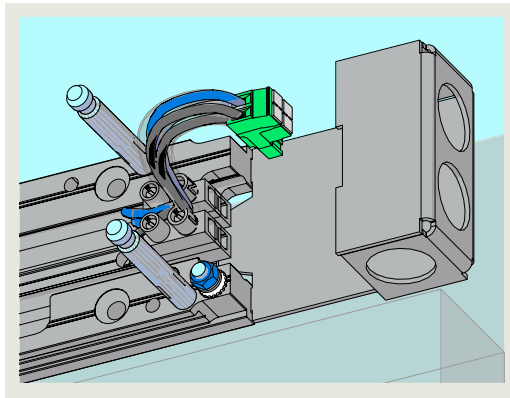


Fig. 15.2.3 PC power cord, conduit box installation



### 15.2.1 Connect customer 115 Vac wiring.

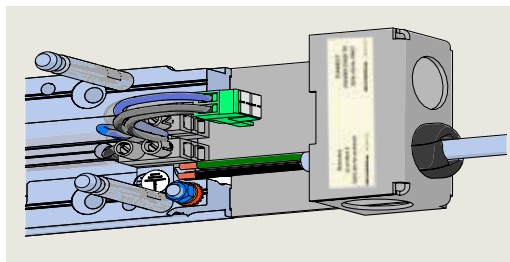

#### WARNING

Work on electrical equipment and 115 Vac wiring installation must be only be performed by qualified personnel!

1. Route wiring to 115 Vac terminal block.

#### CAUTION

#### 115 Vac wiring.

Use copper conductors only!

1. Connect 115 Vac wiring to terminal block.
  - Terminal block screw tightening torque.

TIGHTEN MAINS TERMINAL TO 5-7 in-lb  
Use Copper Conductors ONLY

2. Connect earth ground to ground post.

## 15.3 Route accessory wiring to mounting plate

Fig. 15.3.1 Mounting plate slots for accessory wiring




### 15.3.1 Route accessory wiring to mounting plate.

1. Route wiring to 115 Vac terminal block side of mounting plate (Fig. 15.2.1).
2. Accessory wiring opposite door hinge side: route wiring into mounting plate track (Fig. 15.3.1) to 115 Vac terminal block side of mounting plate.

## 15.4 Remove protective film strips from operator

- 1 Operator heat conductive pads

Fig. 15.4.1 Operator heat conductive pads

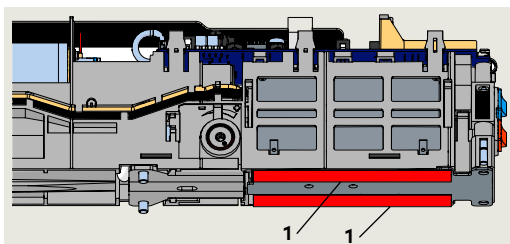

### 15.4.1 Remove protective film strips.

1. Remove two protective film strips from operator heat conductive pads.


**CAUTION**

**Heat conductive pads.**

Heat conductive pads must remain clean once protective film strips are removed!

## 15.5 Install ED900 operator onto mounting plate

Fig. 15.5.1 Installation of ED900 on mounting plate

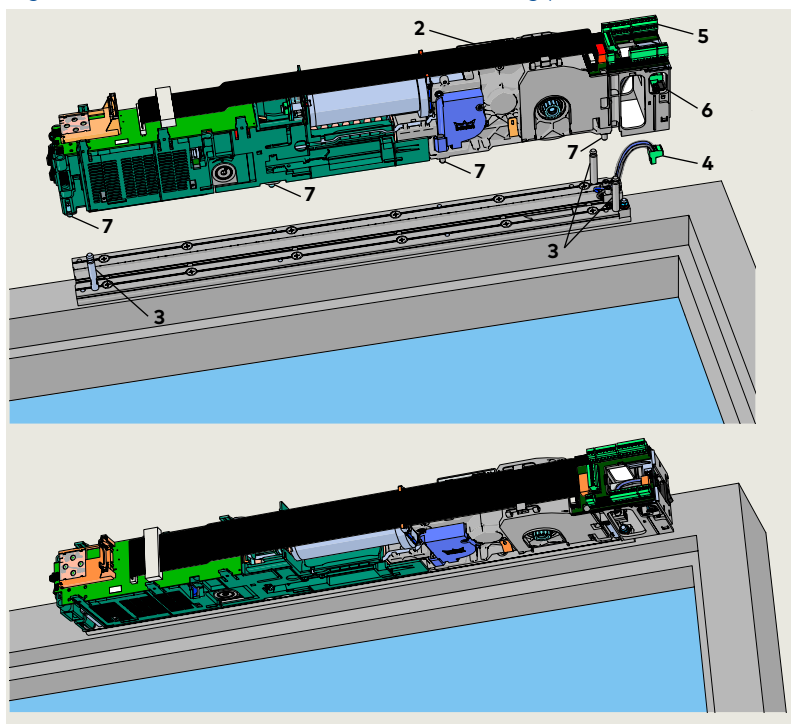

- |                        |                |  |
|------------------------|----------------|--|
| 1 ED900 mounting plate | 3 Guide pin    | 5 Accessory wiring terminal connectors |
| 2 ED900 operator       | 4 115 Vac plug | 6 115 Vac socket                       |
|                        |                | 7 M6 x 10 SHCS                         |

- |                       |
|-----------------------|
| 4 115 Vac plug        |
| 6 115 Vac socket      |
| 7 Power off/on switch |

### 15.5.1 Install ED900 operator onto mounting plate.

**CAUTION**

**Protective film strip removal.**

Insure two protective film strips have been removed from operator heat conductive pads (Para. 15.4).

1. Slide ED900 operator over the three mounting plate guide pins and onto mounting plate.
  - Guide 115 Vac plug (4) into ED900 housing adjacent to socket (6).
2. Thread the eight captive ED900 M6 SHCS (7) into their mounting plate holes using 5 mm hex T-handle.
3. Tighten the eight M5 SHCS.

### 15.5.2 Insert 115 Vac plug into socket.

1. Insert 115 Vac plug from mounting plate 115 Vac terminal block into ED900 socket (Fig. 15.5.2).

### 15.5.3 Full width cover option.

**CAUTION**

**Program switch wiring.**

Reference Para. 15.6 for program switch wiring terminal connections.

Fig. 15.5.2 ED900 115Vac plug and socket


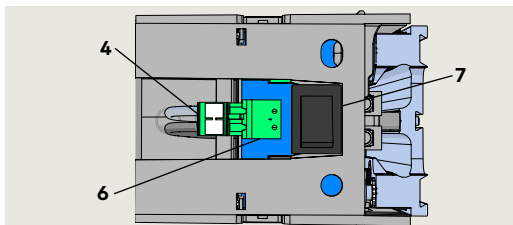


Fig. 15.5.3 ED900 terminal connectors




- |               |
|---------------|
| 11 Connectors |
| 12 Jumpers    |

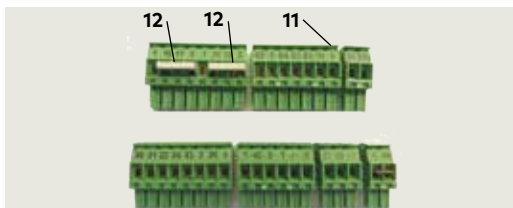

## 15.6 Full width cover (option) installation instructions

Fig. 15.6.1 Mounting plate

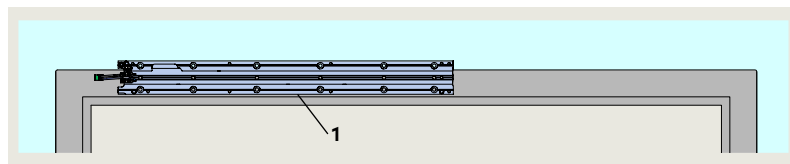

1 Mounting plate

Fig. 15.6.2 Mounting plate extension

2 Mounting plate extension





Fig. 15.6.3 Mounting plate extension installation

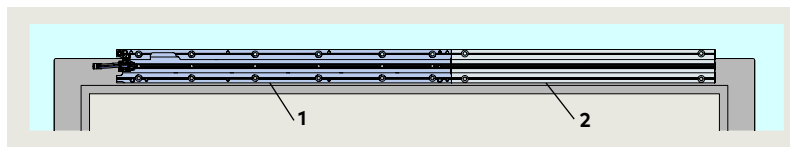

1 Mounting plate

2 Mounting plate extension

### 15.6.1 Install ED900 mounting plate.

Mounting plate installation:

- Reference Chapter 13 for installation templates.

### 15.6.2 Secure mounting plate extension to door frame and/or wall.

1. Align mounting plate extension with mounting plate.
2. Mark mounting plate extension hole locations in frame and/or wall. Drill four holes for selected fasteners.

#### CAUTION

Use fasteners provided with ED900. Ref. Chapter 5.

3. Secure mounting plate extension to door frame or wall with No. 14 wood screws or 1/4-20 machine screws.


### 15.6.3 Mounting plate installation checks.

#### CAUTION

- Check level.
- Check spindle to hinge centerline distance.
- Check alignment.

Fig. 15.6.4 Professional cover bracket

3 Professional cover bracket  
3.1 Bracket collar

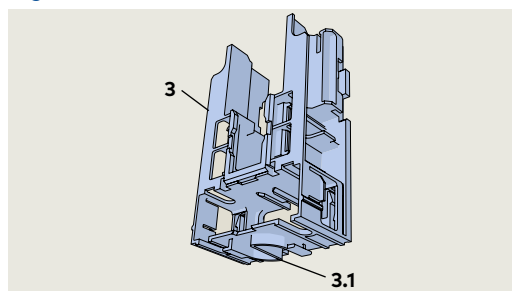

### 15.6.4 Install cover bracket.

1. Insert cover bracket collar into mounting plate groove at an angle (Fig.15.6.5)
2. Rotate cover bracket parallel to mounting plate extension.
3. Position bracket under set of M6 screws and washers at end of extension.

Fig. 15.6.5 Install cover bracket

2 Mounting plate extension  
3 Professional cover bracket



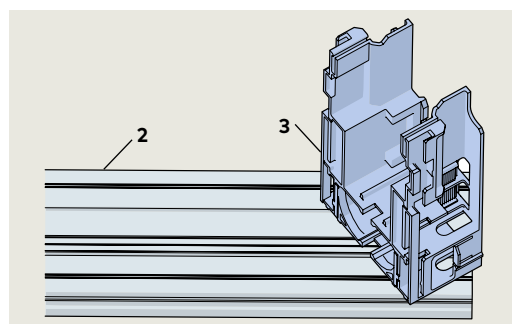


Fig. 15.6.6 Cover bracket installed

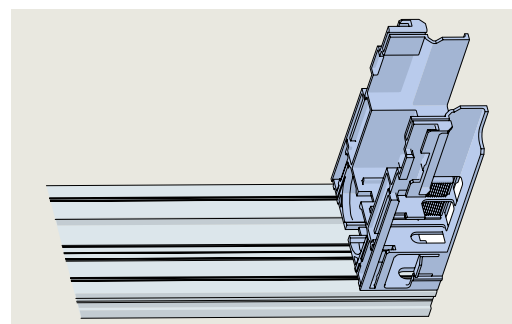

- 4 Program switch kit DC3482-010

Fig. 15.6.7 Program switch kit

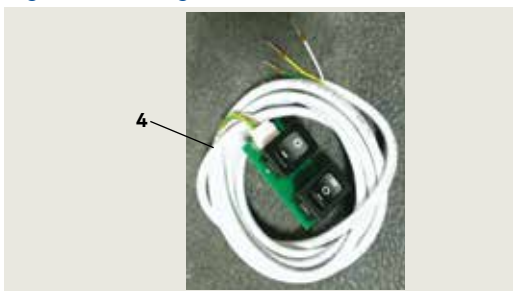

**15.6.5 Install program switches.**


1. Install program switch assembly; slide program switch board into cover bracket slot.

**15.6.6 Secure program switch cable.**

1. Place program switch cable in mounting plate groove and secure with 1.5 x 1" wire retainers.
2. Coil any remaining cable and secure to mounting plate with cable ties.

- 3 Professional cover bracket DC3481-010
- 4 Program switch kit DC3482-010

Fig. 15.6.8 Program switch installation

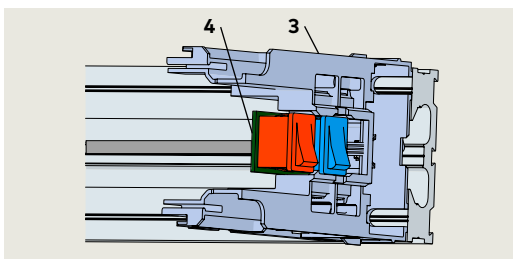

**NOTICE**

**Program switch wiring.**

Once ED900 operator is installed, program switch wires will be connected to terminal board (Fig. 15.6.10).

- 3 Professional cover bracket DC3481-010
- 4 Program switch kit DC3482-010
- 4.1 Program switch cable

Fig. 15.6.9 ED900 installation with mounting plate extension


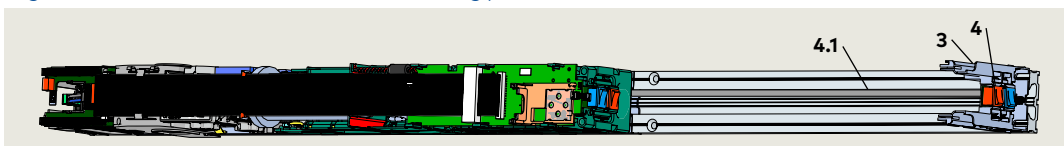


Fig. 15.6.10 ED900 program switch wiring

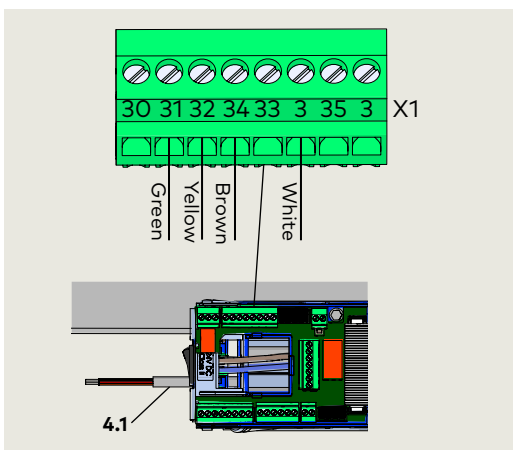

- 4.1 Program switch cable

# 16 J/ Push arm installation


## 16.1 Push arm installation templates

**NOTICE**

Reference Chapter 13 for push arm installation templates.

- 1 J8/Standard push arm, reveal depths 0 - 8" maximum
- 2 J12/Deep push arm reveal depths 8 - 12" maximum


Fig. 16.1.1 Push arm assemblies

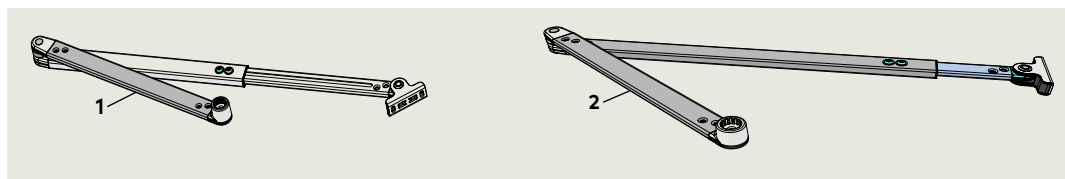

## 16.2 Push arm installation

- 1 Splined drive arm
- 2 Socket
- 4 Adjustment arm 11 1/4" [285]
- 5 Adjustment arm tube 12 1/4" [311]
- 6 Shoe
- 7 M6 x 10 mm flanged button head screw
- 8 Ball head
- 11 Shoe screw cover
- 12 M8 x \_\_\_ SHCS
- 13 Cap

Fig. 16.2.1 J8/Splined push arm assembly, 8 7/8" [225]

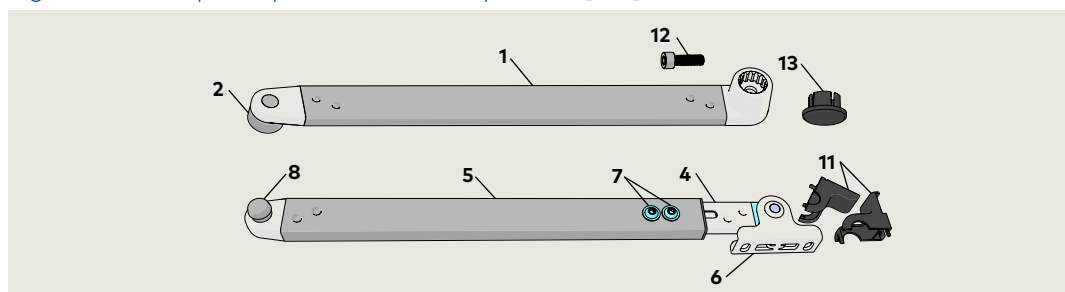

- 1 Splined drive arm
- 2 Socket
- 6 Shoe
- 7 M6 x 10 mm flanged button head screw
- 8 Ball head
- 9 Adjustment arm, 17 3/4" [450]
- 10 Adjustment arm tube, 17 3/4" [450]
- 11 Shoe screw cover
- 12 M8 x \_\_\_ SHCS
- 13 Cap

Fig. 16.2.2 J12/Splined push arm assembly, 19 11/16" [500]

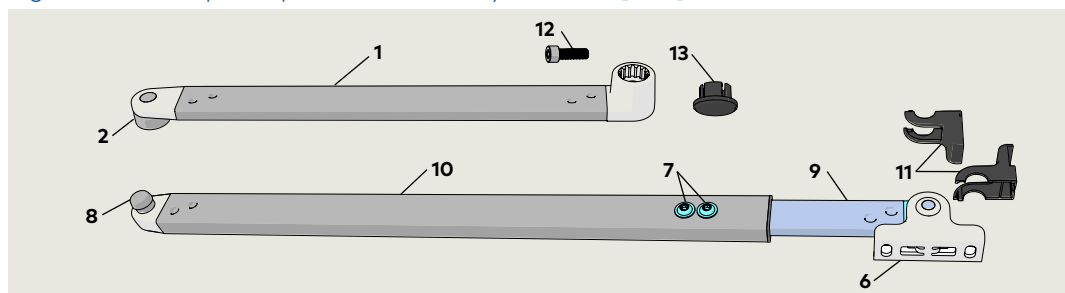


Fig. 16.2.3 Drive arm

- 1 Drive arm
- 2 Socket
- 3 Arm axle sleeve



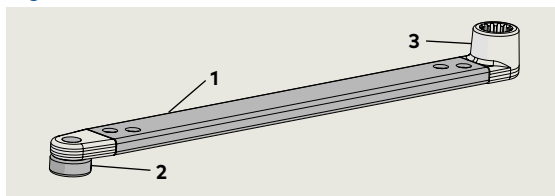


Fig. 16.2.4 Drive arm axle extension installation

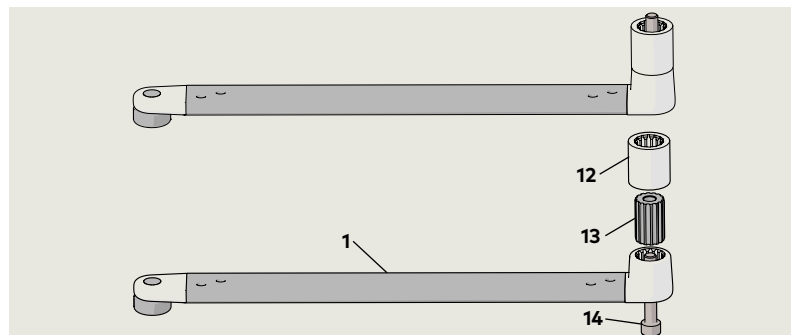

- 1 Drive arm
- 12 Axle extension sleeve
- 13 Axle extension
- 14 M8 x \_\_\_ SHCS


Fig. 16.2.5 Push arm assemblies for installation

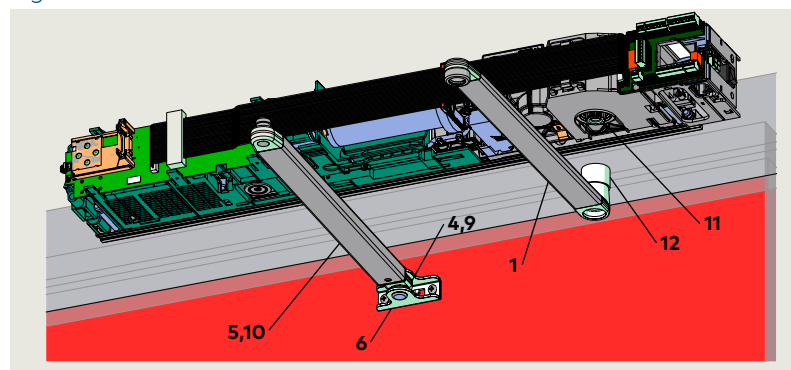

- 1 Drive arm
- 4 Adjustment arm 11 1/4" [285]
- 5 Adjustment arm tube 12 1/4" [311]
- 6 Shoe
- 7 M6 x 10 mm flanged button head screw
- 8 Ball head
- 9 Adjustment arm, 17 3/4" [450]
- 10 Adjustment arm tube, 17 3/4" [450]
- 11 ED900 spindle
- 12 Axle extension sleeve

Fig. 16.2.6 Arm assemblies attached to door and ED900

- 1 Drive arm
- 6 Shoe
- 9 Adjustment arm, 17 3/4" [450]
- 10 Adjustment arm tube, 17 3/4" [450]

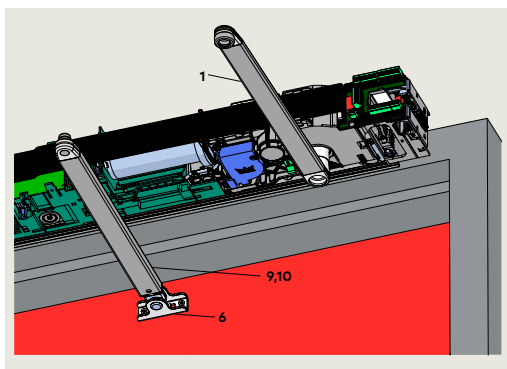

**16.2.2 Attach drive arm to operator.**

**CAUTION**

Door must be fully closed!



**WARNING**

Use caution when working in proximity of door and push arm!.

**CAUTION**

**ED operator axle zero position.**

In order to mount the drive arm in the correct position, the axle must be brought to the zero position.

1. Set ED operator spring preload to approximately ten clockwise rotations.
  - Axle rotates to the zero position.



**TIPS AND RECOMMENDATIONS**

Reference Chapter 19, Operator spring tension.

2. Insert axle extension into drive arm.
3. Move arm to ED900, inserting arm into operator spindle at a 90° angle (Fig. 16.2.5).
4. Insert M8 SHCS through drive arm and axle extension. Thread SHCS into ED900 spindle and tighten.

**CAUTION**

Use torque wrench with hex key socket to tighten SHCS to 17 ft-lb [23 Nm]

**16.2.3 Drill two holes in door for adjustment arm shoe.**

Installation templates (Chapter 13) document location of shoe on door.

1. Drill two holes in door for adjustment arm shoe.
  - Fastener type based on door material.




**TIPS AND RECOMMENDATIONS**

Reference Chapter 5, Accessory kits, for arm fasteners.

**16.2.4 Secure adjustment arm assembly to door.**


1. Fasten adjustment arm assembly to door (Fig. 16.2.6).

Fig. 16.2.7 Arm assemblies attached to door and ED900

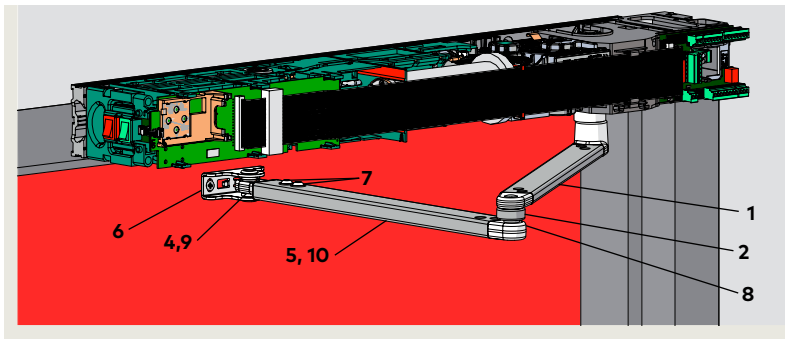

- |                                |  |                                 |
|--------------------------------|--|---------------------------------|
| 1 Drive Arm                    | 5 Adjustment arm tube 12 1/4" [311]    | 8 Ball head                     |
| 2 Socket                       | 6 Shoe                                 | 9 Adjustment arm, 17 3/4" [450] |
| 4 Adjustment arm 11 1/4" [285] | 7 M6 x 10 mm flanged button head screw |                                 |

Fig. 16.2.8 Drive arm, adjustment arm connection

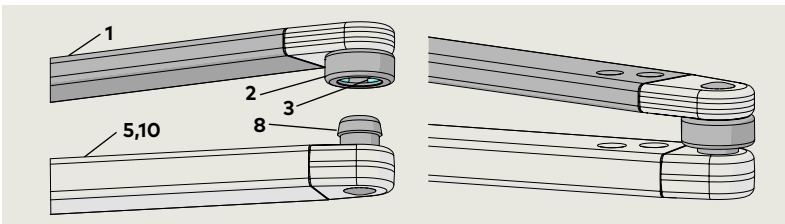

- |  |                                       |             |
|--|---------------------------------------|-------------|
| 1 Drive arm                            | 5 Adjustment arm tube 12 1/4" [311]   | 8 Ball head |
| 2 Socket                               | 10 Adjustment arm tube, 17 3/4" [450] |             |
| 3 Spring                               |                                       |             |
| 7 M6 x 10 mm flanged button head screw |                                       |             |

Fig. 16.2.9 Adjustment arm M6 x 10 screws


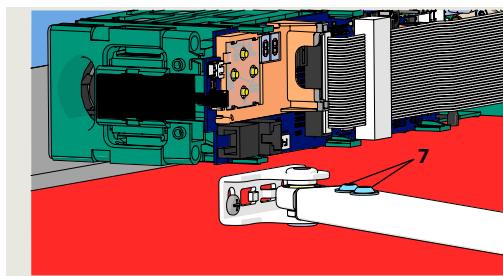


Fig. 16.2.10 Adjustment arm at 90° angle to door

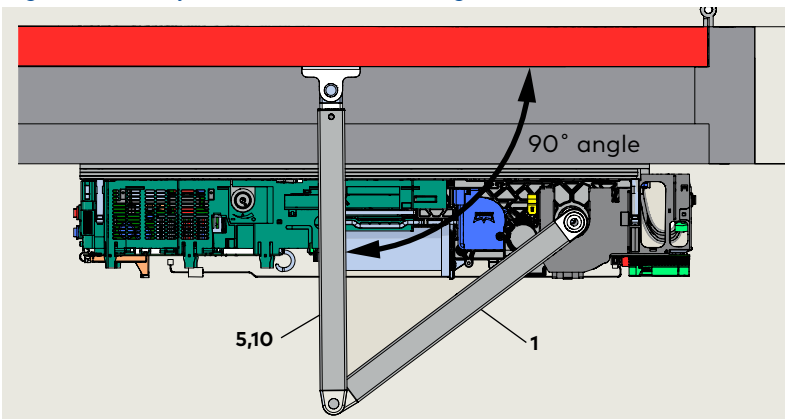

- |             |                                     |                                       |
|-------------|-------------------------------------|---------------------------------------|
| 1 Drive Arm | 5 Adjustment arm tube 12 1/4" [311] | 10 Adjustment arm tube, 17 3/4" [450] |
|-------------|-------------------------------------|---------------------------------------|

**16.2.5 Connect adjustment arm to drive arm.**

- Loosen the two adjustment M6 x 10 mm flanged button head screws (Fig. 16.2.9).
- Using square, position adjustment arm assembly at 90° angle to door (Fig. 16.2.10).
- Rotate drive arm and adjust length of adjustment arm until drive arm ball head (8) is aligned with adjustment arm socket (2).

**CAUTION**

Maintain adjustment arm assembly at a 90° angle to door.


- Insert adjustment arm ball head (8) into drive arm socket (2).
  - Spring in socket will retain ball head in socket.
- Secure adjustment arm position by tightening the two M6 x 10 mm flanged button head screws.

**CAUTION**

Recheck that adjustment arm is at 90° angle to door.

- Install shoe screw covers.

Fig. 16.2.11 Shoe screw covers

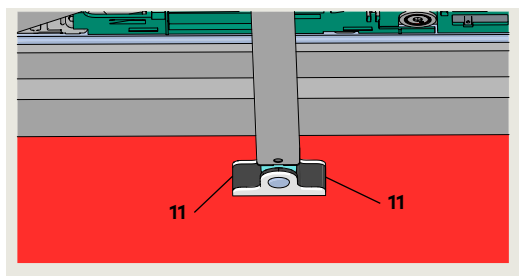

- |                      |
|----------------------|
| 11 Shoe screw covers |
|----------------------|

# 17 Arm with track mount installation

## 17.1 Arm with track installation

**NOTICE**

Reference Chapter 13 for pull arm and pull arm as push installation templates.

## 17.2 Splined arm and track assemblies

Fig. 17.2.1 T275/Splined arm with CPD lever and track assembly, LH

- 1 Drive arm
- 2 CPD
- 3 Track

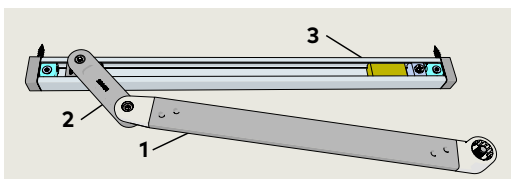


Fig. 17.2.3 T/Splined arm and track assembly


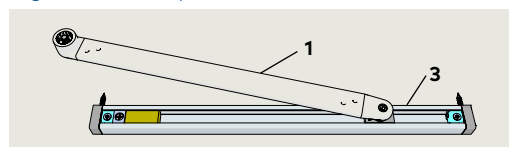


Fig. 17.2.2 T275/Splined arm with CPD lever and track assembly, RH


- 1 Drive arm
- 2 CPD
- 3 Track

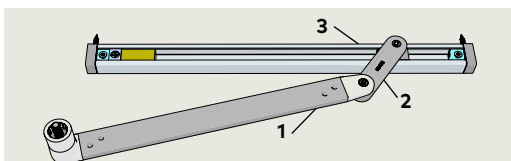

## 17.3 Splined arm and track hardware

Fig. 17.3.1 Track assembly


- 1 Track
- 2 End cap
- 3 Fixing piece
- 3.1 M5 x 15 Phillips FHS
- 4 Pull arm
- 5 20 mm axle extension
- 5.1 Splined sleeve
- 6 CPD lever
- 6.1 M6 x 10 SHCS
- 7 Slotted spring pin
- 8 Pull arm cap
- 9 Slide shoe
- 10 Pivot pin
- 11 Retaining ring
- 12 Bumper
- 13 M8 x 1.25 x 40 SHCS
- 14 Wood screws
- 15 Machine screws
- 16 Bumper stop
- 17 M5 x 13 FHMS cross recessed

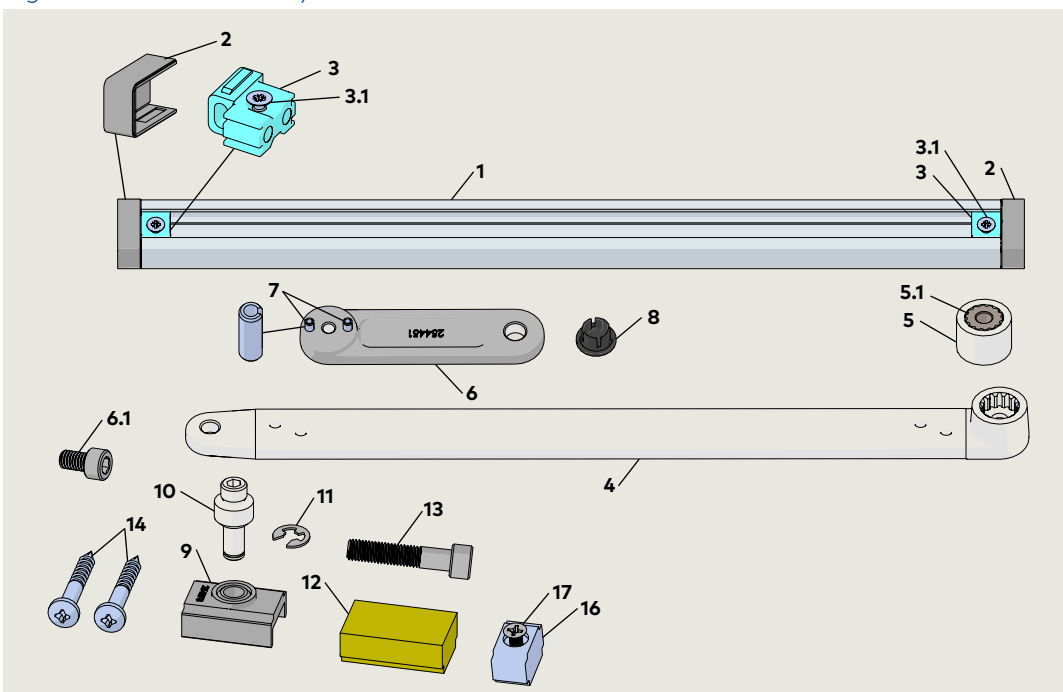

## 17.4 Slide shoe assembly

- 9 Slide shoe
- 10 Pivot pin
- 11 Retaining ring

Fig. 17.4.1 Slide shoe and pivot pin

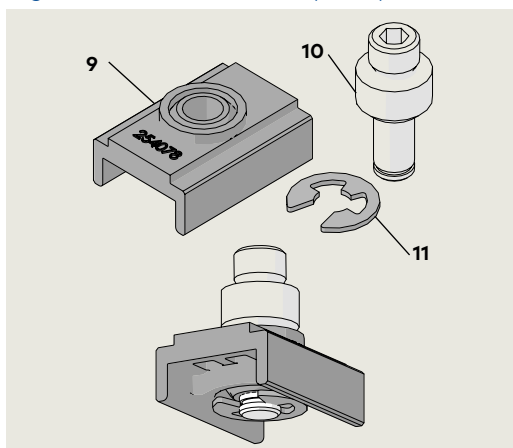


### 17.4.1 Install pivot pin into slide shoe.

1. Insert pivot pin into slide shoe.
2. Install spring clip into pivot pin slot.


## 17.5 Install hardware into track

Fig. 17.5.1 RH track assembly

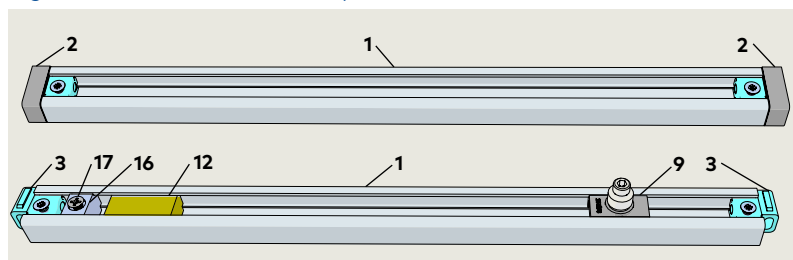

- |                |              |                                |
|----------------|--------------|--------------------------------|
| 1 Track        | 9 Slide shoe | 16 Bumper stop                 |
| 3 Fixing piece | 12 Bumper    | 17 M5 x 13 FHMS cross recessed |

Fig. 17.5.2 LH track assembly

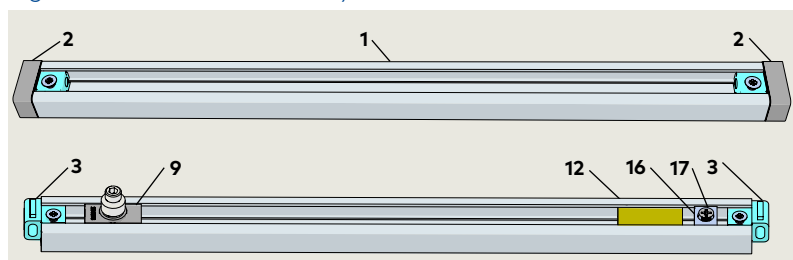

- |                |              |                                |
|----------------|--------------|--------------------------------|
| 1 Track        | 9 Slide shoe | 16 Bumper stop                 |
| 3 Fixing piece | 12 Bumper    | 17 M5 x 13 FHMS cross recessed |

### 17.5.1 Track assembly.

**CAUTION**

Assemble track hardware based on RH or LH installation.

1. Remove both end caps (2) and one fixing piece (3) from track.
1. Slide bumper stop (16), bumper (12) and slide shoe assembly (9) into track.
  - Do not tighten bumper stop M5 screw (17).
2. Secure fixing piece to end of track with M5 x 15 screw (3.1).
  - Use No. 2 Phillips, do not over-tighten.

## 17.6 Fasten track assembly to door

Fig. 17.6.1 Track assembly

- 1 Track
- 2 Fixing piece
- 9 Slide shoe
- 12 Bumper
- 14 Wood screw


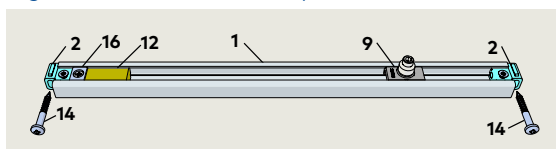


Fig. 17.6.2 Track installation

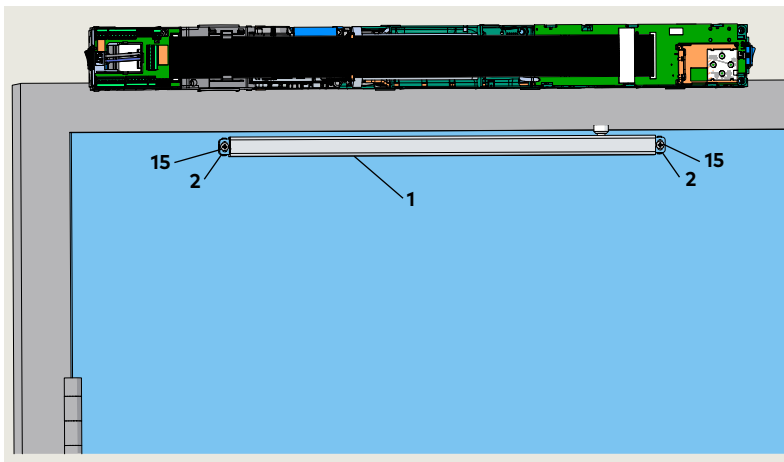

- 2 Fixing piece
- 15 Fastener
- 3 Track

Fig. 17.6.3 End cap

- 2 End cap


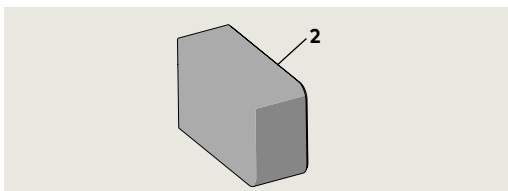


Fig. 17.6.4 End cap installation

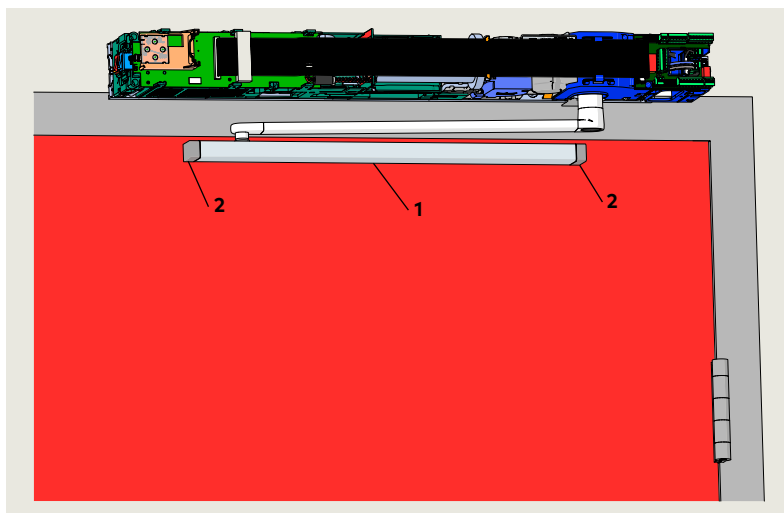

- 1 Track
- 2 End cap

### 17.6.1 Mount track assembly on door.

#### CAUTION

Insure track hardware is assembled for hand of door.

1. Use applicable template (Chapter 13) to locate two track mounting holes on door.

#### CAUTION

##### Fastener type:

Fig. 17.6.1 shows wood screws.

- Select fastener based on door material.

2. Drill holes in door, hole size based on selected screw or fastener (Ref. Chapter 5, Accessory kits).
3. Mount track to door; thread fasteners through fixing pieces (2) into door and tighten.

#### CAUTION

Check track for level when tightening fasteners.

### 17.6.2 Install track end caps.


1. Install track end caps over fixing pieces.



## 17.7 Arm assembly

- 1 Arm

Fig. 17.7.1 Arm assembly



## 17.8 Arm assembly with CPD lever

- 6.1 M6 x 10 SHCS
- 11 Slotted spring pin

Fig. 17.8.1 Slotted spring pin


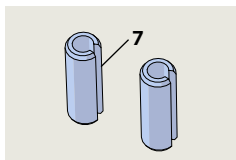


Fig. 17.8.2 M6 x 10 SHCS for CPD

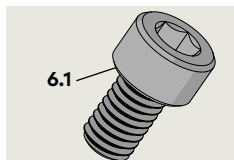

### 17.8.1 Arm with CPD lever assembly.


**CAUTION**

Assemble arm and CPD lever based on RH or LH pull or push.

1. Press CPD lever slotted spring pins into corresponding holes in arm.
2. Secure CPD lever to arm with M6 x 10 SHCS.


- 6 CPD lever
- 7 Slotted spring pin

Fig. 17.8.3 CPD lever and slotted spring pins

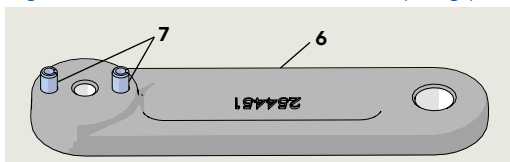


- 6 CPD lever
- 6.1 M6 x 10 SHCS
- 7 Slotted spring pin
- 16 Arm

Fig. 17.8.4 Arm assembly, RH pull, LH push

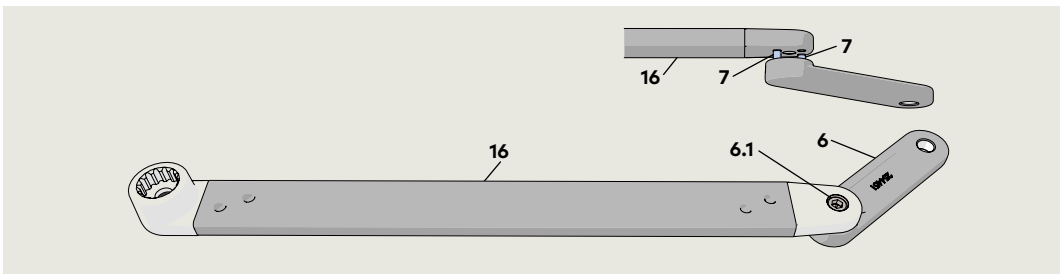

- 6 CPD lever
- 6.1 M6 x 10 SHCS
- 7 Slotted spring pin
- 16 Arm

Fig. 17.8.5 Arm assembly, LH pull, RH push

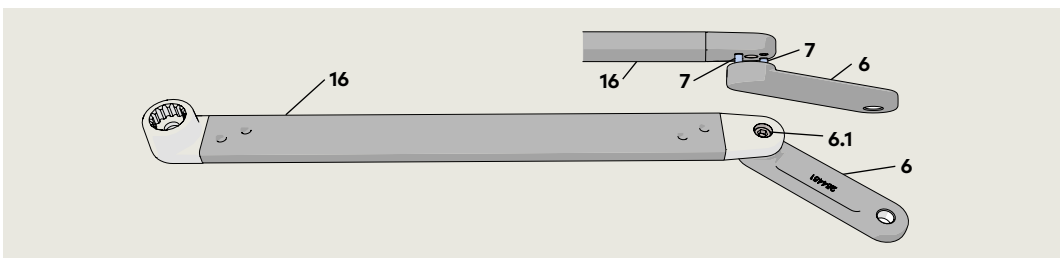

## 17.9 Fasten arm to ED900 operator

Fig. 17.9.1 Mount drive arm to operator at 12 degrees

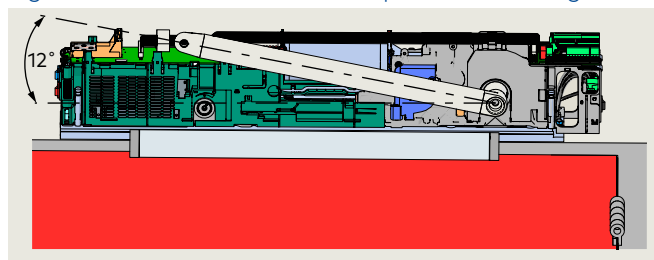


Fig. 17.9.2 Rotate drive arm 10 degrees in door opening direction

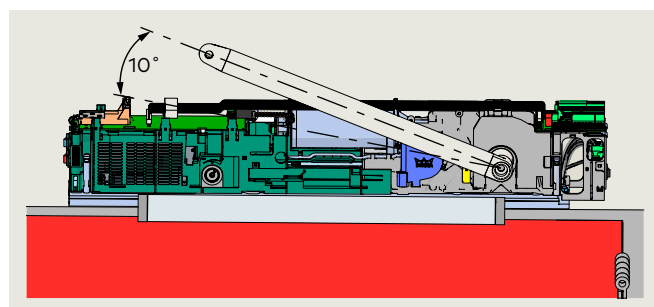


Fig. 17.9.3 Remove drive arm

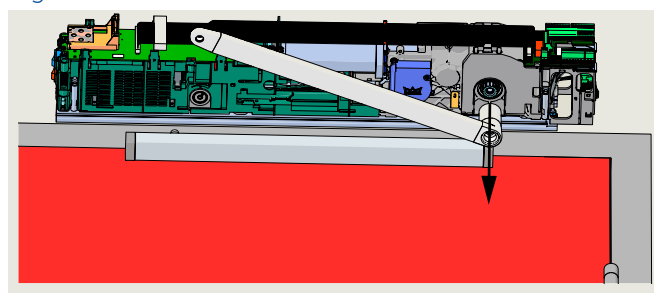


Fig. 17.9.4 Install drive arm and axle extension


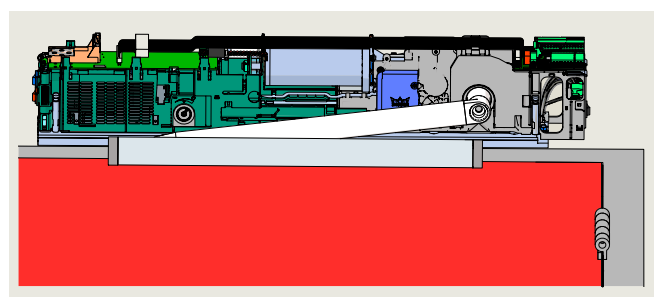


Fig. 17.9.5 Install M8 x \_\_\_ mm SHCS into spindle

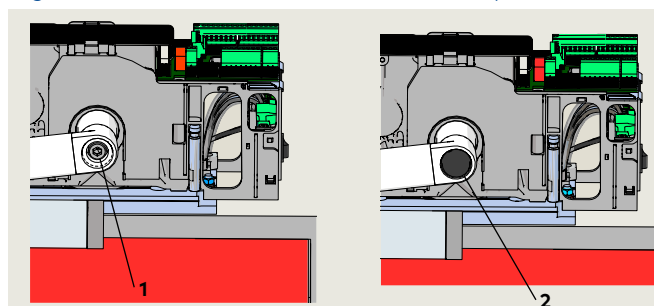

1 M8 x \_\_\_ SHCS

2 Cap

### 17.9.1 Mount drive arm to operator.



#### WARNING

Use caution when working in proximity of door and pull arm!.

#### CAUTION

#### ED operator axle zero position.

In order to mount the drive arm in the correct position, the spindle must be brought to the zero position.

1. Set ED operator spring preload to approximately ten clockwise rotations.
- Axle rotates to the zero position.



#### TIPS AND RECOMMENDATIONS

Reference Chapter 19, Operator spring tension.

2. Turn the spring preload back to zero rotations (fully CCW).
3. Push the drive arm onto the spindle at an angle of approximately 12° to the ED operator (Fig. 17.9.1).
4. Rotate the drive arm/spindle approximately 10° in the door's opening direction (Fig. 17.9.2).
5. Remove the drive arm from the spindle (Fig. 17.9.3).
6. Position the drive arm one tooth in the door's closing direction (Fig. 17.9.4).
7. Push the drive arm / axle extension onto the spindle (Fig. 17.9.4).
8. Thread the M8 x \_\_\_ mm SHCS (length determined by axle extension) into the spindle and tighten SHCS (Fig. 17.9.5).

#### CAUTION

Use torque wrench with hex key socket to tighten M8 screw to 17 ft-lb [23 Nm].

9. Install cap over M8 SHCS (Fig. 17.9.5).

Fig. 17.9.6 Torque wrench, 5 mm hex key

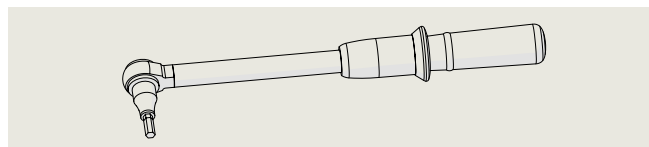


Fig. 17.9.7 Fastening drive arm to pivot pin

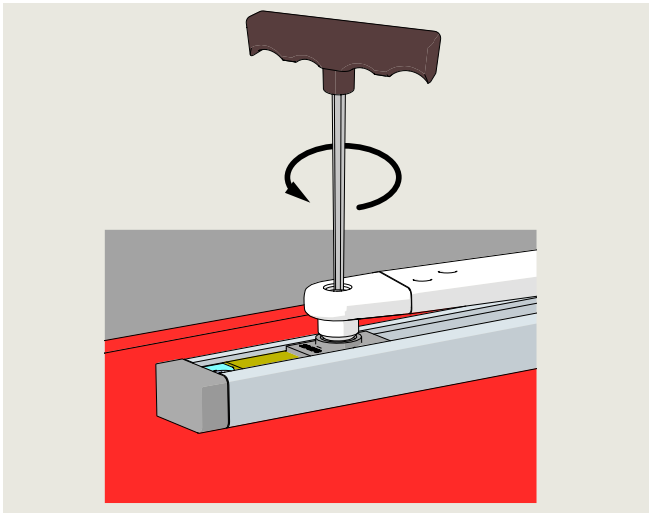


Fig. 17.9.8 Fastening drive arm with CPD to pivot pin

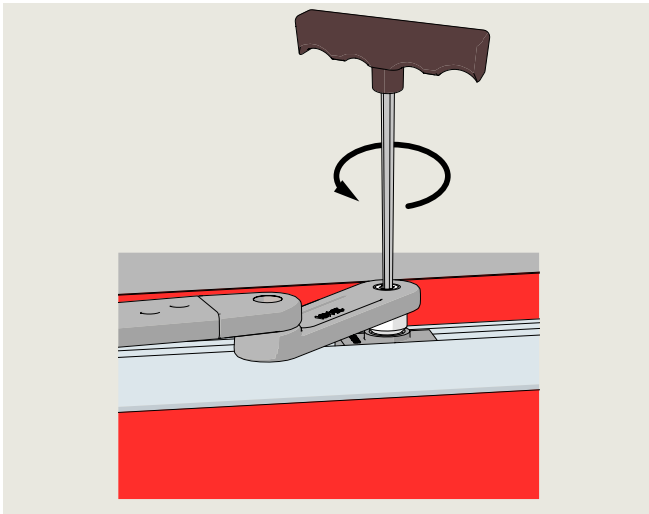
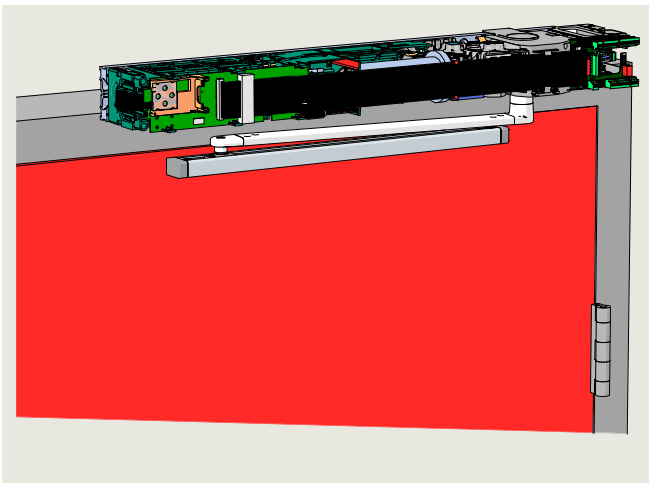


Fig. 17.9.9 Drive arm fastened to track

**17.9.2 Attach drive arm to pivot pin.**

1. Open door as required to access pivot pin M8 socket head.
2. Use 6 mm T handle hex key to rotate pivot pin M8 socket head into drive arm and tighten.

**CAUTION**

Use torque wrench with hex key socket to tighten M8 screw to 5.9 - 7.4 ft-lb [8 - 10 Nm].

**17.9.3 Set operator spring tension.****CAUTION**

A minimum of ten spring tension revolutions are required to operate system.

- Reference Chapter 19 for spring tension adjustment procedure.

# 18 Measure door width, reveal depth

## 18.1 Door width parameter Tb

Parameter	Description	Reference paragraph, parameters
2 <b>Tb</b> 	Door width	Para. 18.1.8

### 18.1.1 Door width parameter

Door width is set in increments of 100 mm (4").

Example:

Measured width of 40" [1016] = **Tb** value of "10".

## 18.2 Record door width measurement, Tb value

Parameter Tb value	Door width measurement


## 18.3 Tb parameter values

### 15.3.1 ED900 door width


Door width measurement			
Inches	[mm]	<b>Tb</b>	Width Inches [mm]
28 - 31 15/16	[711] - [811]	7	28 [711]
32 - 35 15/16	[813] - [912]	8	32 [813]
36 - 39 15/16	[914] - [1014]	9	36 [914]
40 - 43 15/16"	[1016] - [1116]	<b>10*</b>	40 [1016]
44 - 47 15/16	[1118] - [1218]	11	44 [1118]
48 - 51 15/16	[1219] - [1319]	12	48 [1219]

\*Factory setting

Fig. 18.2.1 Measure door width

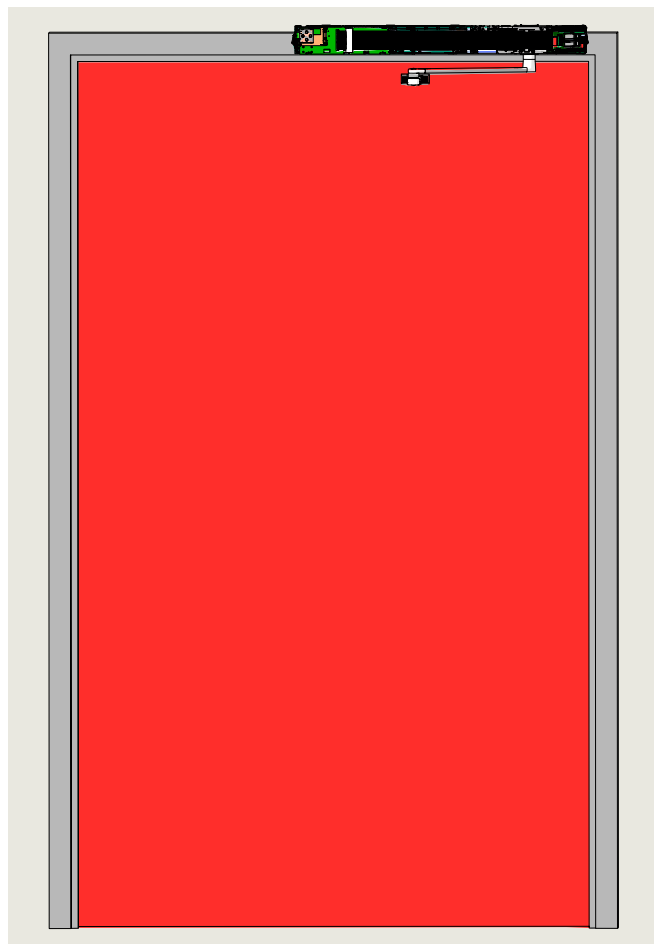

### 18.3 Reveal depth parameter rd

Parameter	Description	Reference paragraph
2 <b>rd</b> 	Reveal depth	

#### 18.3.1 Reveal depth parameter.

1. Reveal depth is set in increments of 10 mm (approximately 3/8").  
 Example: Measured reveal depth of 30 mm (approximately 1 3/16") equals rd parameter value of 3.

### 18.4 Measure and record reveal depth

#### 18.4.1 Measure reveal depth parameter.

Parameter rd value	Reveal measurement

#### 18.4.2 Use of T275 track and pull arm (Fig. 18.4.1).

Value of parameter **rd** must be reduced by 3/16" [30].

- Example: ED900 with T275 track in pull installation with reveal of 30 mm (1 1/8").  
 Parameter rd setting = 0. (Reveal of 30 mm - 30 mm).

Fig. 18.4.1 T275 track and pull arm

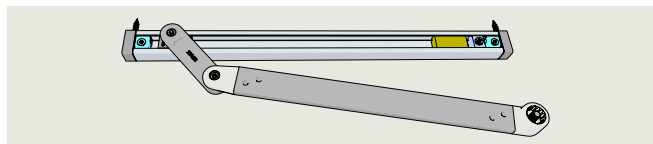


Fig. 18.3.1 Positive reveal


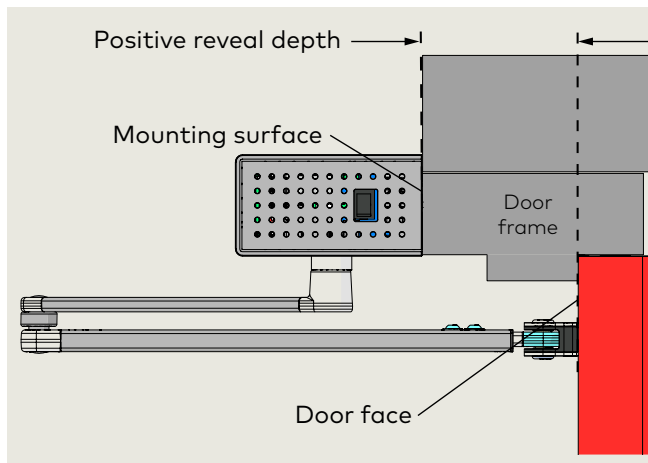


Fig. 18.3.2 Negative reveal

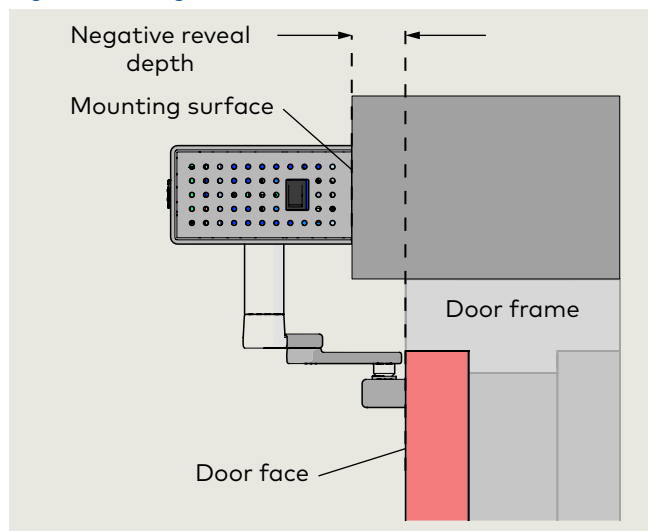

### 18.5 rd parameter values

#### 18.5.1 ED900 reveal depths, rd parameter

Reveal measurement		
Inches	[mm]	<b>rd</b>
-2 3/8"	-60	-6
-1 3/16	-30	-3
-3/4	-20	-2
-3/8	-10	-1
0	<b>0*</b>	0
3/8	10	1
3/4	20	2
1 1/8	30	3
1 9/16	40	4

Reveal measurement		
Inches	[mm]	<b>rd</b>
1 15/16	50	5
2 3/8	60	6
2 3/4	70	7
3 1/8	80	8
3 1/2	90	9
3 15/16	100	10
4 5/16	110	11
4 3/4	120	12
5 1/8	130	13

Reveal measurement		
Inches	[mm]	<b>rd</b>
5 1/2	140	14
5 7/8	150	15
6 5/16	160	16
6 11/16	170	17
7	180	18
7 1/2	190	19
7 7/8	200	20
8 1/4	210	21
8 5/8	220	22

Reveal measurement		
Inches	[mm]	<b>rd</b>
9	230	23
9 7/16	240	24
9 13/16	250	25
10 1/4	260	26
10 5/8	270	27
11	280	28
11 7/16	290	29


\*Factory setting

# 19 Operator spring tension

## 19.1 Set ED900 operator spring tension

- 1 Spring tension adjustment

Fig. 19.1.1 Spring tension adjustment

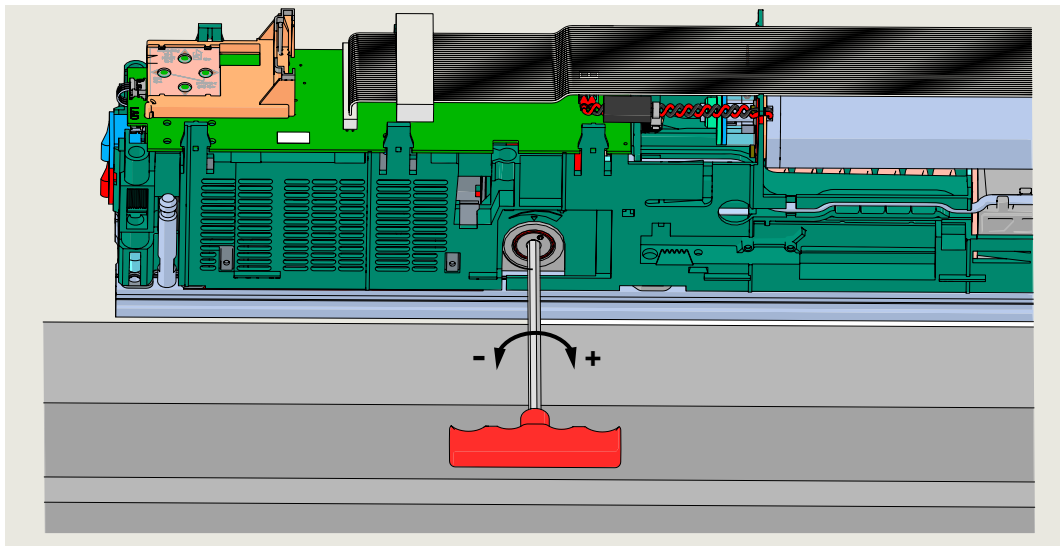

### 19.1.1 Spring tension setting revolutions.

Door width				
Inches	32	36	42	48
mm	813	914	1067	1219
Spring setting revolutions				
ED900	10	14	16	18

### 19.1.2 Operator spring tension function.

1. Spring tension sets closing force on door.
2. Required spring tension is based on door width.

### 19.1.3 Spring tension adjustment.

1. Spring tension adjustment is factory set fully CCW, no spring tension.
2. Spring must be pretensioned per Para. 19.1.1.
  - Use 5 mm T-handle hex key (Fig. 19.1.2).

Clockwise - increases spring tension.  
Counterclockwise - decreases spring tension.

**CAUTION**

A minimum of ten spring tension revolutions are required to operate system.

**CAUTION**

Any change to spring tension setting requires a new learning cycle (Chapter 23)!



### TIPS AND RECOMMENDATIONS

System checks spring tension during learning cycle (Chapter 23).

Learning cycle will be canceled if spring is insufficiently tensioned; door will stop and display will show a rotating "0" and an "F".



Fig. 19.1.2 5mm T-handle hexkey


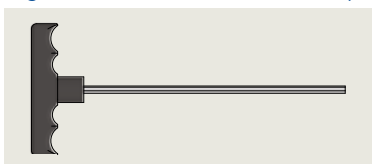


Fig. 19.1.3 Door pressure gauge



### 19.1.4 Check door closing force.

1. Para. 19.1.1 lists approximate spring tension settings.
2. Use pressure gauge to check door closing force at 2° and adjust tension setting if necessary.



### TIPS AND RECOMMENDATIONS


Reference Chapter 30, ANSI/BHMA standards for door closing forces.

# 20 Braking circuit plug

## 20.1 Braking circuit plug position


- 1 Braking circuit plug
- 2 Braking circuit 3 pin socket
- 3 User interface

Fig. 20.1.1 Braking circuit socket and plug; plug factory installed in pull arm location

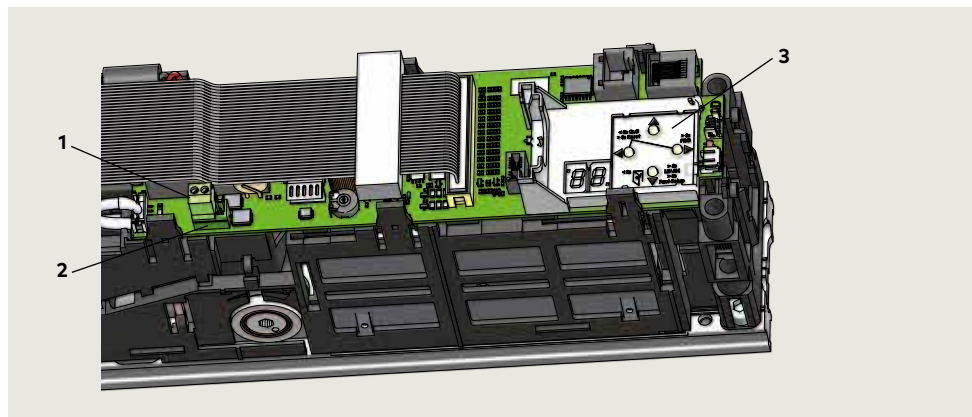

- 1 Braking circuit plug
- 2 Braking circuit 3 pin socket

Fig. 20.1.2 Plug position, pull arm

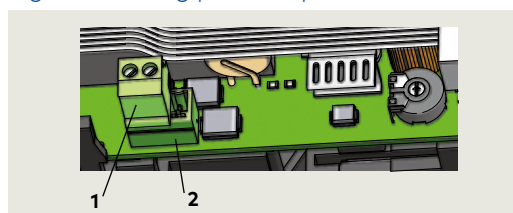

### 20.1.1 Braking circuit plug.

Operator braking circuit plug is positioned in its 3 pin socket for a push or pull installation.




**WARNING**

Braking circuit will not work correctly if braking circuit plug is improperly positioned, or if an incorrect plug is used!

Door may close at high speed and/or be difficult to open!

- 4 Power switch (shown ON)

Fig. 20.1.3 Power switch

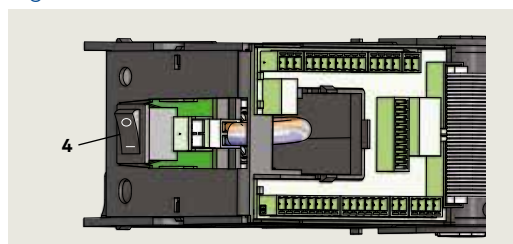

### 17.1.2 Factory-installed plug position.

Braking circuit plug is factory installed in the left two pins, the pull installation position (Fig. 20.1.1 and Fig. 20.1.2).

### 17.1.3 Change braking circuit plug position to push installation.

To change plug position for push installation, install plug in right two pins, toward user interface (Fig. 20.1.4).



**WARNING**

Insure power switch is OFF before changing plug position!

- 1 Braking circuit plug
- 2 Braking circuit 3 pin socket

Fig. 20.1.4 Plug position, push arm

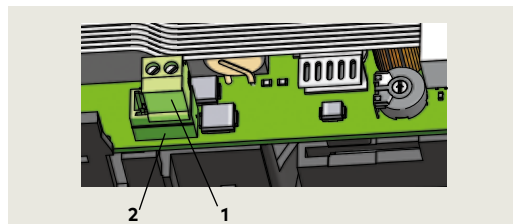


Fig. 20.1.5 Standard push arm


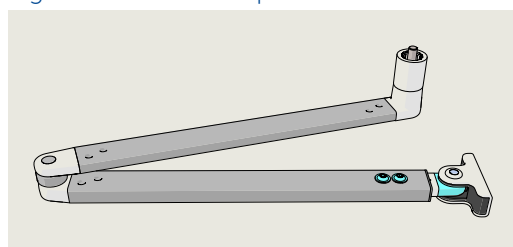


Fig. 20.1.6 Arm and CPD lever and track, pull or push installation

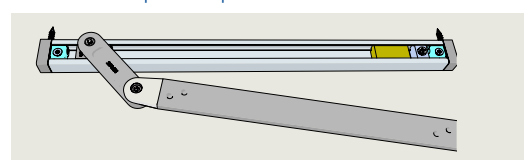


# 21 Power fail closing speed

## 21.1 Set power fail closing speed


- 1 Power fail closing speed potentiometer
- 2 Control board

Fig. 21.1.1 Power fail closing speed potentiometer

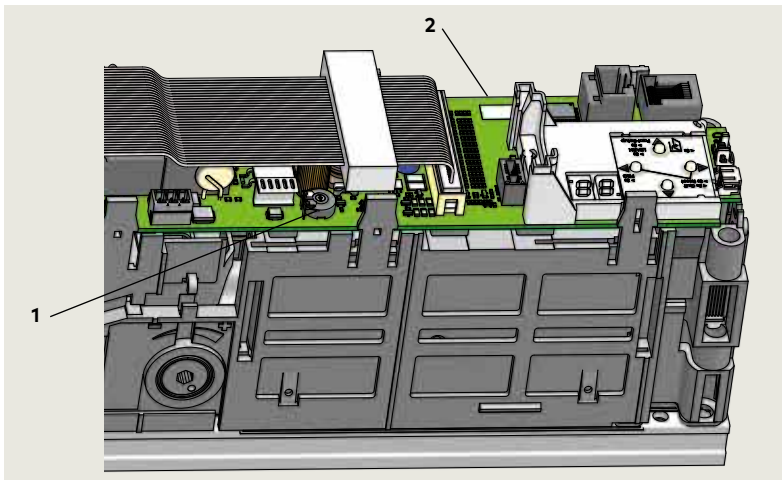

- 1 Power on switch
- 2 Terminal board

Fig. 21.1.2 Power on switch

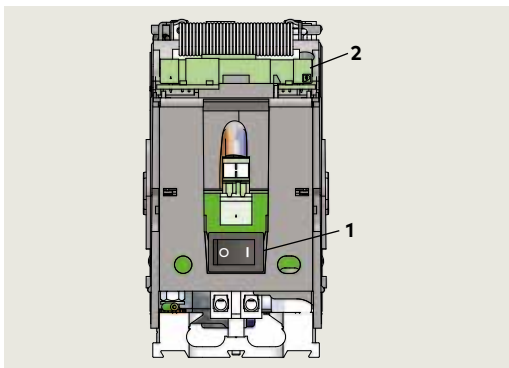

**Error message E73:**  
 If door closes in less than three seconds, error message **E 73** (System error 3, braking circuit) will be displayed.  
 Reference: Appendix B, Troubleshooting.

### 21.1.1 Power fail closing speed potentiometer.

- Single turn
- Factory setting: fully CCW
- CCW increases closing speed.
- CW decreases closing speed.
- 3/32" [2-3 mm] flat blade screwdriver required for adjustment.

### 21.1.2 Setting door closing speed upon power failure.

1. Turn ED900 power switch OFF.
2. Manually open door to 90° angle and let it close.
3. If door closes in less than 5 seconds, turn potentiometer 1/4 turn CW and retry test.
4. Continue retrying test after potentiometer adjustment until the door closing time is a minimum of 5 seconds

**NOTICE**



**TIPS AND RECOMMENDATIONS**

**Minimum 5 second closing time** is required to meet requirements of:

- A117.1, Accessible and Usable Buildings and Facilities, Section 404.2.7.
- 2010 ADA Standards for Accessible Design, Section 404.2.8.




# 22 Parameters

## 22.1 Parameters

### 22.1.1 Firmware version and updates.

- Operator firmware version is displayed during first commissioning. Reference Chapter 23.
- dormakaba handheld can be used to check operator firmware version and to perform firmware updates. Reference Appendix C, dormakaba handheld, or dormakaba handheld manual.

Fig. 22.1.1 dormakaba handheld terminal

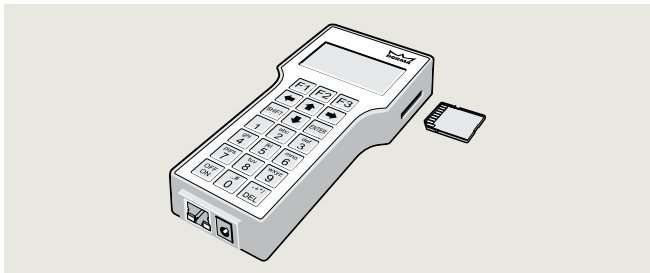

### 22.1.2 Configuration parameters.

Configuration parameters (Para. 22.1.5) are set during first commissioning (Chapter 23).

- Reference Para. 22.1.7 for configuration parameter detail.

### 22.1.3 Driving parameters.

Driving parameters can be set once first commissioning has been completed.

- Reference Para. 22.1.6 for a list of driving parameters.
- Reference Appendix A for driving parameter detail.

### 22.1.4 Changing parameter values.

1. Set program switches to the CLOSE position

- 1 Program switches, close position


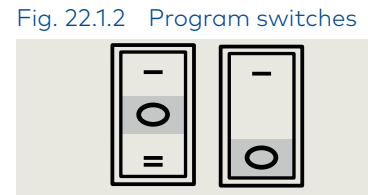


Fig. 22.1.2 Program switches

2. Use 4 button keypad as outlined in Steps 1 through 8 to view or change parameter values.

Fig. 22.1.3 4 button keypad, 2 digit display

- 2 2 digit display
- 5 4 button keypad

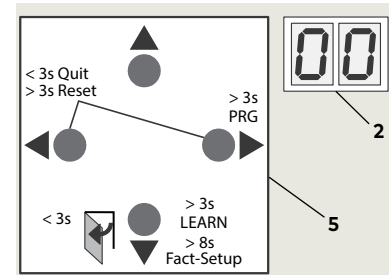

<b>Step 1</b> ▶	Press right button greater than 3 s to enter program mode.
<b>Step 2</b> ◆	Press up or down button to scroll through parameters until desired parameter is displayed.
<b>Step 3</b> ▶	Press right button to display current parameter value.
<b>Step 4</b> ▶	Press right button again to enable editing of value, display will start flashing.
<b>Step 4</b> ◆	Press up or down button to select desired parameter value.
<b>Step 5</b> ▶	Press right button to save selected value. Display stops flashing.
<b>Step 6</b> ◀	Press left button to return to selected parameter.
<b>Step 7</b> ◆	Press up or down button to scroll through parameters until next desired parameter is displayed.
<b>Step 8</b> ◀	Press left button for a minimum of 3 s to exit program mode.

### 22.1.5 Configuration parameters

Parameter	Description
1 AS AS	Installation type
2 rd rd	Reveal depth
3 Tb rb	Door width
4 dL dL	Door type

### 22.1.6 Driving parameters

Driving parameter	Description
5 So So	Opening speed, automatic mode
6 Sc Sc	Closing speed, automatic mode
7 dd dd	Hold open time, automatic mode
8 dn dn	Hold open time, night/bank
9 do do	Hold open time, manual opening of door
10 Sb Sb	Wall masking on door swing (hinge) side
11 ST SR	Safety sensor test
12 SA SA	Activation by safety sensor on approach (opposite hinge) side
13 SP SP	Suppression of safety sensor on swing (hinge) side during initial movement
14 Ud Ud	Locking mechanism delayed opening time
15 Pu Pu	Door preload prior to unlocking
16 TS TS	PR (Power reserve) module test
17 Fo Fo	Static force on door closing edge in opening direction (wind load control)
18 Fc Fc	Static force on door closing edge in closing direction (wind load control)
19 EP EP	Motor driven latching action, automatic mode
20 EA EA	Door opening angle at which motor driven latching action is activated
21	Left intentionally blank
22 PG PG	Push and Go
23 PS PS	Program switch type
24 S1 S1	DCW EPS, electronic program switch behavior following a power reset
25 S2 S2	Internal program switch; switch function on delay
26 du du	Door unlocking during business hours
27 Sr Sr	Status relay function, terminal block X7







### TIPS AND RECOMMENDATIONS

Driving parameter details can be found in Appendix A.

Driving parameter	Description
28 bE bE	Input 4/4a and X3, 1G 24V locking device output configuration
29 CC CC	Cycle counter, number displayed * 10000
30 EC EC	Delete error log
31 CS CS	Reset service interval display (yellow LED)
32 SL SL	Factory setting level (Fact Setup button)
33 OA OA	Opening angle, set during learning cycle
34 hd hd	Door closer mode, automatic or manual
35 hA hA	Power assist function activation angle
36 hF hF	Power assist function force adjustment
37 hS hS	Power assist function support for manual mode in door closed position
38 F1 F1	Upgrade card, fire protection
39 F2 F2	Not used
40 F3 F3	Not used
41 F4 F4	Not used
42 F5 F5	Not used
43 F7 F7	Upgrade card, barrier free toilet
44 F8 F8	Not used
45 C1 C1	Configuration of COM 1 interface
46 bc bc	Back check angle when door opened manually
47 Td rd	Door thickness (mm)
48 d1 d1	Deactivation of drive, emergency pushbutton at X4, 4 and 4a, trigger type
49 d2 d2	Night/bank function, trigger type
50 FC FC	Hold open system release by manually closing door, trigger type
51 Ad Ad	Active door with astragal, caster angle; angle door must reach before passive door starts to open
52 HS HS	Hinge clearance

**22.1.7 Configuration parameters, detail.**

Parameter and value range, factory setting = <b>bold</b> .	Parameter description
<b>Installation type</b>	
1  0 - 2 <b>0</b>	<p><b>Pull</b></p> <ul style="list-style-type: none"> <li>• Arm with track (Fig. 22.1.4).</li> <li>• Arm and CPD lever with track (Fig. 22.1.5).</li> </ul> <p>Wall mounting on swing (hinge) side.</p>
	<p><b>Push</b></p> <ul style="list-style-type: none"> <li>• Standard push arm (Fig. 22.1.6)</li> </ul> <p>Wall mounting on approach (non-hinge) side.</p>
	<p><b>Push</b></p> <ul style="list-style-type: none"> <li>• Arm with track (Fig. 22.1.4).</li> <li>• Arm and CPD lever with track (Fig. 22.1.5).</li> </ul> <p>Wall mounting on approach (non-hinge) side.</p>
<b>Reveal depth</b>	
2  ED900 -3 to 29 <b>0</b>	<p>Reveal is set in increments of 10 mm (3/8"), "3" = 30 mm (1 1/8")</p> <ul style="list-style-type: none"> <li>• ED900: [-30 to 290 mm] -1 3/16" to 11 13/32"</li> </ul> <p>If using arm with CPD lever (Fig. 22.1.5), approximately 1 3/16" [30 mm] must be deducted from actual reveal.</p>
<b>Door width</b>	
3  ED900 7 to 12  <b>12</b>	<p>Door width is set in increments of 100 mm (4"), "9" = 900 mm (35.4").</p> <ul style="list-style-type: none"> <li>• ED900: [700-1219] 28" - 48"</li> </ul>

**22.1.8 CPD arm and lever; rd parameter adjustment.**

- Value of parameter **rd** must be reduced by 3/16" [30] when using the arm with CPD lever in a pull installation.
- Example: ED900 with arm and CPD lever in pull installation with reveal of 30 mm (1 1/8"). Parameter **rd** setting = 0 (Reveal of 30 mm - 30 mm).

**22.1.9 Arm with track – push installation [Application specific].**

1. For doors without fire or smoke detection requirements.
2. Maximum reveal depth of 2 3/8" [60].
3. Maximum opening width at a reveal depth of 2 3/8" [60] is reduced to 95 degrees.


		Door type
4  0 to 4 <b>0</b>	<b>0</b>	Single door
	<b>1</b>	Double door <ul style="list-style-type: none"> <li>• Overlapping door (with astragal)</li> <li>• Active door operator.</li> </ul>
	<b>2</b>	Double door <ul style="list-style-type: none"> <li>• Overlapping door (with astragal)</li> <li>• Passive door operator.</li> </ul>
	<b>3</b>	Double door <ul style="list-style-type: none"> <li>• Edgeless door (no astragal)</li> <li>• Active door operator.</li> </ul>
	<b>4</b>	Double door <ul style="list-style-type: none"> <li>• Edgeless door (no astragal)</li> <li>• Passive door operator.</li> </ul>

Fig. 22.1.4 T/Arm with track

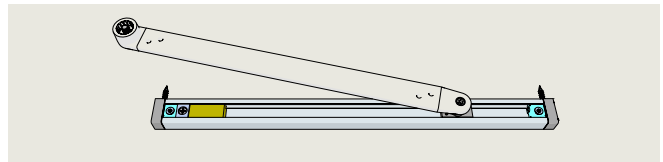


Fig. 22.1.5 T275/Arm with CPD lever and track

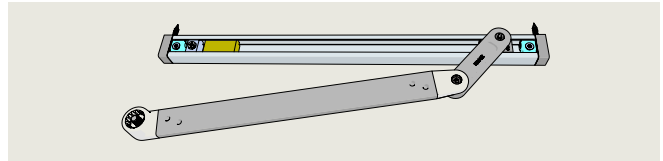


Fig. 22.1.6 J/Push arm


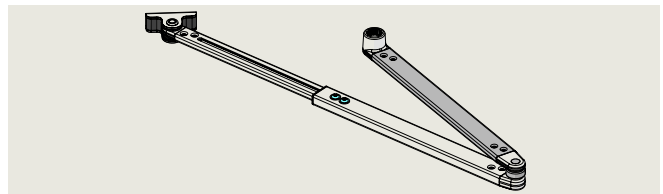


Fig. 22.1.7 J8/Deep reveal push arm

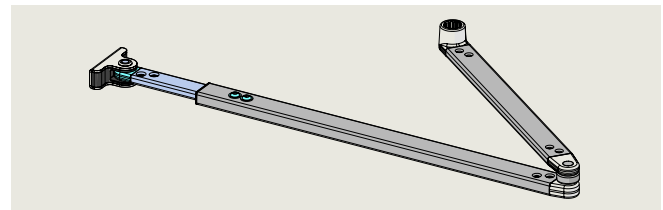

# 23 Single door first commissioning

## 23.1 First commissioning

### Conditions prior to commissioning.

1. ED900 operator is installed.
2. Standard push arms or arm with tracks are installed.
3. 115 Vac branch circuit to operators is energized.
4. Operator motors are cold.

### CAUTION

Motors must be cold for commissioning!



### TIPS AND RECOMMENDATIONS

#### Accessory wiring.

Termination of accessory wiring to the ED900 active door operator should be done only after operator commissioning is completed and learning cycle is performed for door. Reference Chapter 25 for accessory wiring.


- 1 Program switch, 3 position

Fig. 23.1.1 Program switch




- 2 Power switch

Fig. 23.1.2 Power switch

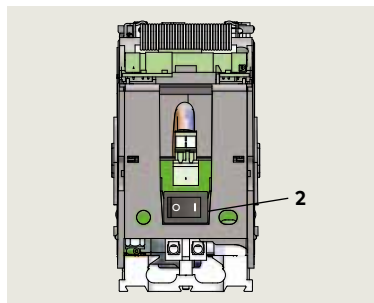

- 3 Four button keypad
- 4 Two digit display

Fig. 23.1.3 4 button keypad, 2 digit display

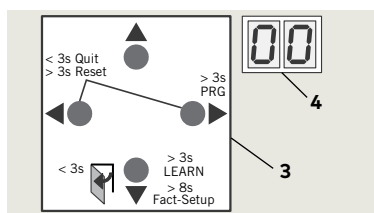

### 23.1.1 First commissioning.

<b>Step 1</b>	Program switch to CLOSE position.
<b>Step 2</b>	Power switch to ON position.
	System check. • Series of letters and numbers rapidly displayed.
	Control unit self check. • Two segments jumping back and forth.
	Horizontal dashes move up and down.
<b>Step 3</b>	Press 4 button keypad down button ▼.
	While 2 digit display segments move up and down, letters and numbers will change if required to display correct orientation.
	Display scrolls: • Device ID (Ed 900) • Firmware version (format F x x x x)
	Program mode display. Program mode will be displayed indicating system requires further parameter settings.



### TIPS AND RECOMMENDATIONS

If pressing down button (Step 3) does not result in desired display orientation, return to Step 2, turn power button off, then on to repeat commissioning steps.


## 23.2 Set configuration parameters

### 23.2.1 Set parameter AS, installation type.

<b>Step 1</b> Press		Press <b>PRG</b> greater than 3 s to enter program mode, AS parameter displayed. If no change required, go to step 7.
<b>Step 2</b> Press		Displays "00", factory setting.
<b>Step 3</b> Press		"00" starts flashing.
<b>Step 4</b> Press		Scroll to select parameter value. "1" shown as example.
<b>Step 5</b> Press		Saves value entered. Display stops flashing.
<b>Step 6</b> Press		Returns to Installation type parameter.

Fig. 23.2.1 4 button keypad, 2 digit display

- 3 Four button keypad
- 4 Two digit display

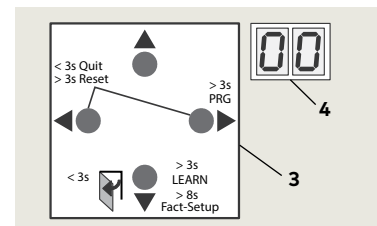

	Installation type
Parameter value	Parameter description
0*	Pull arm with track, wall mounting on swing (hinge) side.
1	Push arm, wall mounting on approach (opposite hinge) side.
2	Push arm with track, wall mounting on approach (opposite hinge) side.[Application specific]
*	Factory setting

### 23.2.2 Set parameter rd, reveal depth.

<b>Step 7</b> Press		Scroll to <b>rd</b> parameter.
<b>Step 8</b> Press		Displays "00", factory setting.
<b>Step 9</b> Press		"00" starts flashing.
<b>Step 10</b> Press		Scroll to select parameter value. "6" shown as example.
<b>Step 11</b> Press		Saves value entered. Display stops flashing.
<b>Step 12</b> Press		Returns to reveal depth parameter.



#### TIPS AND RECOMMENDATIONS

Reference Chapter 18 for reveal depth parameter values.

Configuration parameter settings continue on next page.

### 23.2.3 Set parameter Tb, door width.








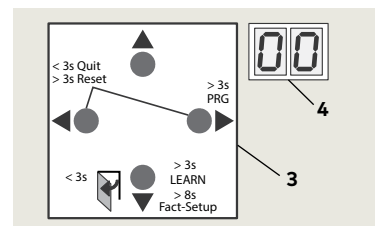
<b>Step 13</b> Press ▼		Scroll to <b>Tb</b> parameter.
<b>Step 14</b> Press ▶		Displays "10", factory setting.
<b>Step 15</b> Press ▶		"10" starts flashing.
<b>Step 16</b> Press ◆		Scroll to select parameter value. "7" is example, for door widths of 28" to 31 15/16"
<b>Step 17</b> Press ▶		Saves value entered. Display stops flashing.
<b>Step 18</b> Press ◀		Returns to door width parameter. If single door, exit program mode (Step 19).
<b>Step 19</b> Press ◀		Exits program mode. Display indicates "ready for learning cycle".

Fig. 23.2.2 4 button keypad, 2 digit display

- 3 Four button keypad
- 4 Two digit display



#### TIPS AND RECOMMENDATIONS

Reference Chapter 18 for door width parameter values.

### 20.2.4 Parameter dL, door type.








#### TIPS AND RECOMMENDATIONS

Parameter **dL** factory setting is 0, single door.

## 23.3 Set parameter PS, program switch type

### 23.3.1 Full width cover or Key switch panel option – set parameter PS to 1.




<b>Step 1</b> Press ▶		Press and hold PRG > 3 s to enter program mode, AS parameter displayed.
<b>Step 2</b> Press ▼		Scroll to <b>PS</b> (Program switch type) parameter.
<b>Step 3</b> Press ▶		Displays "00", factory setting.
<b>Step 4</b> Press ▶		"00" starts flashing.
<b>Step 5</b> Press ◆		Scroll to select parameter value "1", External mechanical program switch connected to operator terminal board.

#### CAUTION

**Key switch panel options – program switch wired to ED900 terminal board.**

**Reference Appendix D.**

Parameter **PS** (Program switch type) must be set to 1.

<b>Step 6</b> Press ▶		Saves value entered. Display stops flashing.
<b>Step 7</b> Press ◀		Returns to program switch parameter.
<b>Step 8</b> Press ◀		Exits program mode.

## 23.4 Perform learning cycle

### CAUTION

Learning cycle must be performed while motor is cold!

### CAUTION

Door must not be manually moved or held in position during the learning cycle!

### CAUTION

Verify that the following parameters have been set (Para. 23.2):

- **AS**, Installation type
- **rd**, Reveal depth
- **Tb**, Door width

Full width cover option or Key switch panel option, set PS parameter to 1.

- **PS**, Program switch type (Para. 23.3).



### TIPS AND RECOMMENDATIONS

During learning cycle:

- Operator functions are deactivated.



### WARNING

No personnel or objects must be in range of door motion during learn cycle!

Fig. 23.4.1 Program switches, CLOSE position


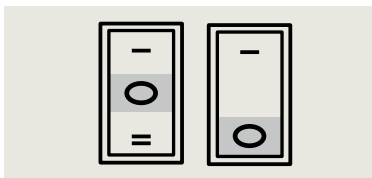


Fig. 23.4.2 Program switches, Auto position

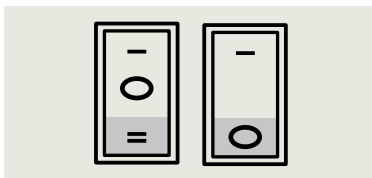


<b>Step 1</b>	Secure motion range of door.
<b>Step 2</b>	Set program switch to CLOSE position, Fig. 20.4.1.
	Rotating "o" and a "0" indicates operator learning cycle is required.
<b>Step 3</b> Press ▼	Press and hold down button until display changes. <ul style="list-style-type: none"> <li>• Door performs several movements and display shows a sequence of symbols.</li> <li>• Movements of door must not be interrupted!</li> </ul>
	Display indicates door is at 70° position and is waiting for door opening angle to be set.
<b>Step 4</b>	<ul style="list-style-type: none"> <li>• Manually move door to desired opening angle.</li> <li>• Maximum door angle is 110°.</li> </ul>
<b>Step 5</b> Press ▼	Momentarily press down button to continue learning cycle. <ul style="list-style-type: none"> <li>• Door performs several movements and display shows a sequence of symbols.</li> <li>• Movements of door must not be interrupted!</li> </ul>
	<p><b>Operator spring tension too low.</b></p> <ul style="list-style-type: none"> <li>• Display with small rotating "o" and an "F" during learn cycle indicates spring tension is too low.</li> <li>• Door will close.</li> </ul> <ol style="list-style-type: none"> <li>1. Increase spring tension (Chapter 19).</li> <li>2. Restart learning cycle (Step 3).</li> </ol>
	Door completes learning cycle. <ul style="list-style-type: none"> <li>• Display with two horizontal bars indicate operator is ready for operation.</li> </ul>
<b>Step 6</b> Press ▼	Momentarily press down button to cycle door.
<b>Step 7</b>	Following automatic learning cycle, actual forces on door, and door opening and closing times must be measured and changed if necessary to insure compliance with ANSI/BHMA standards, reference Chapter 30.
<b>Step 9</b>	Set program switch to Auto, Fig. 23.4.2.

# 25 Connect accessory wiring and test

## 25.1 Install accessory wiring

- 11 Connectors
- 12 Jumpers

Fig. 25.1.1 ED900 terminal connectors

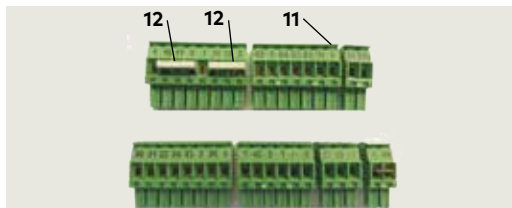

### TIPS AND RECOMMENDATIONS

ED900 115 Vac branch circuit disconnect should be Off while making accessory connections!

### 25.1.1 Connect accessory wiring.

Reference Chapter 9, System Accessories.

1. Use applicable terminal connectors (Fig. 25.1.1) to terminate accessory wiring.



### TIPS AND RECOMMENDATIONS

- Use documentation provided with each device for electrical installation.
- Do not connect system accessories to board until operator has been commissioned and learning cycle performed (Chapter 23).

2. Use diagram in Chapter 9 to locate connector to its socket.

### CAUTION

#### Terminal jumpers.

Jumpers (Fig. 25.1.1/12) must be in place on monitoring circuits.

## 25.2 Test all accessories

### 25.2.1 Test all accessories.

1. Test functions of all accessories.



# 26 Set track bumper stop

## 26.1 Set track bumper stop position

Fig. 26.1.1 Program switch OPEN position


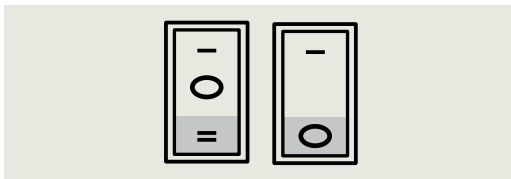


Fig. 26.1.2 Door at set opening angle



### 26.1.1 Set bumper stop position.

1. Set program switch to OPEN.
2. Door moves to set opening angle.

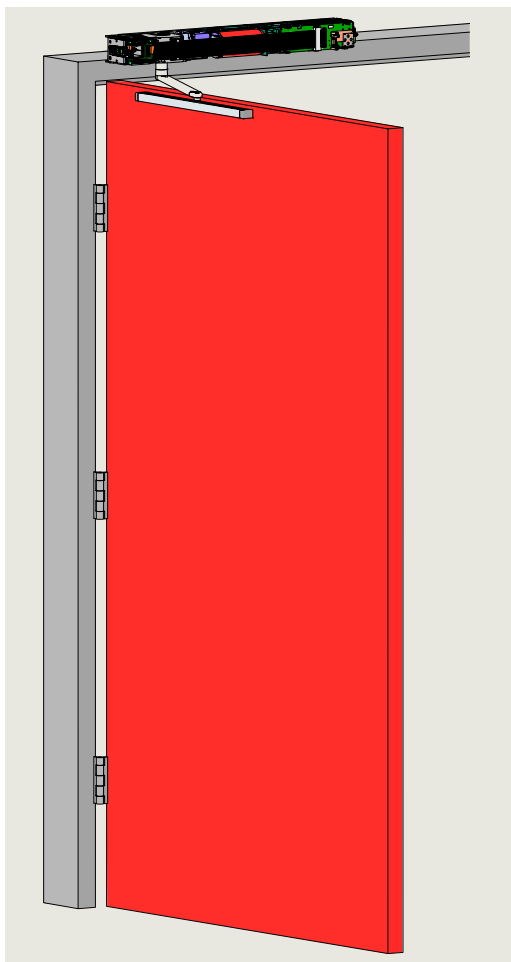

**WARNING**

Use caution when working in proximity of door and track.


3. Slide bumper and bumper stop toward slide shoe until bumper is 3/16" from edge of slide shoe (Fig. 26.1.3).
4. Tighten bumper stop M5 screw. Do not overtighten.

**CAUTION**

Using program switch, close then open door to verify gap between bumper and slide shoe with door at full open position.

Fig. 26.1.3 Setting bumper stop location

- 9 Slide shoe
- 12 Bumper
- 17 Bumper stop
- 13 MM5 x 13 FHMS cross recessed

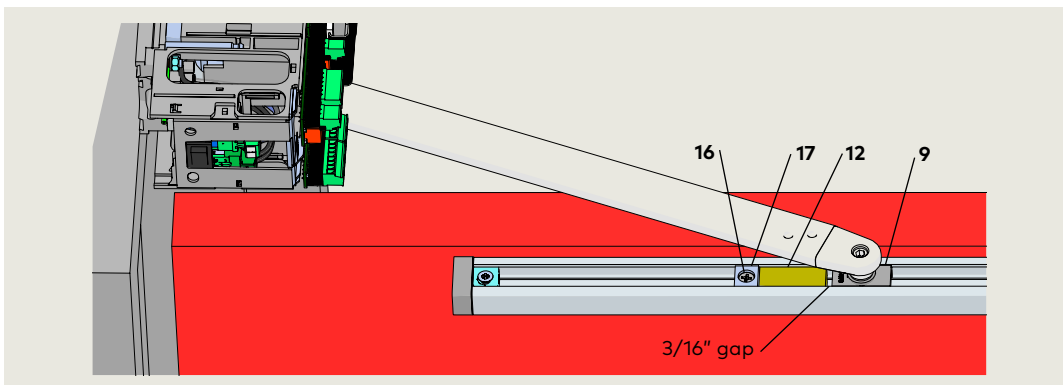

# 27 Install push arm door stop

## 27.1 Install push arm door stop (optional assembly)

### Door stop assembly

#### 1/4" thick plate

08121320

### Door stop assembly

#### 1/2" thick plate

08121330

- 1 Plate, bumper mounting, 1/4" thick 08120774
- 2 Plate, bumper mounting, 1/2" thick 08120770
- 3 Rubber bumper 08120750
- 4 Shoulder bolt 08104231
- 5.1 1/4-20 x 1 1/4" Phillips FHS, black oxide, SS
- 5.2 No. 14 x 1 1/4" Phillips FHMS for sheet metal, zinc plated steel

Fig. 27.1.1 Door stop assembly


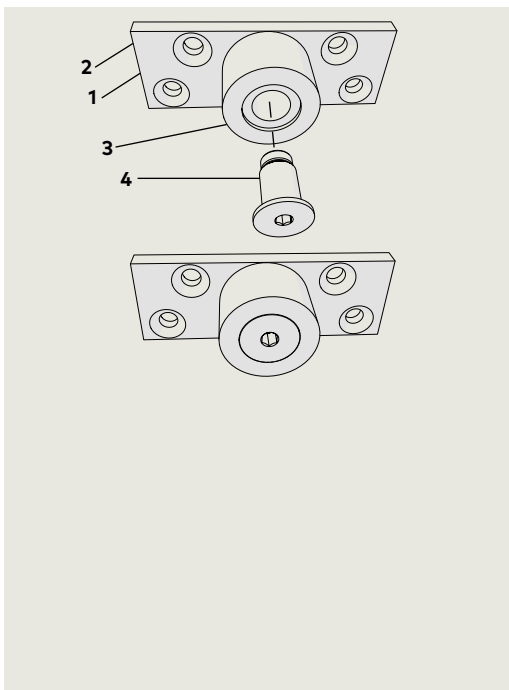


Fig. 27.1.2 Program switch, OPEN position

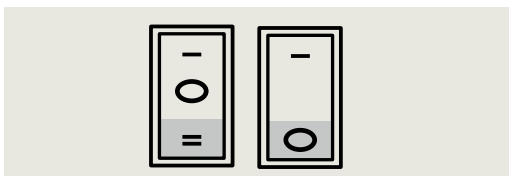

### 27.1.1 Assemble bumper stop.

1. Attach bumper to bumper mounting plate with 1/2" shoulder screw.
  - Use 5 mm hex key.

### 27.1.2 Open door.

1. Set program switch to OPEN position.
2. Door moves to set opening angle.




**WARNING**  
Use caution when working in proximity of door and push arm!.

### 27.1.3 Bumper stop installation.

1. With door at its full open position locate door stop assembly bumper on door frame 1/8" beyond arm.
2. Mark mounting plate hole locations on frame.
  - Plate hole diameter is 1/4".
3. Select fasteners based on door frame material.
4. Attach door stop assembly to frame.

**CAUTION**  
Using program switch, close then open door to verify arm does not contact door stop with door at full open position.

Fig. 27.1.4 Door stop installation

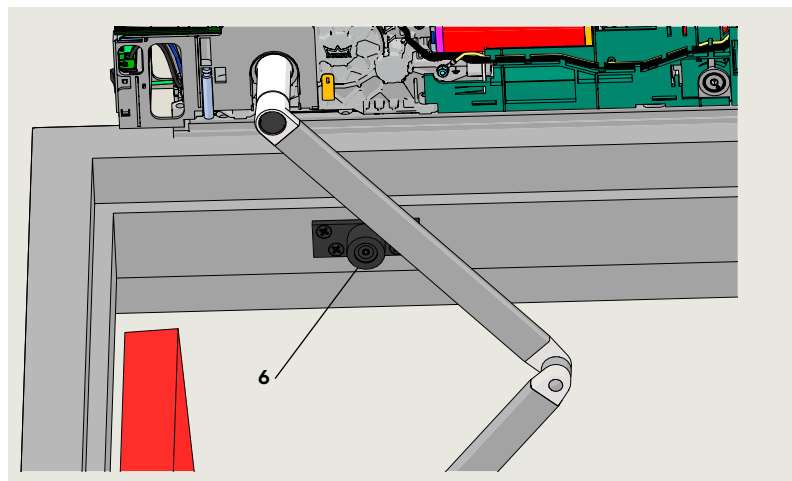


- 4 Bumper stop assembly

# 28 Install ED900 cover, end caps and spindle caps


## 28.1 Install cover and end caps

Fig. 28.1.1 ED900 standard cover

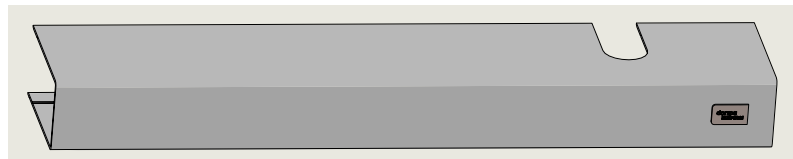

1 Standard cover


Fig. 28.1.2 ED900 operator end caps



2 End cap, program switches

3 End cap, power switch

Fig. 28.1.3 Cover and end cap installation

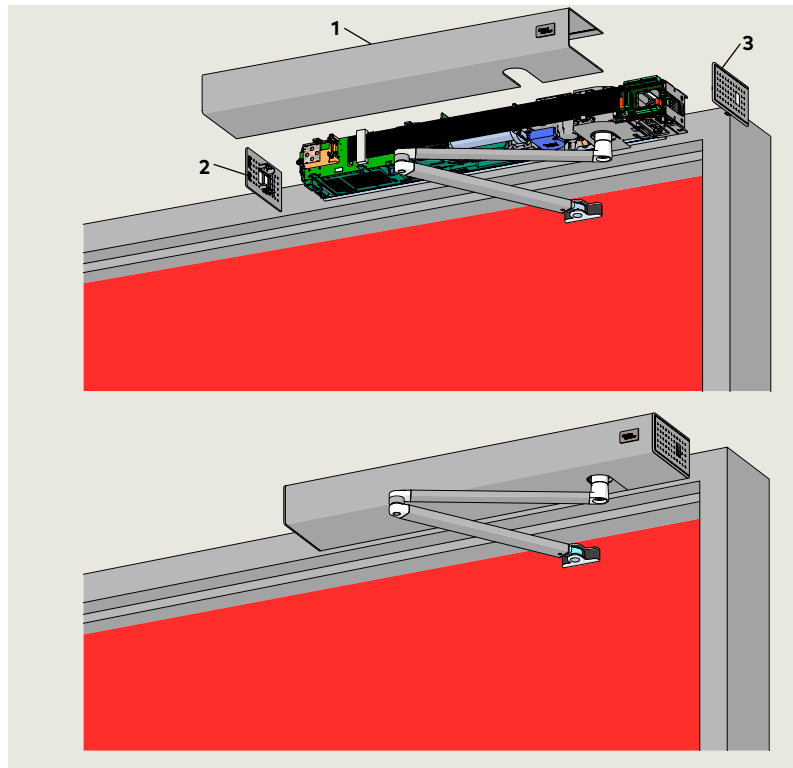

1 ED900 standard cover

2 End cap, program switches

3 End cap, power switch

### 28.1.1 Install covers.

1. Align cover with operator, press inward until cover snaps into place.

**CAUTION**

Insure that all cables are in place and secured as necessary.



**TIPS AND RECOMMENDATIONS**

Optional full width cover:  
Para. 28.2

### 28.1.2 Install end caps.

1. Install ED900 operator end caps.



**TIPS AND RECOMMENDATIONS**

Program switch end cap; insertion depth is adjustable to compensate for minor tolerances is length of operator cover.

## 28.2 Optional full length cover

Fig. 28.2.1 Optional full length cover



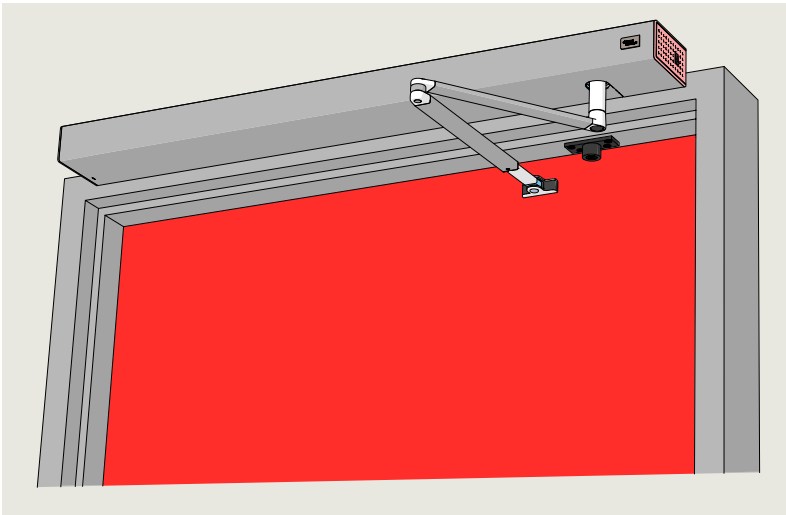


Fig. 28.2.1 Optional full length cover installation

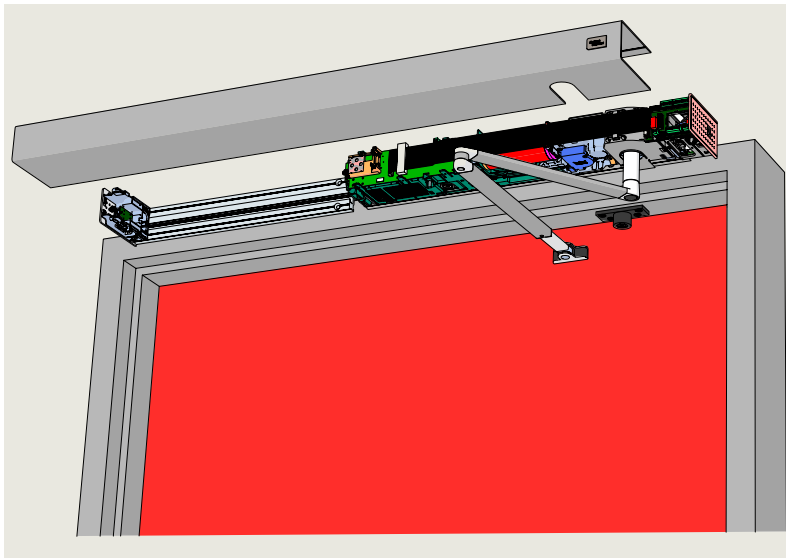

## 28.3 Install spindle caps

Fig. 28.3.1 Spindle caps

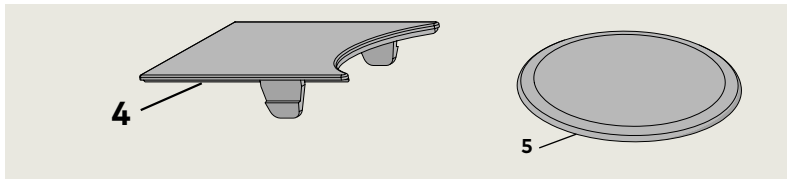


- 4 Spindle cap
- 5 Spindle cap

### 28.3.1 Install spindle caps.


1. Install spindle caps on ED900 cover.

Fig. 28.3.2 Spindle cap installation, ED900 cover top

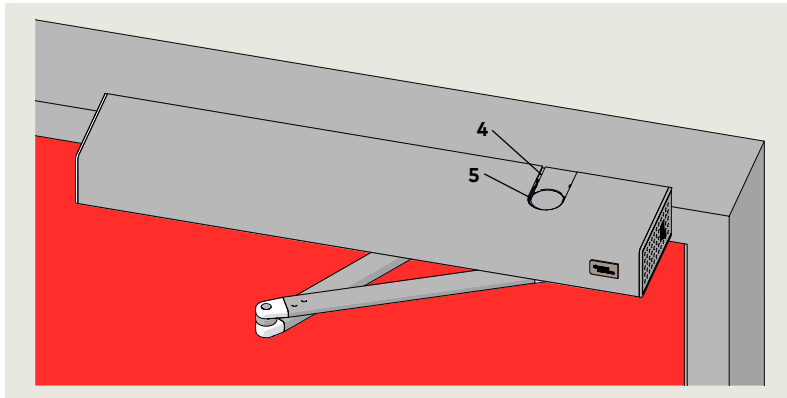

- 4 Spindle cap
- 5 Spindle cap

Fig. 28.3.3 Spindle cap installation, ED900 cover bottom

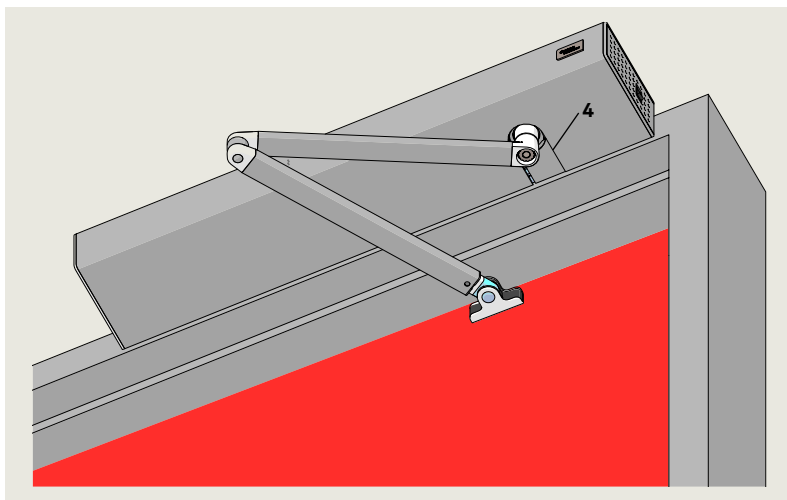

- 4 Spindle cap

# 29 Install door signage

## 29.1 Install door signage

### 29.1.1 Install door signage based on type of door operation.

Install applicable door signage as outlined in Chapter 10, ED900 door signage.

# 30 ANSI/BHMA standards

## 30.1 A156.19 Low energy power operated doors

The following table references portions of content from ANSI/BHMA A156.19. Refer to the standard, available through ANSI or BHMA for additional information. Standard material reprinted with BHMA permission.

### 30.1.1 Door measurements, low energy power operated door

ED900 Parameter				A156.19 standard		
Parameter	Function	Factory setting	Adjustment range	Para.	Requirement	
<b>So</b>	Opening speed	Swing door opening speed.	17%/s Note 1	8%/s - 27%/s  27%/s max. L.E. mode	4.2	Opening Doors shall open from closed to back check or 80°, whichever occurs first, in 3 seconds or longer as required in Table I.  Total opening time to 90° shall be as in Table II. If door opens at more than 90°, it shall continue at the same rate as back check speed.
<b>bc</b>	Back check	Checking or slowing down of door speed before door being fully opened.	10°	5° - 40°	4.2	Back check shall not occur before 60° opening.
<b>Sc</b>	Closing speed	Swing door closing speed, automatic mode.	17%/s Note 1	8%/s - 27%/s  27%/s max. L.E. mode	4.4	Closing: Doors shall close from 90° to 10° in 3 seconds or longer as required in Table I.  Doors shall close from 10° to fully closed in not less than 1.5 seconds.
<b>dd</b>	Hold open time	Hold open time.	5 s	5 s - 30 s	4.3	Time delay: When powered open, the door shall remain open at the fully opened position for not less than 5 seconds. Exception: when push-pull activation is used, the door shall remain at the fully opened position for not less than 3 seconds.
<b>hS</b>		Support for manual mode in door closed position.				Doors shall open with a manual force: <ul style="list-style-type: none"> <li>• Not to exceed 15 lbf [67 N] to release a latch if equipped with a latch.</li> <li>• To set a door in motion 30 lbf [133 N].</li> <li>• To fully open the door 15 lbf [67 N]. Forces shall be measured 1" [25.5] from latch edge of door.</li> </ul>
<b>hA</b>	Reference Appendix A for parameter detail.	Adjustment, door activation angle.			4.5	
<b>hF</b>		Power assist function.				
<b>Fo</b>	Static force in opening direction	Static force on door closing edge in opening direction.	13.5 lb f [60 N]	4.5 lb f [20 N] - 15 lb f [67 N]	4.5	Force required to prevent a stopped door from opening or closing shall not exceed 15 lb f [67 N] measured 1" [25.4] from latch edge of door at any point during opening or closing.
<b>Fc</b>	Static force in closing direction	Static force on door closing edge in closing direction.	13.5 lb f [60 N]	4.5 lb f [20 N] - 15 lb f [67 N]	4.5	

Note 1: Speed may be slower after learning cycle completed.

**30.1.2 A156.19, Table I: Minimum opening and closing times.**

"D" door width, inches [mm]	"W" door weight, pounds [kg]				
	100 [45.4]	125 [56.7]	150 [68]	175 [79.4]	200 [90.7]
30 [762]	3.0	3.0	3.0	3.0	3.5
36 [914]	3.0 s	3.5 s	3.5 s	3.0 s	3.0 s

Minimum opening time to back check or 80 degrees (whichever occurs first).  
 Minimum closing time from 90 degrees to latch check or 10 degrees (whichever occurs first).

**30.1.3 A156.19, Table II: Total opening time to 90 degrees.**

Back check at 60°	Back check at 70°	Back check at 80°
Table I plus 2 s	Table I plus 1.5 s	Table I plus 1 s
If door opens more than 90°, it shall continue at the same rate as backcheck speed.		
Back check occurring at a point between positions shall use lowest setting.		

**30.1.4 Other door weights and widths**

Closing time  $T = (D \sqrt{W}) / 188$   
 D = Width of door in inches.  
 W = Weight of door in pounds.  
 T = Closing time to latch check in seconds.

SI (metric) units  
 Closing time  $T = (D \sqrt{W}) / 2260$   
 D = Width of door in mm.  
 W = Weight of door in kg.  
 T = Closing time to latch check in seconds.

# 31 Upgrade cards

## 31.1 Upgrade cards


### 31.1.1 Upgrade card installation.

dormakaba upgrade cards can be used to expand the range of functions of ED900 operators.

When upgrade cards are installed, information is exchanged between and permanently allocated to both the operator control unit and the upgrade card.

- 1 Upgrade card slot
  - 2 Upgrade card socket
- Status LEDs
- 3 Green LED
  - 4 Yellow LED
  - 5 Red LED
  - 6 Upgrade card

Fig. 31.1.1 Upgrade card slot

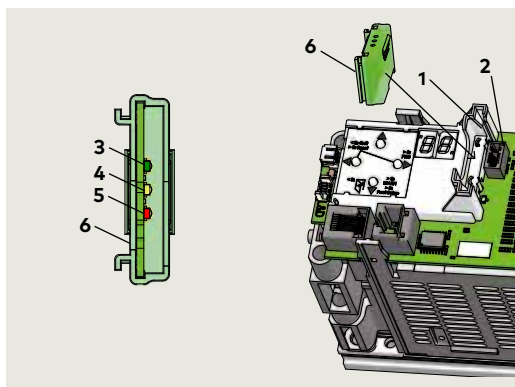

### 31.1.2 Upgrade cards

Upgrade card	Upgrade card color	Parameter
Fire protection	Red	F1
Barrier free toilet		F7

## 31.2 Container module

### 31.2.1 Container module

- The first upgrade card installed becomes the container module.
- Every operator control unit has only one container module.
- Functions of upgrade cards installed after the first upgrade card are saved in the container module.

### 31.2.2 Container module removal.

- If the container module is removed, all previously enabled functions will be deactivated **after a certain time**.

### 31.2.3 Operator control unit replacement.

- If the control unit is replaced, the container module is removed from the old control unit and inserted into the new control unit.
- The new control unit synchronizes with the container module and all upgrade card functions are available.

### 31.2.4 Inserting an upgrade card that has already been activated.

- Rapidly flashing yellow LED on upgrade card indicates card is rejected.
- Card's functions in operator control unit are still valid.

### 31.2.5 Inserted a container module from third party control unit.

- Rapidly flashing yellow and green LEDs on container module indicates module is rejected.
- Container module can only be synchronized with one control unit.

### 31.2.6 Container module defective.


- Upgrade cards that were installed after the container module must be reinstalled.



## 31.3 Installing upgrade cards


### 31.3.1 Set program switch to CLOSE.

- 1 Upgrade card slot
- 6 Next upgrade card
- 7 Container module
- 8 Program switch
- 9 2 digit display with horizontal bars

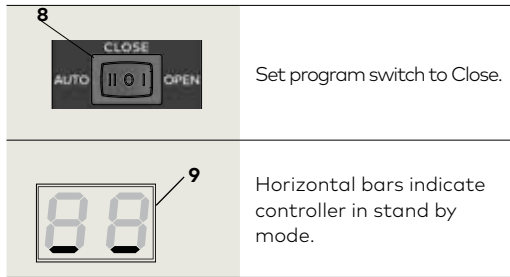

### 31.3.2 Installing first upgrade card.


- 1 Upgrade card slot
- 2 First upgrade card

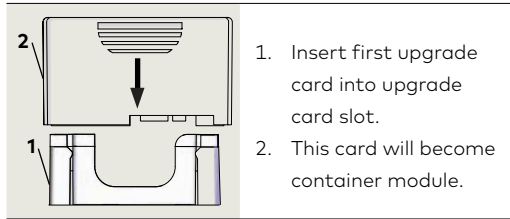

- 4 Yellow LED
- 7 Container module



- 1 Upgrade card slot
- 3 Green LED
- 7 Container module






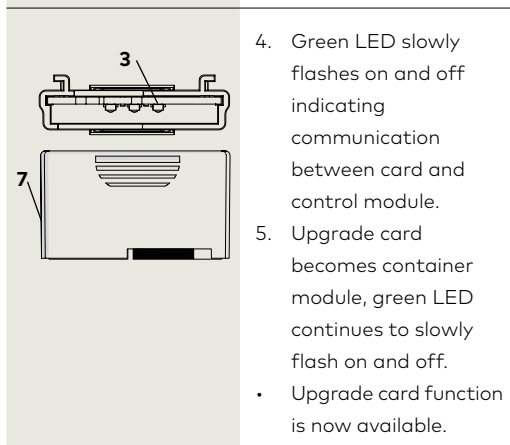


- 3 Green LED
- 7 Container module

#### **i** TIPS AND RECOMMENDATIONS

Container module can be configured using applicable parameter (F1 - F8) for card. Reference Chapter 22, Parameters.

### 31.3.3 Installing additional upgrade cards.

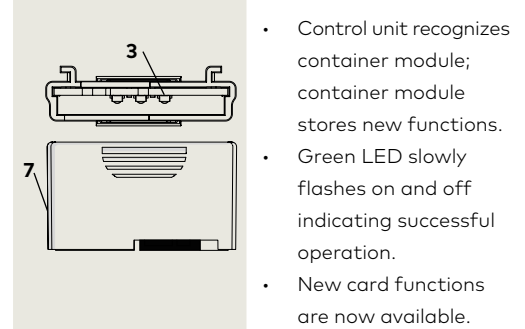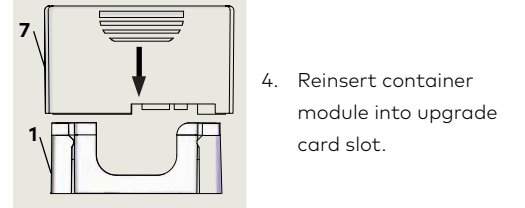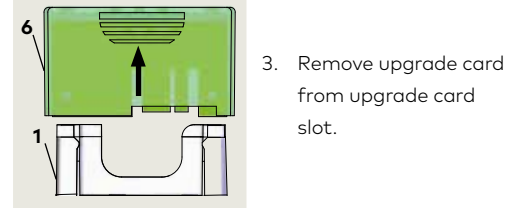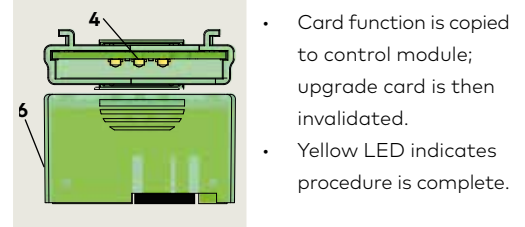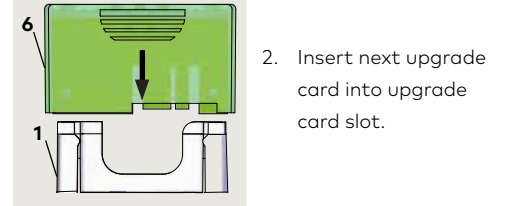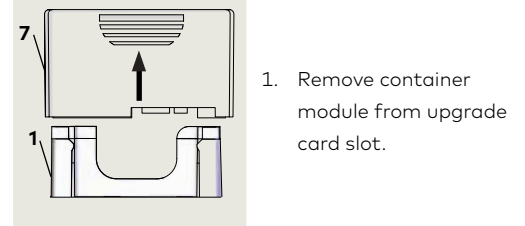

#### **i** TIPS AND RECOMMENDATIONS

New upgrade card can be configured using applicable parameter (F1 - F8) for card. Reference Chapter 22, Parameters.

# 32 Maintenance

## 32.1 Safety label, low energy swing doors

### 32.1.1 Low energy swinging door safety information label

This AAADM label outlines safety checks that should be performed daily on low energy swinging door controlled by an ED900 operator.

### 32.1.2 Safety information label location

Place label in a protected, visible location on door frame, near program switch panel if possible.

### 32.1.3 Annual compliance section of label

This section of label is only completed on low energy swing doors that comply with ANSI/BHMA A156.19 standard and pass inspection by an AAADM certified dormakaba USA, Inc. technician.

### 32.1.4 Additional annual compliance inspection labels

Place additional labels over annual compliance inspection section of safety information label.

Fig. 32.1.1 Safety information label


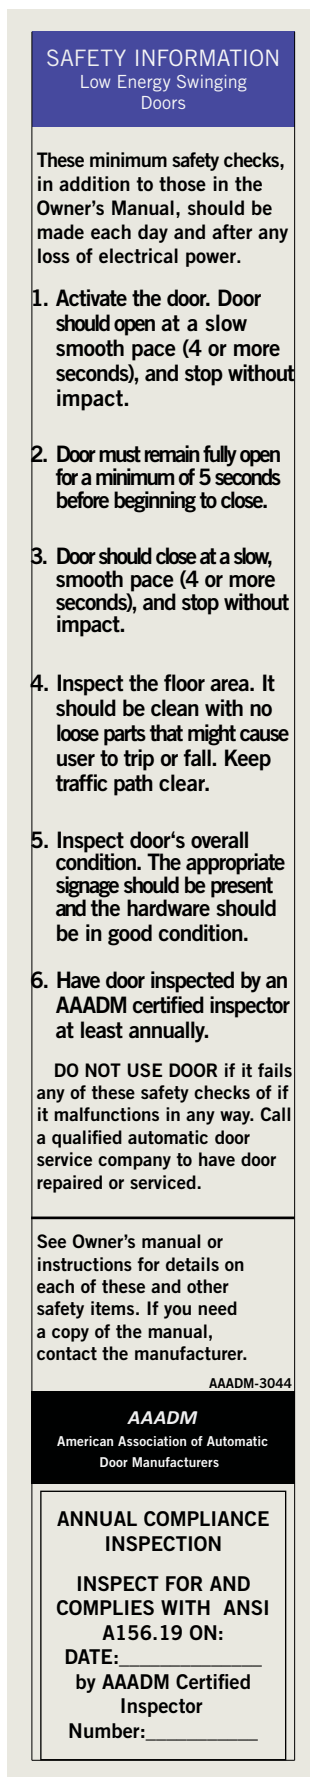


Fig. 32.1.2 Annual compliance inspection label

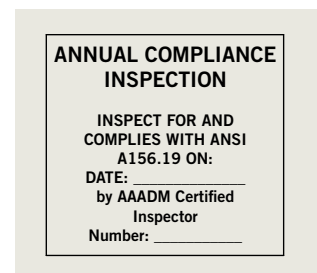


## 32.2 ED900 environment and cleaning

**Table 32.2.1 Operator environmental requirements.**

Ambient temperature	5 to 122 °F	[-15 to 50° C]
---------------------	-------------	----------------

Fig. 32.2.1 ED900 low energy installation

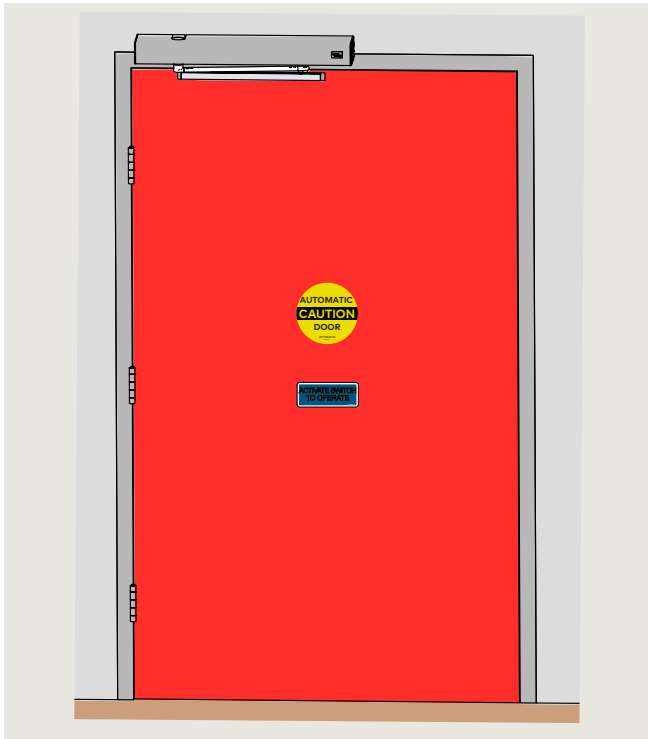

### 32.2.1 ED900 environmental requirements.

ED900 assembly is designed to operate on an interior application only under the specifications shown in Table 32.2.1.

### 32.2.2 Areas around door(s) and door swing radius.

Areas around doors and door swing radius must be kept clear of all obstacles.

### 32.2.3 Cleaning



#### WARNING

Cleaning of ED900 cover surfaces should be done with program switches in Close position!

ED900 cover can be cleaned with a damp cloth and commercial cleaning agents.



#### TIPS AND RECOMMENDATIONS

Abrasive (scouring) agents should not be used as they may damage cover surface.

### 32.2.4 Water and other liquids.




#### WARNING

No water or other liquids must be sprayed or spilled on ED900!

## 32.3 Yellow LED, service level

Fig. 32.3.1 Service level indicator

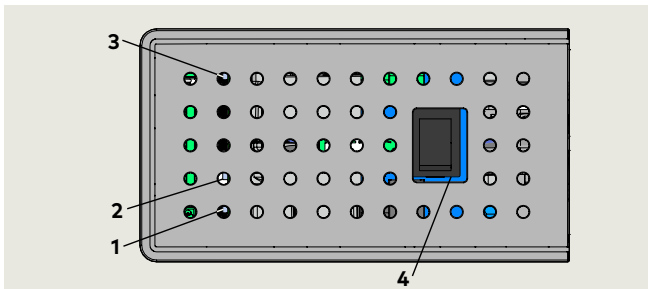

- |              |                |
|--------------|----------------|
| 1 Red LED    | 3 Green LED    |
| 2 Yellow LED | 4 Power switch |

### 32.3.1 Service level indicator

Yellow LED on operator power switch side is service level indicator. Operator system should be scheduled for service when yellow LED is first illuminated, or annually, whichever comes first.




#### TIPS AND RECOMMENDATIONS

Reference Appendix A, Parameter detail, for information on:

- Parameter CS, reset service interval display.
- Parameter CC, cycle counter.


## 32.4 Pull arm maintenance

Fig. 32.4.1 Arm and track assembly

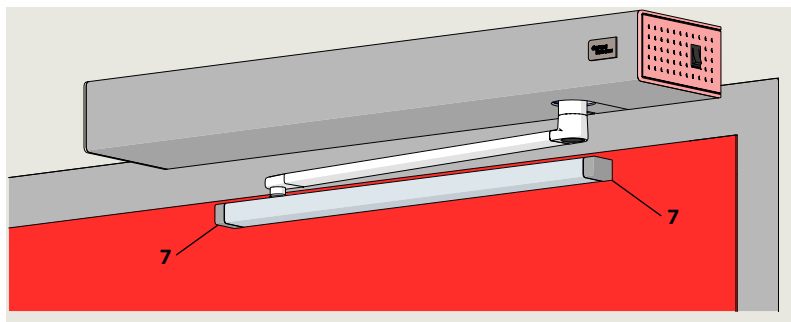

7 End cap

Fig. 32.4.2 Arm and track assembly

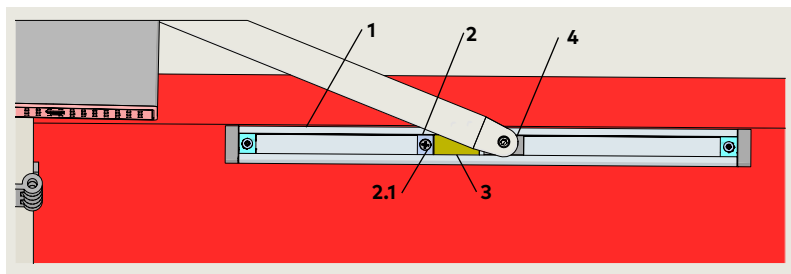

1 Track  
2 Bumper stop  
2.1 M6 FHMS  
3 Bumper  
4 Slide shoe, pivot pin

1 Track  
2 Slide shoe  
3 Pivot pin  
6 Arm

Fig. 32.4.3 Track, slide shoe, pivot pin


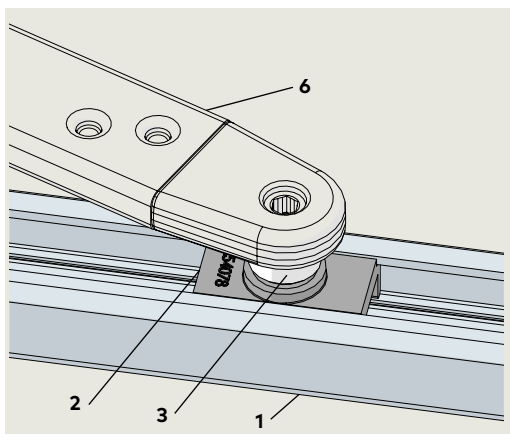


Fig. 32.4.4 CPD lever M6 socket head screw



3 M6 socket head cap screw  
5 CPD lever

Fig. 32.4.5 Program switch

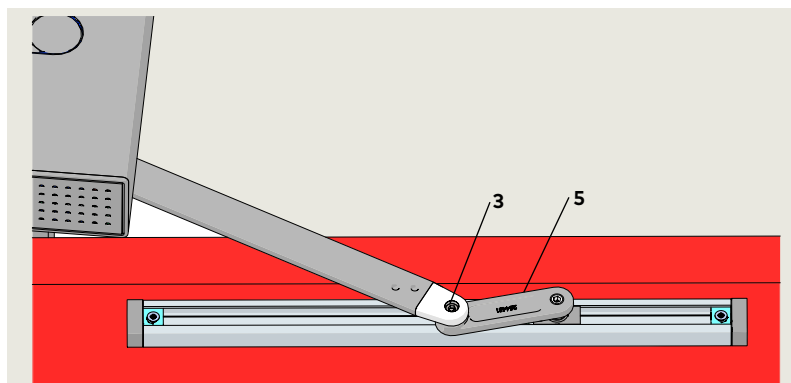

### 32.4.1 Track mounting screws.

1. Set program switch to CLOSE.
2. Remove track end caps
3. Check tightness of track mounting screws.
4. Replace end caps.

### 32.4.2 Track maintenance.

1. Set program switch to OPEN.
2. Track.
  - Check for wear or damage.
3. Slide shoe and pivot pin.
  - Check for wear or damage.
4. Bumper stop M6 screw.
  - Check bumper stop position (bumper location approximately 1/8" from slide shoe)
  - Check tightness of screw.


### 32.4.3 CPD lever.

1. Check tightness of M6 SHCS.

## 32.5 Arm fasteners – torque requirements

Fig. 32.5.1 Arm M8 SHCS cap

8 Cap

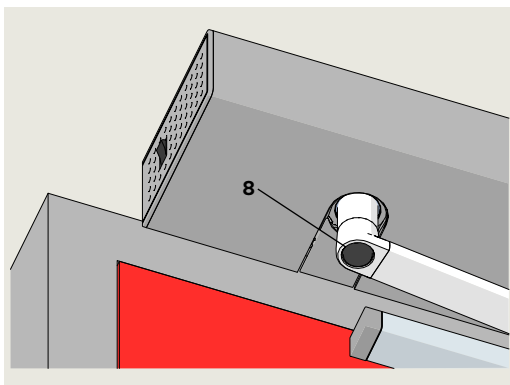

### 32.5.1 Check drive arm M8 SHCS torque.


1. Set program switch to CLOSE.
2. Remove cap over M8 SHCS.
3. Check torque.
4. Replace cap.

#### CAUTION

Using torque wrench with 5 mm hex key socket, check M8 SHCS torque. 17 ft-lb [23 Nm].

Fig. 32.5.2 M8 SHCS

5 M8 x \_\_ SHCS

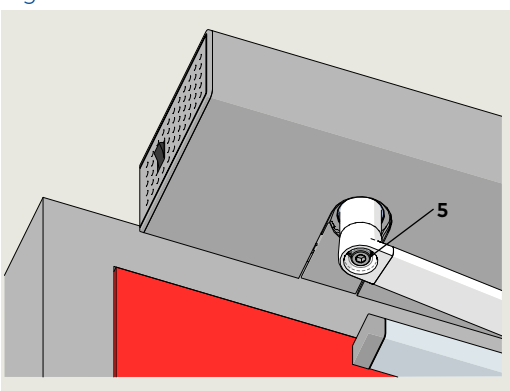

### 32.5.2 Check pivot pin M8 socket head torque.


1. Check torque.

#### CAUTION

Use torque wrench with hex key socket. M8 screw torque: 5.9 - 7.4 ft-lb [8 - 10 Nm].


Fig. 32.5.3 Pivot pin M8 socket head

3 Pivot pin M8 socket head

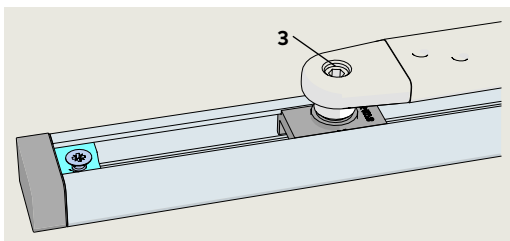


## 32.6 Push arm maintenance

Fig. 32.6.1 Push arm assembly

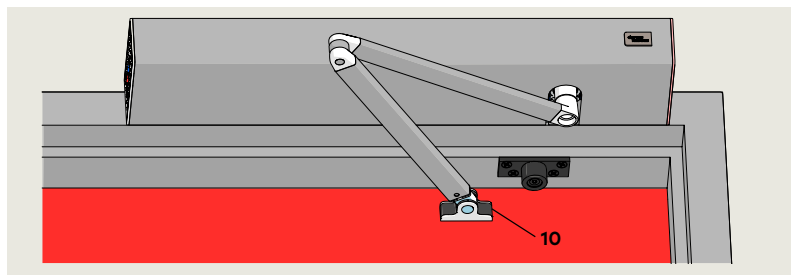

10 Screw cover caps

Fig. 32.6.2 Push arm assembly hardware

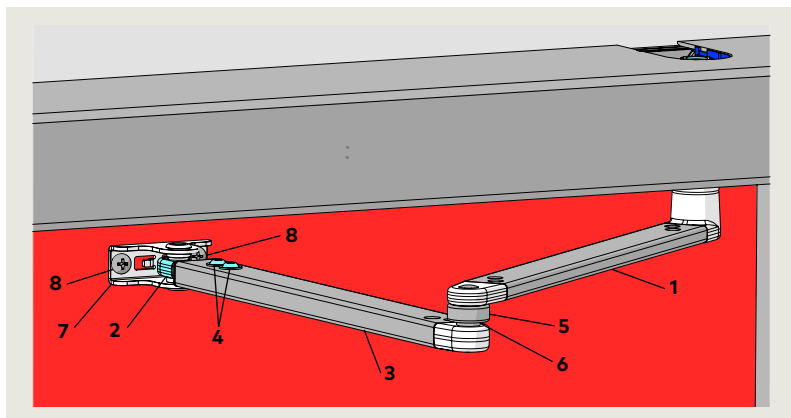

- |                       |                              |                            |
|-----------------------|------------------------------|----------------------------|
| 1 Drive arm           | 4 M6 x 10 button head screws | 6 Adjustment arm ball head |
| 2 Adjustment arm      | 5 Drive arm socket           | 7 Shoe                     |
| 3 Adjustment arm tube |                              | 8 Shoe mounting screws (2) |

- |  |
|--|
| 2 Adjustment arm                       |
| 3 Adjustment arm tube                  |
| 4 M6 x 10 mm flanged button head screw |
| 7 Shoe                                 |
| 9 Articulated bearing                  |
| 11 M8 SHCS                             |

- |             |
|-------------|
| 5 Socket    |
| 6 Ball head |

Fig. 32.6.3 Shoe bearing


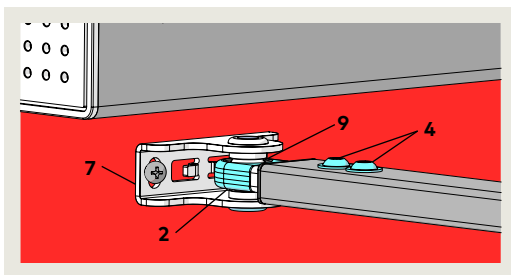


Fig. 32.6.4 Arm socket and ball head



### 32.6.1 Push arm maintenance.

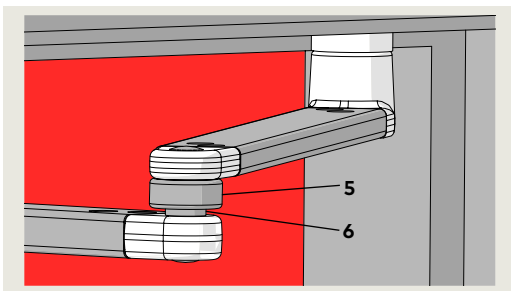

#### WARNING

Set program switch to CLOSE before performing maintenance!

- Adjustment arm.
  - Check for wear or damage.
  - Check tightness of M6 x 10 flanged button head screws (Fig. 32.6.2).
- Shoe and adjustment arm assembly:
  - Check for wear or damage at shoe bearing (Fig. 32.6.3).
- Adjustment arm socket and ball head (Fig. 32.6.4).
  - Check for wear or damage.

### 27.6.2 Shoe door mounting screws .

- Remove screw cover caps (Fig. 32.6.1).
- Check for tightness of mounting screws (Fig. 32.6.3).
- Replace screw cover caps.


### 27.6.3 Drive arm to ED50 spindle.

- Remove spindle cap.
- Check tightness of M8 SHCS.

#### CAUTION


Using torque wrench with 5 mm hex key socket, torque M8 SHCS to 17 ft-lb [23 Nm].

Fig. 32.6.5 Spindle M8 SHCS

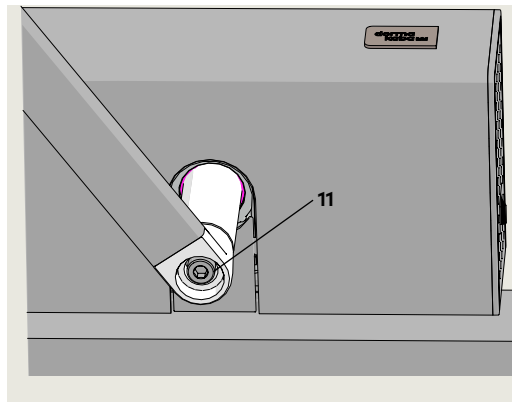


## 32.7 ED900 brake maintenance

Fig. 32.7.1 ED900 operator

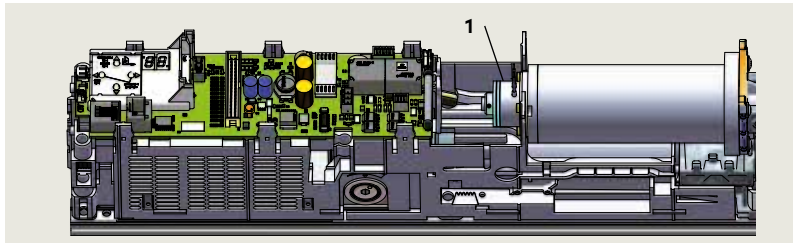

1 Brake assembly

Fig. 32.7.2 Brake to brake disc air gap

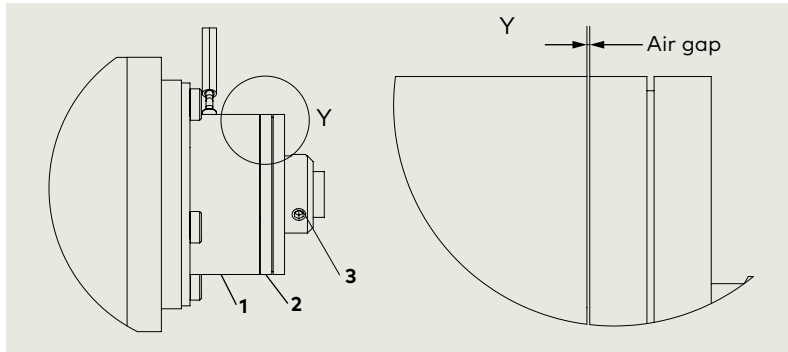

1 Brake assembly  
2 Brake disc assembly  
3 M3 x 3 SHCS

Fig. 32.7.3 Brake assembly

1 Brake assembly  
2 Brake disc assembly  
3 M3 x 3 set screw  
4 Brake motor flange  
6 M3 x 5 SHCS

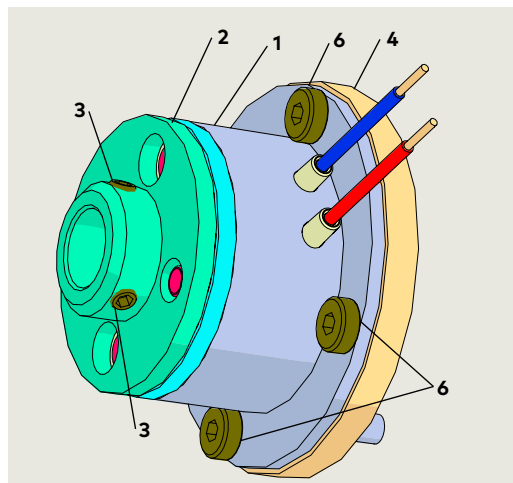


Fig. 32.7.4 Feeler gauge set



### 32.7.1 Adjustment of air gap: brake to brake disc (Fig. 32.7.2).



#### TIPS AND RECOMMENDATIONS

Reference drawing:  
254197-01-50



#### WARNING

Set program switch to CLOSE before performing maintenance!

#### CAUTION

Air gap setting between brake and brake disc:  
0.1 mm to 0.3 mm  
(0.004" to 0.012")

- Using 2.5 mm hex key, loosen three M3 x 3 set screws securing brake disc to motor shaft.
- Insert feeler gauge [air gap setting for sizing] between brake disc and brake.
- Move brake disc against shim(s).
- Screw M3 x 3 set screws against motor shaft but do not tighten.
- Remove feeler gauge.
- Tighten M3 x 3 set screws.

#### CAUTION

M3 x3 SHCS torque setting:  
5.3 in-lb + 0.9 in-lb [0.6 Nm +0.1 Nm].




#### TIPS AND RECOMMENDATIONS

Paper stock thickness:  
approximately 0.003"

- 1 Brake assembly
- 2 Brake disc assembly
- 6 M3 x 5 SHCS

Fig. 32.7.5 M3 x 5 SHCS

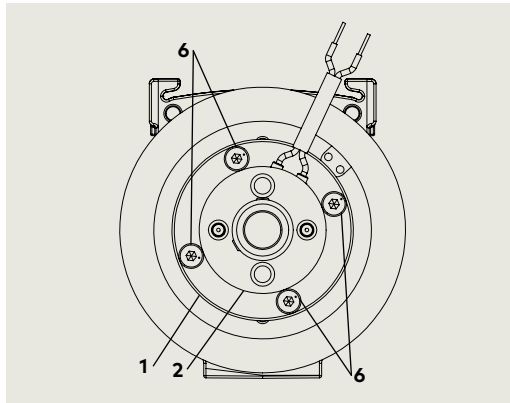

**32.7.2 Torque setting of M3 x 5 SHCS.**

- 5.3 in-lb + 0.9 in-lb [0.6 Nm +0.1 Nm]

Fig. 32.7.6 Brake disc assembly removed from brake

- 1 Brake assembly
- 2 Brake disc assembly
- 5 Motor shaft

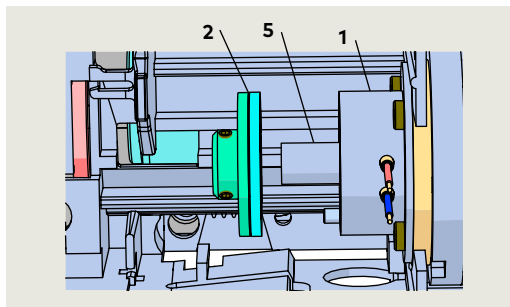


Fig. 32.7.7 Brake and brake disc assemblies

- 1 Brake assembly
- 2 Brake disc assembly
- 6 M3 x 5 SHCS


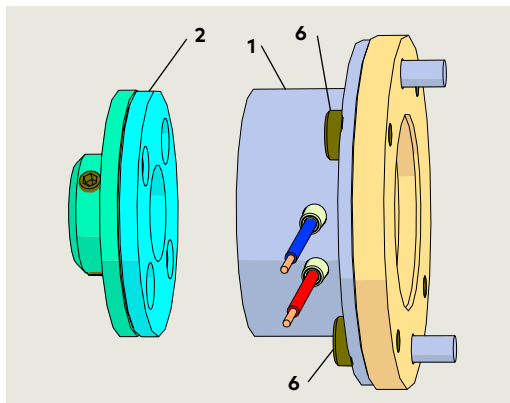


Fig. 32.7.8 Brake coil wiring







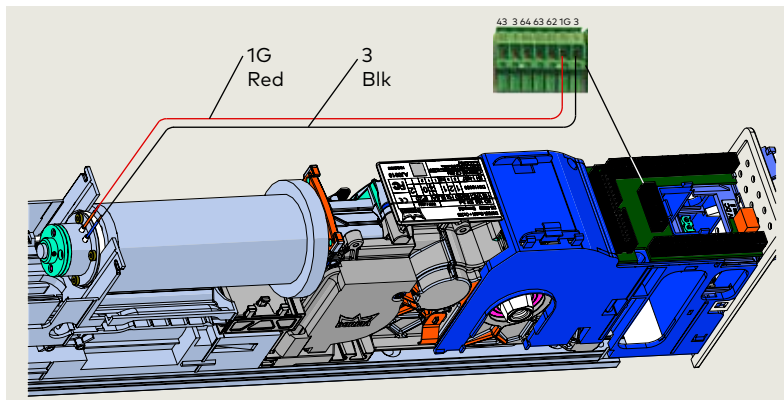





# Appendix A – Driving parameters – detail

## A.1 Driving parameters detail







### A.1.1 Driving parameters detail.

Parameter	Value range	Units	Factory setting	Description	
<b>Opening speed, automatic mode</b>					
5		ED900 8 - 27 %/s	<b>25</b>	<ol style="list-style-type: none"> <li>Opening speed refers to automatic mode. Speed can be adjusted using this parameter.</li> <li>Internal monitoring system checks if parameter setting is admissible. If setting exceeds value, the setting is alternately displayed with the permissible value.</li> <li>After parameter set, verify setting meets ANSI/BHMA standard A156.19 (low energy) See Chapter 25.</li> </ol>	
<b>Closing speed, automatic mode</b>					
6		ED900 2 - 27* %/s	<b>25</b>	<ol style="list-style-type: none"> <li>Closing speed refers to automatic mode. Speed can be adjusted using this parameter.</li> <li>Internal monitoring system checks if parameter setting is admissible. If setting exceeds admissible value, the setting is alternately displayed with the permissible value.</li> <li>After parameter set, verify setting meets ANSI/BHMA standard A156.19 (low energy) See Chapter 25.</li> </ol> <p>*ED900: maximum closing speed 27%/s in low energy mode.</p>	
<b>Hold open time, automatic mode</b>					
7		0 - 30	s	<b>5</b>	<ol style="list-style-type: none"> <li>Hold open time starts once all internal, external, safety and push and go inputs have been opened or dropped, and door is in an open position.</li> <li>Hold open time values from 5 to 30 s are set in increments of 1 second.</li> <li>In low energy mode, a minimum hold open time of 5 seconds is required.</li> <li>Hold open time can be re-triggered.</li> </ol>
<b>Night-bank hold open time</b>					
8		0 - 30	s	<b>10</b>	<ol style="list-style-type: none"> <li>Night-bank (key switch) hold open time is set using this parameter.</li> <li>Night-bank Hold open time starts once contact on night-bank activator input is opened and door is in an open position.</li> <li>Night-bank hold open time can be re-triggered.</li> </ol>
<b>Hold open time, manual opening</b>					
9		0 - 30	s	<b>1</b>	<ol style="list-style-type: none"> <li>Default hold open time of 1 second that follows every manual opening of door can be adjusted using parameter <b>do</b>.</li> <li>Hold open time starts when door is released.</li> </ol>
<b>Wall masking on door hinge side</b>					
10	 	60 - 99	°	<b>80</b>	<ol style="list-style-type: none"> <li>Wall masking required if door opens against an obstacle.</li> <li>When door reaches set wall masking angle, system will ignore signal from safety sensor on door swing (hinge) side.</li> <li>The wider the detection range of safety sensor used, the greater the area must be in which system has to ignore sensor's emitted signal. To insure personnel safety, it is advised to keep this range as small as possible.</li> <li>If set wall masking angle is exceeded when door is being opened, a rapidly flashing dot appears in top left hand corner of 2 digit display.</li> <li>Rapidly flashing dot disappears when door angle drops below set wall masking angle.</li> </ol>







**A.1.1 Driving parameters detail.**

Parameter	Value range	Units	Factory setting	Description	
<b>Safety sensor test</b>					
11 	0 - 8		<b>0</b>	Safety sensor parameter <b>ST</b> must be set to sensors used and if they are active-high or active-low. See E 04 safety sensor test error, Appendix B.	
				0	Sensor test off.
				1	Sensor test on swing (hinge) side. Active-high
				2	Sensor test on swing and approach sides. Active-high
				3	Sensor test on swing and approach sides. Active-high
				4	Sensor test on swing side. Active-low
				5	Sensor test on approach side. Active-low
				6	Sensor test on swing and approach sides. Active-low
				7	Wall mounted sensor with data line. Lock monitoring not available.
8	Sensor test overhead sensor type Bodyguard III or Premier T with monitoring input.				
<b>Activation by safety sensor on approach (opposite hinge) side</b>					
12 	0 - 1		<b>0</b>	0 Safety sensor's input is disregarded as soon as door is closed.	
				1	Safety sensor can trigger an opening pulse while door is closed.
<b>Suppression of safety sensor on swing (hinge) side during initialization drive</b>					
13 	0 - 1		<b>0</b>	0 Safety sensor on swing side is active during an initialization drive after a power on reset.	
				1	1. With SP set to 1, operator will disregard swing side safety sensor during initialization drive. After a power on reset, operator starts an initialization drive at slow speed. The initialization drive cannot be completed if safety sensor on hinge side is, or has been triggered.
<b>Delayed opening time for locking mechanism</b>					
14 	0 - 40 * 100	ms	<b>3</b> *100	1. Delayed opening time delay starts as soon as door opening pulse has been generated. 2. Door opens on expiration of time delay. 3. If parameter is set to "0" and input for locking feedback contact is closed, door will not perform a preload <b>Pu</b> before door unlocks. 4. Since various motor locks do not have feedback contacts, a delay of up to 4 seconds is possible	






**A.1.1 Driving parameters detail.**

Parameter	Value range	Units	Factory setting	Description
<b>Door preload prior to unlocking</b>				
15	 0 - 9		<b>0</b>	<ol style="list-style-type: none"> <li>1. Door preload prior to unlocking; force with which door is pushed in the "closed" direction before door is opened.</li> <li>2. The door may need to be pushed in closing direction (preload) in order to release electric strike to insure door opens.</li> <li>3. Preload time is set by parameter <b>Ud</b>, delayed opening time for locking mechanism.</li> <li>4. To maintain long service life, set preload force only as high as necessary.</li> </ol>
<b>Power reserve module SVP-PR 12 test</b>				
16	  0 - 1		<b>0</b>	<ol style="list-style-type: none"> <li>0 Test off</li> <li>1                     <ol style="list-style-type: none"> <li>1. SVP-PR 12 power reserve module test is performed once every 24 hours, or 10 minutes after AC power has been turned on. In event of an error:                             <ul style="list-style-type: none"> <li>• Unlocking is not performed and no automatic door movements are initiated.</li> <li>• Error code <b>E 25</b> is displayed, Appendix B, troubleshooting error codes.</li> </ul> </li> <li>2. SVP-PR 12 power reserve module can be used but must be tested on a regular basis if using:                             <ul style="list-style-type: none"> <li>• SVP-2000 DCW® emergency escape motor lock with automatic latching action.</li> <li>• M-SVP 2000 DCW® emergency escape lock.</li> </ul> </li> <li>3. Test is automatically activated if a fire protection module is recognized in conjunction with SVP-2000 DCW® or M-SVP 2000 DCW® locks.</li> </ol> </li> </ol>
<b>Static force in opening direction</b>				
17	 2- 15 *10 .45- 3.4 *10	N lbf	<b>6</b> *10 1.35 *10	<ol style="list-style-type: none"> <li>1. Static force in opening direction (basic parameter for wind load control). Static force on door closing edge can be changed using this parameter.</li> <li>2. Internal monitoring system checks if parameter setting is admissible. If setting exceeds admissible value, the setting is alternately displayed with the permissible value.</li> <li>3. After parameter set, verify setting meets ANSI/BHMA standard A156.19 (low energy). See Chapter 30.</li> <li>4. ED900 low energy operator: static force range is reduced.</li> </ol>
<b>Static force in closing direction</b>				
18	 2- 15 *10 .45- 3.4 *10	N lbf	<b>6</b> *10 1.35 *10	<ol style="list-style-type: none"> <li>1. Static force in closing direction (basic parameter for wind load control). Static force on door closing edge can be changed using this parameter.</li> <li>2. Internal monitoring system checks if parameter setting is admissible. If setting exceeds admissible value, the setting is alternately displayed with the permissible value.</li> <li>3. After parameter set, verify setting meets ANSI/BHMA standard A156.19 (low energy). See Chapter 30.</li> <li>4. ED900 low energy operator: static force range is reduced.</li> </ol>
<b>Motor driven latching action, automatic mode</b>				
19	 0 - 9		<b>0</b>	<ol style="list-style-type: none"> <li>1. System offers a motor driven latching action in automatic mode in addition to mechanical latching action.</li> <li>2. The <b>EP</b> parameter setting is designed to increase static force on door to insure proper closing despite resistance caused by door seals or locking devices.</li> <li>3. Setting should be increased step by step from a low setting so as to avoid damage to the system. Use the lowest possible setting.</li> <li>4. Ensure that both the door itself and the arm or track installation are suitable for the additional, permanent forces.</li> </ol>




**A.1.1 Driving parameters detail.**

Parameter	Value range	Units	Factory setting	Description
<b>Motor driven latching action angle</b>				
20	 2 - 10	°	<b>3</b>	Door opening angle at which motor driven latching action <b>EP</b> is activated. <ul style="list-style-type: none"> <li>Starting angle of the latching angle adjustable from 10°.</li> </ul>
<b>Keep closed force</b>				
21	 0 - 9		<b>0</b>	<p>0 Off</p> <p>1 to 9</p> <ol style="list-style-type: none"> <li>Keep closed force is:                             <ul style="list-style-type: none"> <li>Permanently applied following motor drive latching action.</li> <li>Designed to keep door in closed position even if wind acts on door.</li> </ul> </li> <li>Keep closed force can be set from 0 (off) to 9, maximum force.</li> </ol>
<b>Push &amp; Go</b>				
22	 0 - 1		<b>0</b>	<p>0 Off</p> <p>1</p> <ol style="list-style-type: none"> <li>Parameter is activated.</li> <li>Automatic opening of door is started when door is manually moved 4° out of the closed position.</li> <li>Door close mode parameter <b>hd</b> must be set to "0" (manual) to enable this function.</li> </ol>
<b>Program switch type</b>				
23	 0 - 4		<b>0</b>	<p>0 Internal, operator mounted program switches are active.</p> <p>1 External mechanical program switch with contacts is connected to operator terminal board. Internal program switch connector must be removed.</p> <p>2 External DCW® electronic program switch (EPS) is connected to operator terminal board. Internal program switch connector must be removed.</p> <p>3 Program switch control by TMS Soft control software.</p> <p>4</p> <ol style="list-style-type: none"> <li>DCW® electronic program switch (EPS) is installed, and operator is also connected by the building management system to TMS Soft control software.</li> <li>When <b>PS</b> is set to 4, the program switch functions can be changed from DCW® (EPS) to TMS Soft..</li> </ol>
<b>DCW® Electronic program switch (EPS) behavior following power reset</b>				
24	 0 - 1		<b>0</b>	<p>0</p> <ol style="list-style-type: none"> <li>In event of power failure, or if operator is deliberately switched off, EPS will automatically switch to last known position when power returns.</li> <li><b>Important:</b> The time at which power returns might not be during business hours and may affect insurance-compliant door locking requirements.</li> </ol> <p>1</p> <ol style="list-style-type: none"> <li>In event of power failure, or if operator is deliberately switched off, EPS will automatically switched to OFF position when power returns.</li> <li>This function should be used iif insurance compliant locking if required.</li> </ol>
<b>Internal program switches, switch on delay</b>				
25	 0 - 1		<b>0</b>	<p>0 Operator will perform function of new switch setting as soon as internal program switch is moved.</p> <p>1</p> <ol style="list-style-type: none"> <li>Operator will perform function of new switch setting after a delay of 10 seconds from when internal program switch is moved.</li> <li>This function is useful if user has to pass through door and its connected detectors and sensors after program switch is set to new function.</li> </ol>







**A.1.1 Driving parameters detail.**

Parameter	Value range	Units	Factory setting	Description
<b>Unlocking during business hours</b>				
26		0 - 1	0	0 Door is always locked when it reaches closed position.
				1 <ol style="list-style-type: none"> <li>In automatic mode, door will not lock when it reaches closed position. This achieves faster door opening when system is equipped with motor driven locks.</li> <li>If an electric strike opener is used, it must be suitable for 100% continuous duty factor to avoid possibility of damage.</li> </ol>
<b>Status relay function, X7 terminals</b>				
27		0 - 6	1	0 Status relay is deactivated.
				1 Status relay activated as soon as door reaches door "closed" position.
				2 Status relay activated as soon as door reaches door "open" position.
				3 Status relay activated when error codes are displayed on 2 digit operator display.
				4 "Door closed and locked" activates status relay.
				5 Status relay activated when information or error codes are displayed on 2 digit operator display.
6 <ol style="list-style-type: none"> <li>Status relay activated when door is opened further than opening angle parameter <b>OA</b>, set during learning cycle.</li> <li>Parameter <b>OA</b> value can only be changed using dormakaba handheld or by performing another learning cycle.</li> </ol>				
	<b>Locking device output configuration; output X3, 1G (24V) and input X6, 4/4a</b>			
Reference Chapter 7				
28		0 - 1	0	0 Locking device output terminal X3, 1G (24V) is independent of Input X6, 4/4a.
				1 <ol style="list-style-type: none"> <li>Locking device output terminal X3, 1G (24V) is turned on as soon as contact at X6, 4/4a is opened..</li> <li>Terminal X3, 1G 24V output is on for as long as contact at X6, 4/4a is open, motor lock with a 100% duty factor is required.</li> <li>This function is not available for DCW motor locks.</li> </ol>
<b>Cycle counter</b>				
29		0 - 99 * 10000	cycles	<ol style="list-style-type: none"> <li>Total number of opening and closing cycles displayed is shown in increments of 10000.                             <ul style="list-style-type: none"> <li>Display value, "4", 40,000 cycles.</li> <li>Display value, "53", 530,000 cycles.</li> </ul> </li> <li>Total number of cycles can be displayed on dormakaba handheld.</li> <li>A display value of "99" means 990,000 cycles or greater.</li> </ol>
<b>Delete error log</b>				
30		0 - 1	0	0 No function.
				1 <ol style="list-style-type: none"> <li>When "1" entered, Error log is deleted.</li> <li>Parameter is then automatically reset to "0".</li> </ol>








**A.1.1 Driving parameters detail.**

Parameter	Value range	Units	Factory setting	Description
<b>Reset service interval display, operator yellow LED</b>				
31	 0 - 1		<b>0</b>	<p>0 No function.</p> <hr/> <p>1</p> <ol style="list-style-type: none"> <li>When "1" entered:                             <ul style="list-style-type: none"> <li>Service cycle counter is reset to 200,000.</li> <li>Service interval is reset to 12 months.</li> <li>Yellow LED not illuminated.</li> </ul> </li> <li>Parameter is then automatically reset to "0".</li> <li>Values other than default values must be set using dormakaba USA, Inc. handheld:                             <ul style="list-style-type: none"> <li>Maintenance interval</li> <li>Maintenance cycles</li> </ul> </li> </ol>
<b>Factory setting level</b>				
32	 1 - 2		<b>1</b>	<p>Parameter <b>SL</b> is used to determine what data will be reset during factory setting process.</p> <p>Standard factory settings</p> <ul style="list-style-type: none"> <li>Program switches CLOSE.</li> <li>Door closed.</li> </ul> <p>1</p> <ul style="list-style-type: none"> <li>Press 4 button keypad down button for greater than 8 s.</li> </ul> <ol style="list-style-type: none"> <li>All parameters reset to factory settings.</li> <li>Procedure completed when "8" on 2 digit displays blinks twice.</li> <li>Installed upgrade cards remain valid and do not require reinstallation.</li> <li>Learning cycle required.</li> </ol> <hr/> <p>Extended factory settings</p> <ul style="list-style-type: none"> <li>Program switches CLOSE.</li> <li>Door closed.</li> <li>Press 4 button keypad down button for greater than 8 s.</li> </ul> <p>2</p> <ol style="list-style-type: none"> <li>All parameters reset to factory settings.</li> <li>Procedure completed when "8" on 2 digit displays blinks twice.</li> <li>Installed upgrade cards deleted from operator memory.</li> <li>Parameter <b>SL</b> automatically reset to 1.</li> <li>Control unit and upgrade cards can be used independently (delivery status).</li> <li>Learning cycle required..</li> </ol>
<b>Opening angle</b>				
33	 0 - 110	°		<ol style="list-style-type: none"> <li>Door opening angle set during learning cycle is displayed.</li> <li>Opening angle can only be changed during learning cycle.</li> <li>Due to installation and parameter tolerances, display value may not match actual door position.</li> </ol>

**A.1.1 Driving parameters detail.**









Parameter	Value range	Units	Factory setting	Description
<b>Door closer mode</b>				
34	 0 - 1		<b>1</b>	<ol style="list-style-type: none"> <li>Automatic mode. This mode is applicable whenever door is mainly opened automatically and where motion detectors are installed.</li> <li>Mode is optimized for high frequency use.</li> <li>Full energy upgrade card provides for higher door opening and closing speeds.</li> <li>In case door is blocked during a closing cycle, operator reverses automatically.</li> <li>Driving phase is optimized to provide reliable closing cycles.</li> <li>Keep closed force (wind load control) parameter <b>FH</b> and Push &amp; Go function parameter <b>PG</b> are only available in automatic mode.</li> </ol>
				<ol style="list-style-type: none"> <li>Manual mode. This mode is applicable whenever door is mainly used manually and only rarely automatically.</li> <li>In case door is blocked during a closing cycle, door will stop at its current position.</li> <li>Driving phase optimized for manual opening cycles.</li> <li>Power assist function parameter <b>hf</b> is only available in manual mode.</li> </ol>
<b>Power assist activation angle</b>				
35	 1 - 5	°	<b>3</b>	<ol style="list-style-type: none"> <li>Setting of door activation angle for Power assist function (<b>hF</b>).</li> <li>Higher settings of <b>hA</b> result in better spring force compensation for easier manual opening.</li> <li>Power assist function is more sensitive the smaller the activation angle.</li> </ol>
<b>Power assist function</b>				
36	 0 - 10		<b>0</b>	<ol style="list-style-type: none"> <li>Force setting for Power assist function.</li> <li>Power assist function only available with <b>hd</b> parameter = 1, manual mode.</li> <li>"0"; power assist function OFF; power assist function enabled for available values greater than 0.</li> <li>Power assist function enabled when power assist activation angle <b>hA</b> reached.</li> <li>The greater the value of <b>hF</b>, the easier the door can be manually opened from power assist activation angle <b>hA</b>.</li> <li>If power assist set too high, door can open automatically.</li> <li>Power assist function is not available                             <ul style="list-style-type: none"> <li>If operator is switched off</li> <li>A smoke detector or emergency button has been triggered.</li> </ul> </li> </ol>
<b>Power assist function support for manual mode in door closed position</b>				
37	  0 - 10		<b>0</b>	<ol style="list-style-type: none"> <li>Setting for power assist function support with door in <b>closed</b> position.</li> <li>Power assist function only available with <b>hd</b> parameter = 1, manual mode.</li> <li>The greater the value of <b>hS</b>, the easier the door can be manually opened from the <b>closed</b> position.</li> </ol>
<b>Upgrade card units codes</b>				
	0 - 3		<b>0</b>	<ol style="list-style-type: none"> <li>0 Upgrade card not installed, function not available.</li> <li>1 Upgrade card installed, function not activated.</li> <li>2 Upgrade card installed, function activated.</li> <li>3 Upgrade card has been removed, function no longer available.</li> </ol>
<b>Upgrade card, fire protection</b>				
38	 0, 2, 3		<b>0</b>	<ol style="list-style-type: none"> <li>Once upgrade card installed, parameter value will automatically change to 2.</li> <li>Following activation, drive may be used as a electrically controlled hold-open system according to EN 14637, Building hardware-Electrically controlled hold-open systems for fire/smoke door assemblies, or similar standards.</li> <li>Full energy function is automatically activated.</li> <li>Plug for terminal board X9 socket included with upgrade card.</li> </ol>

**A.1.1 Driving parameters detail.**

Parameter	Value range	Units	Factory setting	Description				
39				Not used.				
<b>Upgrade card professional, impulse relay Not available</b>								
40		0, 1, 2, 3	0	<ol style="list-style-type: none"> <li>Once upgrade card installed, parameter value will automatically change to 1.</li> <li>Function must be activated by changing parameter <b>F3</b> to 2.</li> <li>Door can be controlled with a pushbutton connected to Night-bank input without a door hold open time: <ul style="list-style-type: none"> <li>Door opens with first pulse and remains open. The hold open time is not limited.</li> <li>Door closes only with second pulse of pushbutton.</li> </ul> </li> <li>Pushbutton in 3. must be connected to terminal board Night-bank input: <ul style="list-style-type: none"> <li>X1, 3 and 35 (dry)</li> <li>X10, 57 and 57a (wet)</li> </ul> </li> <li>Standard hold-open time <b>dd</b> is available when door is opened using other internal and external detectors.</li> </ol>				
<b>Upgrade card professional, extended hold-open time Not available</b>								
41		0, 2, 3	0	<ol style="list-style-type: none"> <li>Once upgrade card installed, parameter value will automatically change to 2.</li> <li>Setting range of <b>dd</b>, hold -open time is extended from 0 - 30 s to 0 - 180 s.</li> </ol>				
<b>Upgrade card professional, nurse - bed function (double doors only) Not available</b>								
42		0, 1, 2, 3	0	<ol style="list-style-type: none"> <li>Once upgrade card installed, parameter value will automatically change to 1.</li> <li>Function must be activated by changing parameter <b>F5</b> to 2.</li> <li>For double doors, this function enables: <ul style="list-style-type: none"> <li>Separate door opening (only active door, nurse)</li> <li>Both doors open (active, inactive doors, bed)</li> </ul> </li> <li>The activator connected to the external detector (terminal board X4, 41 and 3) controls the active door (nurse function). Only the active door will open.</li> <li>The activator connected to the internal detector (terminal board X4, 42 and 1) controls the both active and inactive doors (bed function), both doors will open.</li> <li>If Push &amp; Go function <b>PG</b> is activated, only the active door will open in the event of a manual opening.</li> <li>Night-bank inputs will only cause the active door to open.</li> <li>Exit only program switch function is not available with <b>F5</b> activated.</li> </ol>				
<b>Upgrade card barrier free toilet</b>								
43		0, 1, 2, 3	0	<ol style="list-style-type: none"> <li>Once upgrade card installed, parameter value will automatically change to 1.</li> <li>Function must be activated by changing parameter <b>F7</b> to 2.</li> <li>Operator power reset is required; turn power switch off, wait 10 s and turn power back on.</li> <li>Upgrade card assigns inputs and outputs of the control unit with functions which are required for this application.</li> </ol>				
<b>Upgrade card DCW®</b>								
44		0, 2, 3	0	Not used.				
<b>COM 1 configuration interface</b>								
45		0 - 1	0	<table border="0"> <tr> <td style="width: 20px;">0</td> <td>Interface programmed for communication with dormakaba handheld.</td> </tr> <tr> <td>1</td> <td>Interface programmed for use with Dorma USA, Inc. TMS Soft control software.</td> </tr> </table>	0	Interface programmed for communication with dormakaba handheld.	1	Interface programmed for use with Dorma USA, Inc. TMS Soft control software.
0	Interface programmed for communication with dormakaba handheld.							
1	Interface programmed for use with Dorma USA, Inc. TMS Soft control software.							



**A.1.1 Driving parameters detail.**


Parameter	Value range	Units	Factory setting	Description
<b>Backcheck when door opened manually</b>				
46	 5 - 40 (v1.9)	°	<b>10</b>	<ol style="list-style-type: none"> <li>Angle after which door is braked when manually opened.</li> <li>Back check level is automatically optimized during manual door opening cycles. This function improves door braking behavior in end position so door does not move beyond set opening angle <b>OA</b>. Entered value is subtracted from set opening angle <b>OA</b>.</li> <li>Example                             <ul style="list-style-type: none"> <li>Opening angle, 90°</li> <li>Parameter <b>bc</b>, 12°</li> <li>Door back check starts at 78°.</li> </ul> </li> </ol>
<b>Door thickness</b>				
47	 0 - 99	mm	<b>35</b>	<ol style="list-style-type: none"> <li>Parameter is entered in mm.</li> <li>Door thickness affects measured door opening angle.</li> <li>Parameter <b>Td</b> enables a more accurate door width to be entered, if required.</li> </ol>
	 0 - 3 7/8"		1 3/8"	
<b>Deactivation of drive; X6, 4 and 4a, trigger type</b>				
48		0 - 1	<b>0</b>	0 NC contact, drive function is deactivated when NC contact is open.
				1 NO contact, drive function is deactivated when NO contact is closed.
<b>Night-bank contact X1; 3 and 35, trigger type</b>				
49		0 - 1	<b>0</b>	0 <ol style="list-style-type: none"> <li>NO contact, night-bank function is triggered when NO contact is closed.</li> <li>Typically used when using a key switch or an access control system.</li> </ol>
				1 <ol style="list-style-type: none"> <li>NC contact, night-bank function is triggered when NC contact is opened.</li> <li>Typically used when connected to building management system to trigger doors (signal normally present).</li> </ol>
<b>Release of hold-open system</b>				
50		0 - 1	<b>1</b>	1 <ol style="list-style-type: none"> <li>Upgrade care Fire Protection installed, users may release hold-open by manually moving door in closed direction.</li> <li>A manual release button is not required.</li> </ol>
				0 <ol style="list-style-type: none"> <li>Hold-open release by manually moving door in closed direction is deactivated.</li> <li>A manual release button is required.</li> </ol>
<b>Castor angle for double doors</b>				
51		0 - 30	°	<b>30</b>
<b>Hinge clearance</b>				
52		± 5 *10	mm	<b>3 *10</b>
		±3/16 *10	inches	
<ol style="list-style-type: none"> <li>Clearance between hinges is critical for the calculated door angle.</li> <li>It may only have a small effect but the clearance can be adjusted in extreme cases to improve accuracy.</li> <li>Factory setting is 3 * 10, 30 mm, 1 3/16".</li> <li>With CPD doors, setting must be changed to a negative value. A learning cycle is then required as system creates an angle table as a function of the set parameters.</li> </ol>				

# Appendix B – Troubleshooting

## B.1 Information and error codes


- 1 4 button keypad
- 2 2 digit display

Fig. B.1.1 User interface

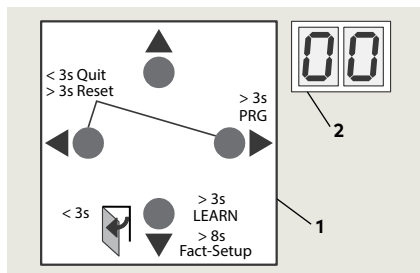


- 3 Power switch
- 4 Red LED
- 5 Yellow LED
- 6 Green LED

Fig. B.1.2 Operator LEDs

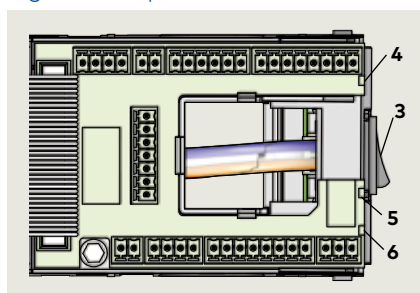

- 7 Program switch, es  
Close position

Fig. B.1.3 Program switches

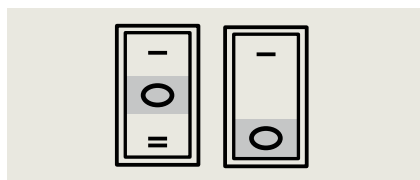

### TIPS AND RECOMMENDATIONS

Para. B.3, Information codes  
 Para. B.4, Error codes

### B.1.1 Overview

Operator monitors internal circuits and external safety circuits managed by the operator.

### B.1.2 Error and information messages.

1. With operator in use, certain conditions may develop resulting in error or information messages.
2. Operator attempts to identify the cause and respond accordingly.
3. Response depends on the severity of the error:
  - Information message (**In**)
  - Error message (**E**)
  - Deactivating the operator's automatic function; operator will switch to emergency mode. Users can then access door manually.

### B.1.3 User information display.

User interface display, or or dormakaba handheld displays:

- Information **In** codes
- Error message **E** codes

### B.1.4 Viewing error messages.

To access and view error messages, briefly press the right button on the 4 button keypad.

### B.1.5 Red LED on operator .

Red LED adjacent to operator power switch displays blinking codes for:

- Certain **In** information
- **E** error codes (Para. B.2)

### B.1.6 Resetting error codes.

Options for resetting error codes:

1. Set program switch in Close (off) position.
2. User interface Reset buttons:
  - Press both left and right buttons >3s to reset system.
  - Header cover must be opened to access user interface.
3. Power reset:
  - Turn power switch OFF.
  - Turn power switch back on after 10 seconds.

### CAUTION

Always analyze and remove cause for error before resetting error message!  
 Troubleshooting charts (Para. B.3,.4) are intended as a guide for diagnosing errors.

**B.1.7 Error message memory.**

1. There are ten error message memory locations; E 0 through E 9.
2. The latest error message is always stored in error memory location E 0:
  - As soon as another error occurs, the existing error stored in E 0 will be moved to E 1 and the latest error will be stored in E 0.
3. A maximum of 9 errors can be stored in memory locations E1 through E9.
4. Identical error messages occurring one after another are not stored again.

## B.2 Red LED status codes

**B.2.1 Red LED status codes**

Red LED status	Display	Description
Steady flashing		Control unit has detected error, emergency mode activated.
On steady	In 11	Hold-open device triggered.
Flashing 2 times	E 02	Locking device error.
Flashing 4 times	E 04	Safety sensor test error.
Flashing 5 times	E 25	SVP PR DCW module test negative.
Flashing 5 times	E 51 E 52 E 53	Incremental encoder error.
Flashing 6 times	E 62	Double door operation, 2nd system has incompatible firmware version.
Flashing 6 times	E 63	Double door operation, 2nd system has incompatible fire protection setting.
Flashing 7 times	E 71	System error 1 (test), second shutdown option.
Flashing 7 times	E 72	System error 2 (test), current measuring circuit.
Flashing 7 times	E 73	System error 3 (test), braking circuit
Flashing 12 times	E 12	EEPROM error
Flashing 13 times	E 13	Motor overcurrent
Flashing 15 times	E 15	Faulty learning cycle

## B.3 Troubleshooting chart, "In" codes

### B.3.1 Troubleshooting chart, information messages.

No.	Display	Red LED	Description	Troubleshooting information messages
	In 01	Off	<p><b>Obstruction</b> Door obstructed by an obstacle or person; door movement stopped by operator.</p>	<p>Sustained operation on a door with an obstruction can result in damage to drive.</p> <ol style="list-style-type: none"> <li>Object or person obstructing door movement. <ul style="list-style-type: none"> <li>Check door movement while system is deenergized.</li> <li>Remove cause of anything obstructing door movement.</li> </ul> </li> <li>Sensor detection range too small. <ul style="list-style-type: none"> <li>Obstructions are often caused by people using door due to sensor's detection range not matching operator's opening speed. Door is unavoidably contacted by person using door.</li> <li>Sensors detection range should be increased and/or operator's opening speed should be increased.</li> </ul> </li> <li>Test system operation after cause of obstruction found.</li> </ol>
2	In 08	Off	<p><b>Deactivation of drive function</b></p> <ul style="list-style-type: none"> <li>Contact at X6, 4 and 4a is opened.</li> <li>Operator switched to emergency mode, door can only be used manually.</li> </ul>	<p>An emergency close switch, lock switch, or other system safety device may be connected to the X6 input.</p> <ol style="list-style-type: none"> <li>One of the activators connected to X6 may have opened, or a defect is present.</li> <li>Reset the applicable activator. Operator should start operation automatically.</li> <li>If In 08 still present, check activators or system wiring.</li> </ol>
3	In 09	Off	<p><b>Upgrade card error</b></p> <ul style="list-style-type: none"> <li>Installed upgrade card has been removed.</li> <li>If two upgrade cards were installed, the upgrade card installed first (container module) has not been reinstalled or is defective.</li> </ul>	<ol style="list-style-type: none"> <li>Installed upgrade card cannot be removed from ED900.</li> <li>If more than one upgrade card is installed, the first card installed becomes the container module. <ul style="list-style-type: none"> <li>Reference Chapter 25, for Upgrade cards installation.</li> <li>The container module must be installed last, after all other Upgrade cards are installed.</li> </ul> </li> <li>If container module is defective, first upgrade card (container module) must be replaced and all other upgrade cards must be reinstalled.</li> </ol>
4	In 11	On	<p><b>Hold-open system triggered.</b></p>	<ol style="list-style-type: none"> <li>Hold-open system can be triggered: <ul style="list-style-type: none"> <li>Automatically by smoke detector or building interface system.</li> <li>Manually by a manual release button.</li> <li>Manually moving door.</li> </ul> </li> <li>The system must be reactivated by a deliberate action.</li> <li>Depending on system's configuration, reactivation can be done by: <ul style="list-style-type: none"> <li>Manually moving door to taught opening angle.</li> <li>Switching program switch to Close (off).</li> <li>Pressing both 4 button keypad left and right buttons greater than 3s.</li> </ul> </li> <li>It must be ensured that a smoke detector or building interface has not been triggered.</li> <li>If reactivation is unsuccessful, there may be a defect in the smoke detector or building interface system or its connections.</li> </ol>
5	In 23	Off	<p><b>Locking alarm</b></p> <ul style="list-style-type: none"> <li>Door is blocked while in the closed position.</li> </ul>	<ol style="list-style-type: none"> <li>Most common cause of this error is the drive unit attempting to open a locked door.</li> <li>To eliminate the occurrence of this error, install a lock status switch. <ul style="list-style-type: none"> <li>Lock switch detects the lock pin's switching status and switches the drive unit off if necessary.</li> </ul> </li> <li>It is recommended to use a lock status switch, as repeated attempts to open a locked door may damage the drive unit or the door.</li> </ol>

**B.3.1 Troubleshooting chart, information messages.**

No.	Display	Red LED	Description	Troubleshooting information messages
6	In 61	Off	<b>Communication error, double door system</b> <ul style="list-style-type: none"> <li>No communication between the two operators.</li> </ul>	Reference ED900 double door installation manual. <ol style="list-style-type: none"> <li>Check communication cable connection at the two operators.</li> <li>Cable connects to the horizontal RJ 45 connector next to the user interface. Check communication cable.</li> </ol>
7	In 72	Off	<b>Current measuring circuit</b> <ul style="list-style-type: none"> <li>System could not successfully perform internal current measuring test, performed once every 24 hours.</li> </ul>	<ol style="list-style-type: none"> <li>The initial current measuring test may not always be successfully completed due to system tolerances and environmental conditions.</li> <li>The test may also fail, as an example, if someone uses the door while the test is in progress.</li> </ol>
8	In 73	Off	<b>Braking circuit test</b> <ul style="list-style-type: none"> <li>System could not successfully perform internal braking circuit test, performed once every 24 hours.</li> </ul>	<ol style="list-style-type: none"> <li>The initial braking circuit test may not always be successfully completed due to system tolerances and environmental conditions.</li> <li>The test also may fail, as an example, if someone uses the door manually while the test is in progress.</li> <li>If the cyclical test fails ten times in a row, error message <b>In 73</b> will be displayed.</li> </ol>
9	In 91	Off	<b>DCW® communication</b> <ul style="list-style-type: none"> <li>At least one registered DCW device is missing.</li> </ul>	<ol style="list-style-type: none"> <li>Reconnect the corresponding DCW® device.</li> <li>If this is not possible, reactivate the drive. Reactivation can be done by:               <ul style="list-style-type: none"> <li>Switching program switch to Close (off).</li> <li>Pressing both 4 button keypad left and right buttons greater than 3s.</li> </ul> </li> </ol>

**B.4 Troubleshooting chart, "E" codes****B.4.1 Troubleshooting chart, "E" codes.**

No.	Display	Red LED	Description	Troubleshooting error codes
1	E 02	Flashing 2 x	<b>Locking device error</b> <ul style="list-style-type: none"> <li>Operator is attempting to open or close a locking device with feedback, or a DCW® locking device. An error has occurred during this process.</li> </ul>	<ol style="list-style-type: none"> <li>Probable causes are a defective locking device or wiring defect.</li> <li>Check the locking device and feedback system.</li> </ol>
2	E 03	Flashing 3 x	<b>DCW® program switch is missing.</b>	<ol style="list-style-type: none"> <li>Check the DCW® program switch and its connections.</li> </ol>
3	E 04	Flashing 4 x	<b>Safety sensor test error</b> <ul style="list-style-type: none"> <li>Test of moving safety sensors was unsuccessful.</li> </ul>	<ol style="list-style-type: none"> <li>Factory setting level of "safety sensor test" parameter <b>ST</b> is 0, test off (Appendix A, Parameter detail).</li> <li>When <b>ST</b> is configured to installed safety sensors, a test signal is sent to the sensors before each door opening or closing cycle. Operator waits for a response within a certain time window.</li> <li>Check whether parameter <b>ST</b> has been configured to the installed safety sensors and their active-high or active-low signal level.</li> <li>Check for activation of the test at the safety sensors.</li> </ol>
4	E 12	Flashing 12 x	<b>EEPROM error</b> <ul style="list-style-type: none"> <li>Internal memory check could not be completed.</li> <li>Drive unit works in door closer mode.</li> </ul>	<ol style="list-style-type: none"> <li>Using dormakaba handheld, reload current firmware to reinitialize system.</li> <li>If the error is still present, the control unit must be replaced.</li> </ol>

**B.4.1 Troubleshooting chart, "E" codes.**


No.	Display	Red LED	Description	Troubleshooting error codes
5	E 13	Flashing 13 x	<p><b>Overcurrent detection</b></p> <ul style="list-style-type: none"> <li>Motor is consuming more current than drive unit can provide.</li> </ul>	<ol style="list-style-type: none"> <li>Motor is consuming too much power, check for any external causes.</li> <li>Drive unit or control unit is defective.</li> <li>If error repeats, operator must be replaced.</li> </ol>
6	E 15	Flashing 15 x	<p><b>Faulty learning cycle.</b></p> <ul style="list-style-type: none"> <li>Learning cycle could not be completed (Chapter 19).</li> </ul>	<ol style="list-style-type: none"> <li>Error may occur if learning cycle has been interrupted, for example if door movement has been interrupted during the learning cycle.</li> <li>Learning cycle must be repeated.</li> </ol>
7	E 25	Flashing 5 x	<p><b>SVP-PR 12 power reserve module test negative</b></p>	<ol style="list-style-type: none"> <li>See Appendix A, parameter <b>TS</b>, Power reserve module test.</li> <li>Check power reserve module and its wiring.</li> </ol>
8	E 51 E 52 E 53	Flashing 5 x	<p><b>Incremental encoder error</b></p> <ul style="list-style-type: none"> <li>Motor gear unit encoder monitoring detected a faulty state.</li> </ul>	<ol style="list-style-type: none"> <li>Check encoder plug connection at operator.                             <ul style="list-style-type: none"> <li>Secure connection.</li> <li>Wiring terminations</li> <li>Short circuits.</li> </ul> </li> <li>Check locking device for short circuits.</li> <li>Error can be caused by defective motor or short circuit in locking device.</li> <li>Motor gear unit must be replaced in event of defective motor.</li> </ol>
9	E 62	Flashing 6 x	<p><b>Incompatible firmware version, double door system, second system.</b></p>	<ol style="list-style-type: none"> <li>Equip both operators with same firmware version.</li> </ol>
10	E 63	Flashing 6 x	<p><b>Incompatible fire protection setting, double door system.</b></p>	<ol style="list-style-type: none"> <li>For double door systems, the Upgrade card fire protection must be installed in both control units.</li> </ol>
11	E 71	Flashing 7 x	<p><b>System error 1, 2nd shutdown option</b></p>	<ol style="list-style-type: none"> <li>In order to reliably switch off the drive unit, several switching elements are used and their functions are tested periodically.</li> <li>If the function test always results in the error code, the control unit must be replaced.</li> </ol>
12	E 72	Flashing 7 x	<p><b>System error 2, current measurement circuit</b></p>	<ol style="list-style-type: none"> <li>The current measurement circuit is part of the safety mechanisms and its function is tested periodically.</li> <li>If the function test always results in the error code, the control unit must be replaced.</li> </ol>
13	E 73	Flashing 7 x	<p><b>System error 2, current measurement circuit</b></p>	<ol style="list-style-type: none"> <li>The braking circuit is a safety element in the closer mode and will be tested every 24 hours.                             <ul style="list-style-type: none"> <li>During the test the motor is shut down during door closing and the door closes at a set angle in emergency mode.</li> <li>Test can be noticed as a short jerk on the door and is normal.</li> </ul> </li> <li>Error can be due to door closing in the deenergized state too fast (under 3 seconds). See Chapter 21, Power fail closing speed.</li> <li>Check the closing speed and reduce if necessary.</li> </ol>
14			<p><b>Energy management</b></p> <ul style="list-style-type: none"> <li>Motor is too hot (for example, too high an ambient temperature)</li> <li>System responds automatically.</li> </ul>	<ol style="list-style-type: none"> <li>Movement dynamics in the closed direction will be reduced.</li> <li>Movement dynamics in both the open and closed directions will be reduced.</li> <li>System shuts down for 3 minutes (door closer mode).</li> <li>Hold-open time will be extended.</li> </ol>

# Appendix C – dormakaba handheld

## C.1 dormakaba handheld terminal

Fig. C.1.1 dormakaba handheld

- 1 Off/On key
- 2 Function keys
- 3 Arrow keys
- 4 ENTER key
- 5 DEL key
- 6 SHIFT key
- 7 Alpha numeric keyboard
- 8 LED, recharging battery status (Off when batteries fully charged)
- 9 SD card slot

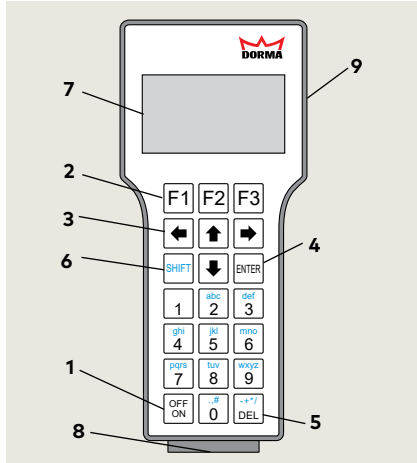

### C.1.1 Interface cable


Use dormakaba interface cable (Article No. 16596101170) to connect dormakaba handheld to operator Com 1 interface.

**CAUTION**

Never use conventional network cable with RJ45 plug! Using conventional cable may result in permanent damage to operator!

Fig. C.1.2 Com 1 interface

- 1 2 digit display
- 2 4 button keypad
- 3 Com 1 interface

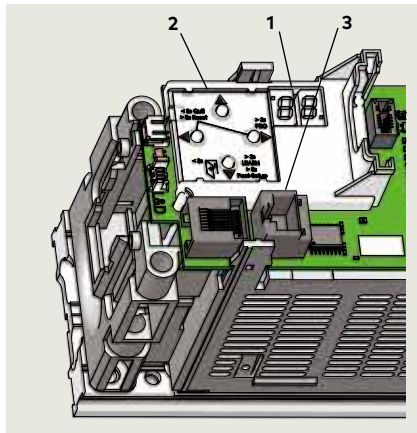

### C.1.2 Handheld key functions.

1. OFF ON, switches Handheld on or off.
2. Function keys F1 - F3, trigger functions shown in bottom line of display (e.g., "RPT" for repeat, "UP" and "DOWN" to switch lines, "UpDoLd" for file up and download, "CHANGE" to change values, "OPEN" to trigger opening pulses.
3. Arrow keys, allow navigation within the display. Use left arrow to get back to previous screen.
4. ENTER, selects individual menu items and confirms changes of values and settings.
5. DEL, deletes figures or letters.
6. SHIFT, switch between figures and letters or small and capital letters. Current function is indicated on display (n: numeral, A: capital letters, a: small letters).
7. Alpha numeric keyboard, allows entering values and file names in small and capital letters. There are several special characters (dot, comma, hash key, plus, minus, asterisk and diagonal slash)


### C.1.3 Handheld startup.

1. Press OFF ON to turn on Handheld terminal.
2. Screen displays Current version, creation date and name of data base. Handheld is ready for operation.
3. Select "COMMUNICATION" and enter user code (dormakaba original setting: 123456).
4. Handheld displays current software version of the connected operator (e.g., Ed900 SW- V1.40).

### C.1.4 Downloading current parameters.

1. Press function key F2 "UpDoLd" to access menu "UP/DOWNLOAD".
2. Select "Download" to download current adjustments and parameters. System stores this data as temporary file under file name "temp.tab".
3. Every change in configuration, parameter setting or special functions confirmed with the "ENTER" key automatically uploads to the operator.
4. The Handheld does **not** automatically save the changes. The Handheld will prompt you to save the changes when quitting the menu.

### C.1.5 Menu structure

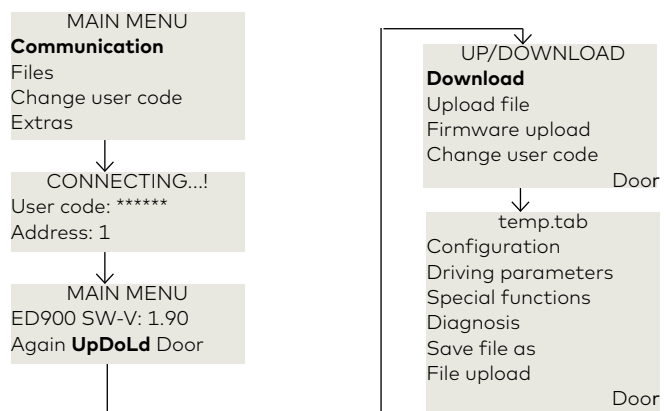

**NOTICE**

Parameters and detail may change depending on firmware version.

## C.2 dormakaba handheld; configuration parameters

"#" refers to reference numbers in Parameter list, Chapter 22.

### C.2.1 Configuration parameters.

#	Parameter and default	Description / Selections
1	Installation *	Pull arm
		Push arm
		Gleit BGS (Track w push arm)
		cm      Inches
2	Reveal depth <b>0</b>	ED900 (-3)- 30      -1 3/16 ... 11 13/16
3	Door width (steps of 4") <b>100</b>	ED900 71 - 122      28 -48
4	Door type *	single*
		1. leaf
		2. leaf
		Master
		Slave
11	Sensor test <b>0</b>	0      Off
		1      Pull side high active
		2      Push side high active
		3      Both sides high active
		4      Pull side low active
		5      Push side low active
		6      Both sides low active
		7      Bodyguard
		8      Bodyguard III or Premier T with monitoring

#	Parameter and default	Description / Selections
12	Start safety push side *	Off*      Signal ignored once door closed
		On      Sensor can trigger pulse with door closed
14	Lock delay <b>3</b>	Delayed opening time for locking mechanism      (0 ... 3) *100 msec
15	Unlock force <b>0</b>	Preload prior to unlocking      0 ... 9
12	Test PR module *	0*      Test off
		1*      Test once every 24 hrs.
23	Program switch *	Internal*
		External
		DCW
24	PGS power up (DCW) *	Last*
		Off
25	PGS delay *	Off*
		On
26	Daytime unlock *	Off*
		On      Locking device remains permanently unlocked while door is in closed position.
27	Door status (Status relay function, X7 terminals) *	1 Off      Relay off
		2 Open*      door reaches closed position
		3 Close      door reaches open position
		4 Error      any error message
		door closed and locked
		5      Information or error codes displayed
6      Door opened further than opening angle		



### C.2.1 Configuration parameters.

#	Parameter and default	Description / Selections
34	Manual mode <b>On</b>	On* Manual mode on.
		Off Manual mode disabled.
35	Power assist winkel (angle) <b>3</b>	Activation angle for power assist function (0 ... 5)
36	Power assist kraft (force) <b>0</b>	Force adjustment for power assist. 0 ... 10
21	Keep closed force <b>0</b>	Force activated after latching action 0 ... 9
50	Manual release <b>On</b>	Off; function deactivated. Manual release button required to deactivate hold open function.
		On; function activated. Moving door manually in closing direction from hold open position deactivates hold open function.
48	Input enable operator <b>*</b>	Normal* NC contact, operator deactivated when contact is open
		Inverse NO contact, operator deactivated when contact is closed

#	Parameter and default	Description / Selections
49	Input Night-bank	Normal* NO contact; night-bank function triggered while contact closed.
		Inverse NC contact; Night-bank function triggered while contact open.
47	Door depth <b>35</b>	0 ... 99 mm 0 ... 7/8"
52	Hinge clearance <b>3</b>	-5 ... +5 mm -3/16 ... +3/16"
	I04 Out 1	
	I04 Out 1	
	I04 Out 1	
	I04 Out 1	

## C.3 dormakaba handheld; driving parameters

### C.3.1 Driving parameters.

#	Parameter and default	Description / Selections
		%/s      %/s
5	Speed open <b>25</b>	ED900 8 ... 27 27 max. L.E.mode
6	Speed close <b>25</b>	ED900 8 ... 27 27 max. L.E.mode
17	Limit force open <b>60</b>	Static force in opening direction (wind load control) (20 ...67)N L.E. mode
18	Limit force close <b>60</b>	Static force in closing direction (wind load control) (20 ...67)N L.E. mode
7	Hold-open time <b>5</b>	Hold-open time automatic mode (0 ... 30) s
8	Nurse bed function <b>10</b>	Hold-open time nurse bed function (0 ... 30) s

#	Parameter and default	Description / Selections
5	Offenhaltezeit man. <b>1</b>	Hold-open time manual mode (0 ... 30 s)
10	Wall blanking <b>80</b>	Angle when system ignores safety sensor on hinge side (60 ... 99)°
19	Latching action <b>0</b>	Motor-driven latching action, automatic mode (0 ... 9)
20	Latching angle <b>3</b>	Opening angle, motor-driven latching angle activated. (2 ... 10)°
46	Backcheck angle <b>10</b>	Backcheck angle for manual opening cycles. (5 ... 40)°
51	Coord. offset angle <b>30</b>	Starting angle for second door of two door system. (0 ... 30)°

## C.4 dormakaba handheld; special functions (Upgrade cards) ED900

### C.4.1 Special functions (upgrade cards).

#	Parameter and default	Description / Selection								
	<b>Upgrade card status codes</b>	<ul style="list-style-type: none"> <li>locked: not available</li> <li>unlocked: available, not active</li> <li>activ or active: activated</li> <li>fehlt: upgrade card missing</li> </ul>								
40	Flip-flop func.	<table border="0"> <tr> <td>locked</td> <td></td> </tr> <tr> <td>unlocked</td> <td>Upgrade card professional</td> </tr> <tr> <td>active</td> <td>Not used</td> </tr> <tr> <td>fehlt</td> <td></td> </tr> </table>	locked		unlocked	Upgrade card professional	active	Not used	fehlt	
locked										
unlocked	Upgrade card professional									
active	Not used									
fehlt										
41	extend HOT (extended hold-open time) r/o	<table border="0"> <tr> <td>locked</td> <td></td> </tr> <tr> <td>unlocked</td> <td>Upgrade card professional</td> </tr> <tr> <td>active</td> <td>Not used</td> </tr> <tr> <td>fehlt</td> <td></td> </tr> </table>	locked		unlocked	Upgrade card professional	active	Not used	fehlt	
locked										
unlocked	Upgrade card professional									
active	Not used									
fehlt										
42	Nurse-Bed func.	<table border="0"> <tr> <td>locked</td> <td></td> </tr> <tr> <td>unlocked</td> <td>Upgrade card professional</td> </tr> <tr> <td>active</td> <td>Not used</td> </tr> <tr> <td>fehlt</td> <td></td> </tr> </table>	locked		unlocked	Upgrade card professional	active	Not used	fehlt	
locked										
unlocked	Upgrade card professional									
active	Not used									
fehlt										
38	Fire protection r/o	<table border="0"> <tr> <td>locked</td> <td></td> </tr> <tr> <td>unlocked</td> <td>Upgrade card fire protection</td> </tr> <tr> <td>active</td> <td></td> </tr> <tr> <td>fehlt</td> <td></td> </tr> </table>	locked		unlocked	Upgrade card fire protection	active		fehlt	
locked										
unlocked	Upgrade card fire protection									
active										
fehlt										

#	Parameter and default	Description / Selection								
39	Full energy r/o	<table border="0"> <tr> <td>locked</td> <td></td> </tr> <tr> <td>unlocked</td> <td>Upgrade card full energy</td> </tr> <tr> <td>active</td> <td>Not used</td> </tr> <tr> <td>fehlt</td> <td></td> </tr> </table>	locked		unlocked	Upgrade card full energy	active	Not used	fehlt	
locked										
unlocked	Upgrade card full energy									
active	Not used									
fehlt										
44	DCW r/o	<table border="0"> <tr> <td>locked</td> <td></td> </tr> <tr> <td>unlocked</td> <td>Upgrade card DCW®</td> </tr> <tr> <td>active</td> <td>Not used</td> </tr> <tr> <td>fehlt</td> <td></td> </tr> </table>	locked		unlocked	Upgrade card DCW®	active	Not used	fehlt	
locked										
unlocked	Upgrade card DCW®									
active	Not used									
fehlt										
43	Disabled restr r/o	<table border="0"> <tr> <td>locked</td> <td></td> </tr> <tr> <td>unlocked</td> <td>Upgrade card Barrier-free toilet</td> </tr> <tr> <td>active</td> <td></td> </tr> <tr> <td>fehlt</td> <td></td> </tr> </table>	locked		unlocked	Upgrade card Barrier-free toilet	active		fehlt	
locked										
unlocked	Upgrade card Barrier-free toilet									
active										
fehlt										
22	Push & Go *	<table border="0"> <tr> <td>Off*</td> <td></td> </tr> <tr> <td>On</td> <td>Door opens automatically when moved manually by 4° from closed position. Only available when "manual operation" is turned "off".</td> </tr> </table>	Off*		On	Door opens automatically when moved manually by 4° from closed position. Only available when "manual operation" is turned "off".				
Off*										
On	Door opens automatically when moved manually by 4° from closed position. Only available when "manual operation" is turned "off".									

## C.5 dormakaba handheld; diagnostics

### C.5.1 Diagnostics

Parameter name	Description	Setting
FW vers BM r/o	Displays firmware (FW) version of basic module	x.x y y (e.g., 0190 v 1.9.0)
Rev FW version r/o		0 ... zzz
FW version SK r/o	Displays firmware version of Service Key	x x.y y (e.g., 01.00 = v 1.0.0)
FW bootloader		x x y y
Current error r/o	Displays current error	(...)
Error log 1		(...)
Error log 2		(...)
Error log 3		(...)
Error log 4		(...)
Error log 5		(...)
Error log 6		(...)
Error log 7		(...)
Error log 8		(...)
Error log 9		(...)
Current information	Displays current error	(...)
Delete errors	Press "ENTER" to delete error log.	Cmd ->
Installation dat r/o	Displays date of installation (month / yr)	mmyy (e.g., 1110 November 2010)
Hours counter r/o	Displays number of operating hours	(..) h
Service time interval	Enter maintenance interval	(6 .. 24) months <b>12</b>
Service cycle interval	Enter number of opening and closing cycles until next maintenance	(200 .. 1000)* 1000 <b>200</b>

Parameter name	Description	Setting
Wartungs datum	Maintenance data	x x y y (month, year)
Cycles total r/o	Displays total opening and closing cycles	(..)
Zyklen max h r/o	Displays maximum number of cycles in one hour	(..) h
Zyklen / h r/o	Displays number of cycles in previous hour	(..) h
Zyklen / h akt.	Displays number of cycles in current hour	(..) h
Learning cycle	Press "ENTER" to start learning cycle.	Cmd->
Learn cycle stat. r/o	Indicates status of learning cycle	(..)
Factory reset	Press "ENTER" to reset system to original settings	Cmd ->
Latching action p/u		(...) kg
Setup level (Ref. parameter SL, no. 28)	- Level 1, standard original settings. - Level 2, extended original settings	- Level 1 - Level 2
DCW list r/o	Displays DCW list	List ->
DCW reset		Cmd ->
Function mode r/o	Displays program switch setting	(..)


## C.5.1 Diagnostics

Parameter name	Description	Setting
<b>Setting code</b>		0, low active (function on) 1, function off
Inp. Night - bank r/o	Status of Night -bank input X9, 6 and 1	0 1
Inp. OPEN r/o	Status of program switch permanent OPEN input X1, 34	0 1
Inp. PART OPEN r/o	Status of program switch PARTIAL OPEN input X1, 33	0 1
Inp. EXIT ONLY r/o	Status of program switch EXIT ONLY input X1, 32	0 1
Inp. AUTO r/o	Status of program switch AUTO input X1, 31	0 1
Inp. OFF r/o	Status of program switch OFF input X1, 30	0 1
Inp. Sfty pull side r/o	Status of safety sensor, hinge side input X5, 15	0 1
Inp. Sfty push side r/o	Status of safety sensor, opposite hinge side X5, 11	0 1
Inp. Activ extern r/o	Status of external activation sensor X6, 41	0 1
Inp. Activ intern r/o	Status of internal activation sensor X6, 42	0 1
Inp enable operator r/o	Status of Emergency close input X6, 4 and 4a	0 1
Inp. smoke detector r/o	Status of smoke detector input X9, 3 and 1	0 1
Inp. lock status r/o	Status of locking device input X3, 43 and 3	0 1
Locking status		locked

Parameter name	Description	Setting
Klemme 1G	Clamp X3, 1G and 3, 24 V out	
Opening width r/o	Displays opening angle	( .. ) °
Cur. door position r/o	Displays current door angle	( .. ) °
Amb. temp. r/o	Displays ambient temperature	( .. ) °C
Amb. max r/o	Displays maximum ambient temperature	( .. ) °C
Motor temp. r/o	Displays motor temperature	( .. ) °C
Motor temp max. r/o	Displays maximum motor temperature	( .. ) °C
Com 1 r/o	Com 1 connection	( .. )

## C.6 New dormakaba handheld; language change to English


Fig. C.6.1 dormakaba handheld

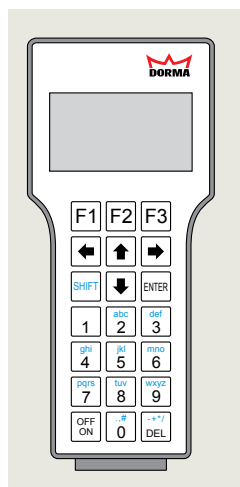

### C.6.1 New dormakaba handheld; language change.


If German language is displayed on screen when handheld is first turned on (Fig. 25.6.2, handheld power on sequence), use following steps to change to English.

Fig.C.6.2 HAUPTMENUE (main menu)

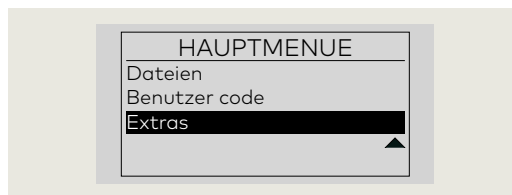


1. Scroll down Main Menu to EXTRAS:
  - Press 3 times to highlight EXTRA.

Fig. C.6.3 Main Menu; EXTRAS highlighted.

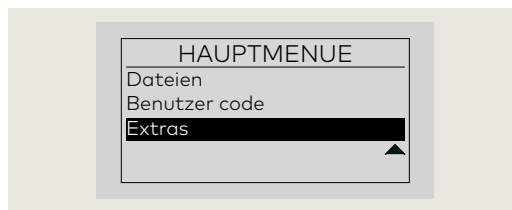


2. Press to select EXTRAS menu.

Fig. C.6.4 EXTRAS menu

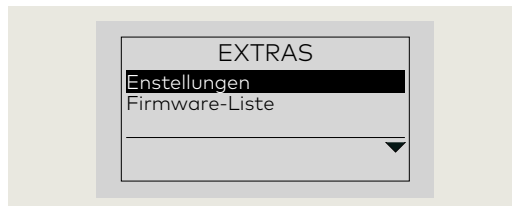

3. Press to select EINSTELLUNGEN (Settings) menu.

Fig. C.6.5 EINSTELLUNGEN menu

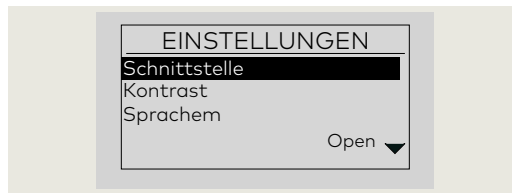


4. Scroll down EINSTELLUNGEN Menu to Sprachen (Languages):
  - Press twice to highlight Sprachen.

Fig. C.6.6 Sprachen highlighted




5. Press to select Sprachen (Fig. 26.6.6).

Fig. C.6.7 Sprachauswahl (Language Selection) menu

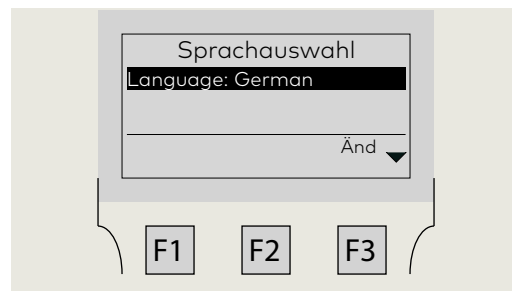


6. Press to select Änd (Amendments).

Fig. C.6.8 SPRACHEN menu

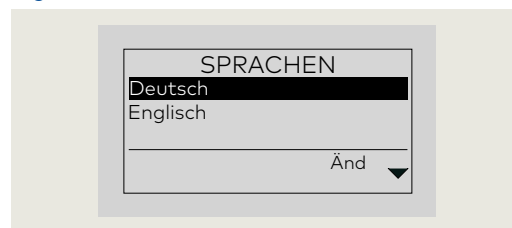


7. Scroll down SPRACHEN menu to English: Press once to highlight "Englisch"

Fig. C.6.9 Englisch highlighted

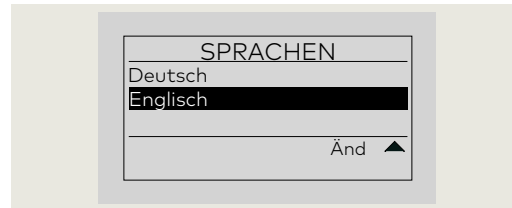

8. Press to select English.

Fig. C.6.10 SETTINGS menu

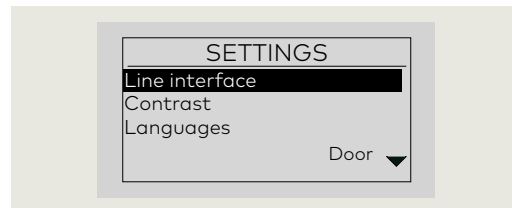

#### TIPS AND RECOMMENDATIONS

Handheld programmer will retain English setting when unit is turned off. Change to English only required the first time the programmer is turned on "out of the box".


## C.7 dormakaba handheld; firmware update

### C.7.1 Firmware update procedure

**CAUTION**


For all firmware changes, set program switch to CLOSE and allow door to close completely before any updates are made!

Fig. C.7.1 Handheld power on sequence

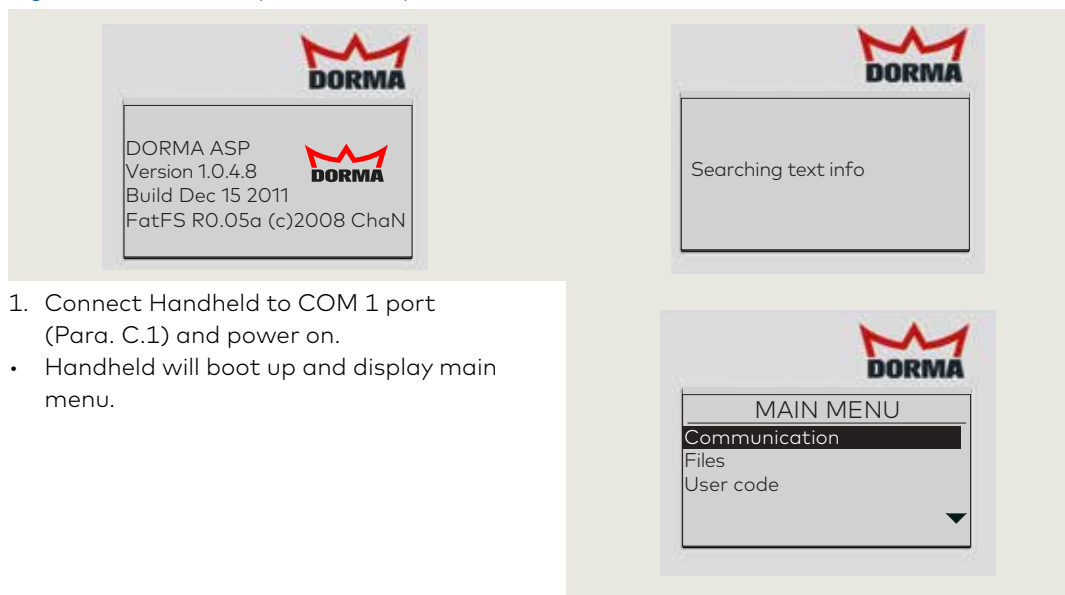


1. Connect Handheld to COM 1 port (Para. C.1) and power on.
- Handheld will boot up and display main menu.

Fig. C.7.2 Select communication menu

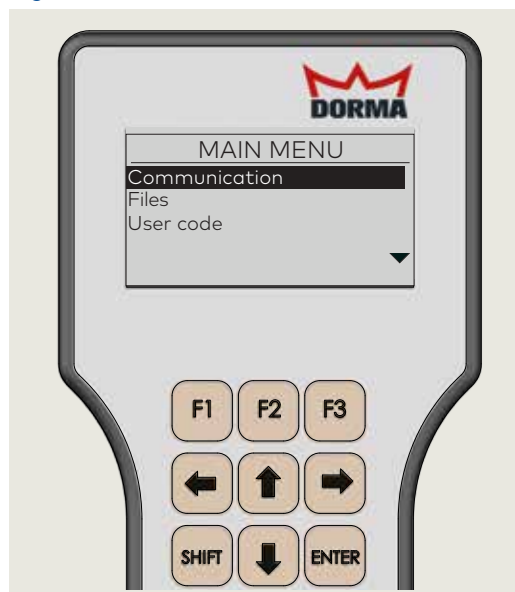

2. With Communication highlighted, press ENTER.

Fig. C.7.3 Enter Handheld user code

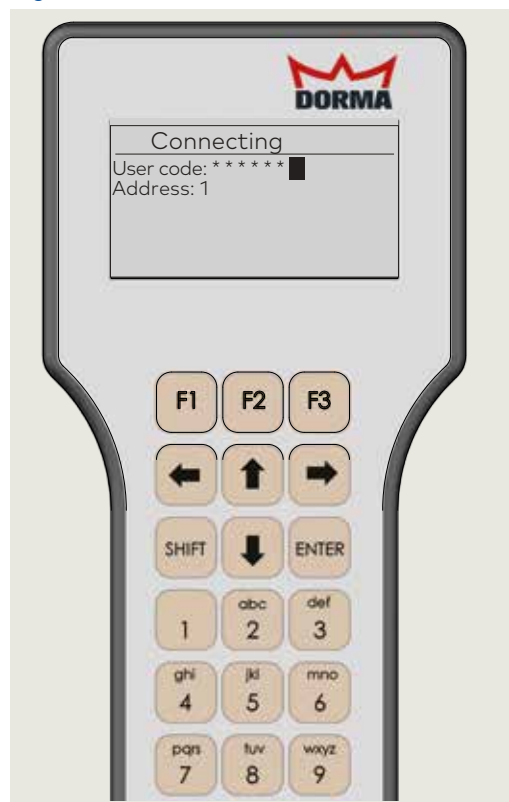


3. Enter handheld user code and press ENTER.

1 ENTER button

- 1 ENTER button
- 2 F2 button
- 3 Up/down arrows

Fig. C.7.4 Select UpDoLd

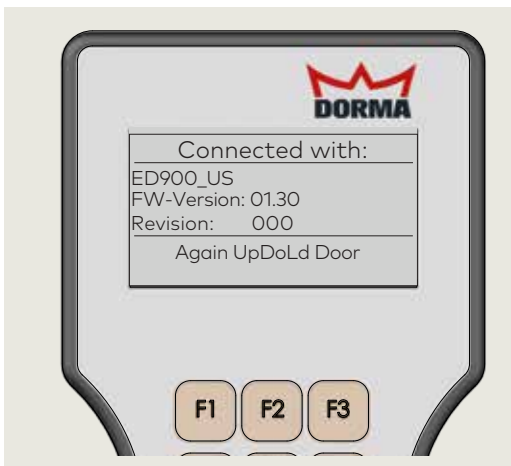

4. Press F2 to select UpDoLd.

Fig. C.7.6 Select Firmware version




6. Use Up and Down arrows to select firmware version and press ENTER.

Fig. C.7.8 Firmware uploading



8. Firmware uploading to controller. Wait time of 3 to 5 minutes to upload.

Fig. C.7.5 Select Firmware upload

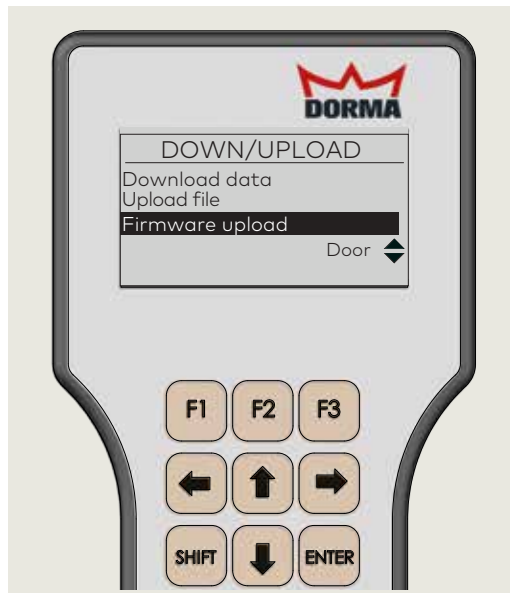


5. Use Up and Down arrows to select Firmware upload and press ENTER.

Fig. C.7.7 Start transmission



7. Press any key to start firmware transmission.

Fig. C.7.9 Complete firmware update

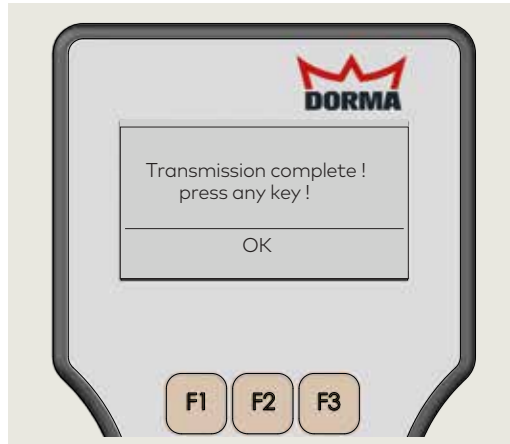

9. Press any key to complete firmware update.

# Appendix D - Wiring diagrams


## D1.1 Key Switch Panel with RJ45 connector

Fig. D1.1.1 Key switch panel



Reference Appendix C.1 for RJ45 comm cable connection.

Fig. D1.1.2 Key switch panel wiring diagram

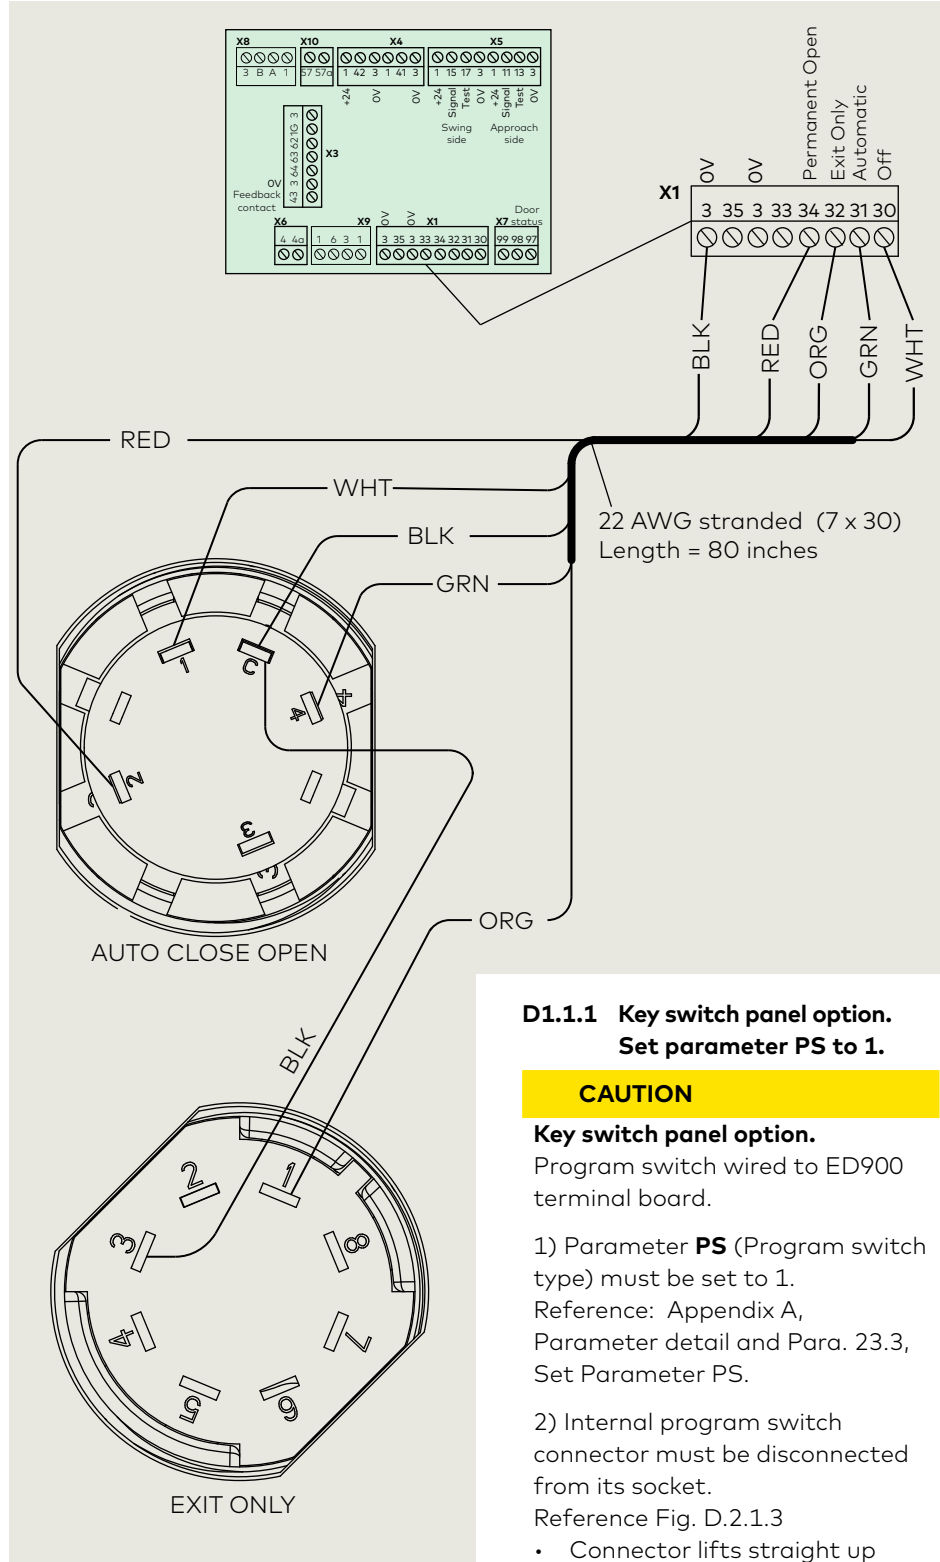

**D1.1.1 Key switch panel option.  
Set parameter PS to 1.**

**CAUTION**

**Key switch panel option.**

Program switch wired to ED900 terminal board.

1) Parameter **PS** (Program switch type) must be set to 1.  
Reference: Appendix A, Parameter detail and Para. 23.3, Set Parameter PS.

2) Internal program switch connector must be disconnected from its socket.  
Reference Fig. D.2.1.3

- Connector lifts straight up from its socket.



## D2.1 Key Switch Panel

Fig. D2.1.1 Key switch panel


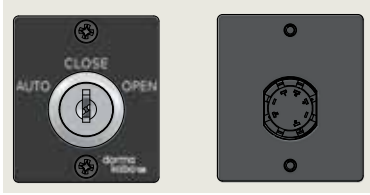


Fig. D2.1.2 Key switch panel wiring diagram

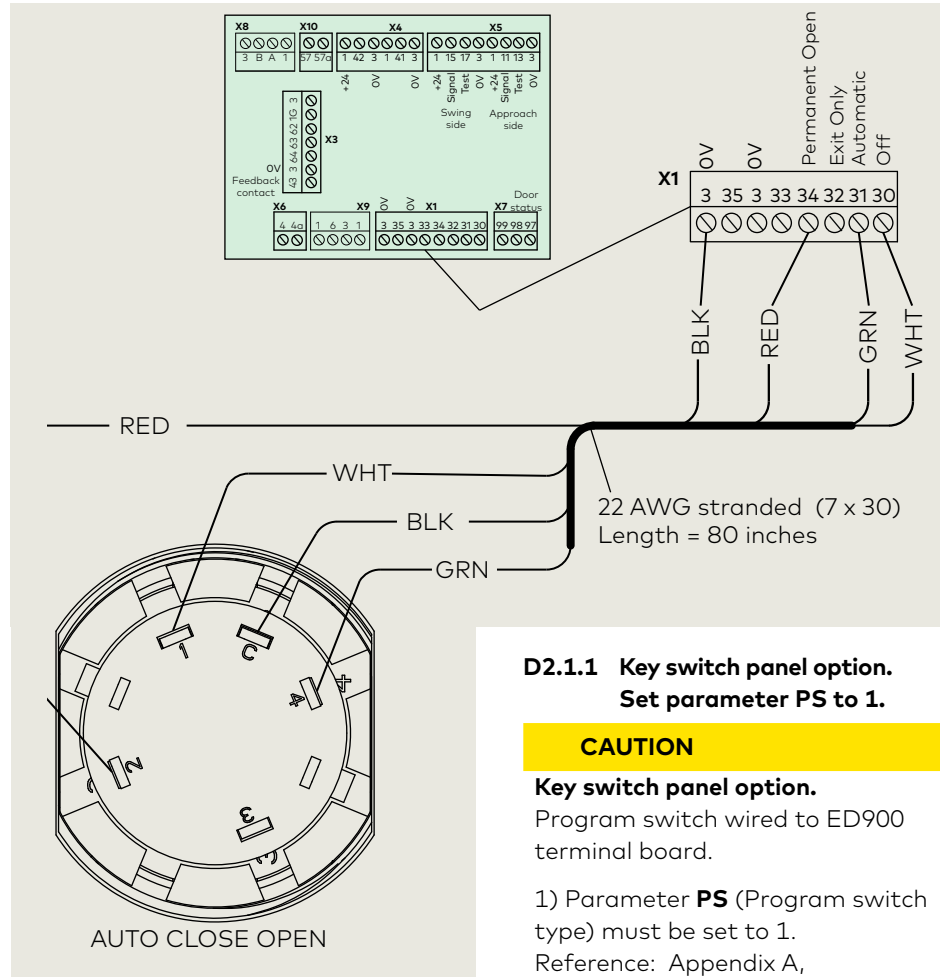

### D2.1.1 Key switch panel option. Set parameter PS to 1.

#### CAUTION

#### Key switch panel option.

Program switch wired to ED900 terminal board.

1) Parameter **PS** (Program switch type) must be set to 1.


Reference: Appendix A, Parameter detail and Para. 23.3, Set Parameter PS.

2) Internal program switch connector must be disconnected from its socket.

Reference Fig. D.2.1.3

- Connector lifts straight up from its socket.

Fig. D.2.1.3 Program switch connector and socket

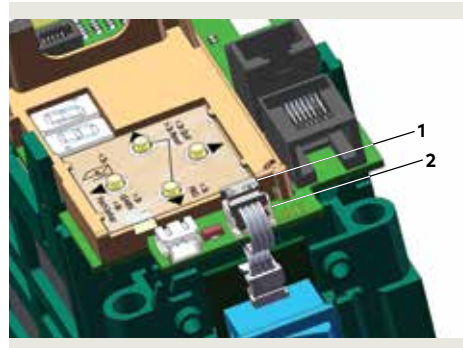

- 1 Program switch cable connector
- 2 Program switch socket

