

## 70 Series Magnetic Lock




700193


## Installation Instructions & Cut-Out Template

The 70 Series magnet is powered by 12 or 24VDC only. Schlage offers several power supplies which can be used to power magnetic locks. Magnetic locks are usually controlled by an access control reader (card, prox, etc.) and an egress device such as an exit device with a switch, pushbutton and/or motion detector. In most cases it is required that activation of building's fire alarm system cause all magnetic locks to unlock. Consult local authority having jurisdiction regarding system requirements for local life safety and electrical codes.

 Place template on door and frame as shown. Leave room if required for existing door hardware such as vertical rod panic hardware, etc. Drill required holes.

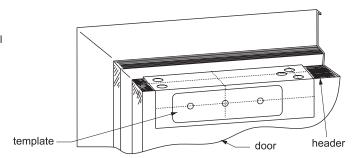

2) Install armature plate assembly. Note that armature plate assembly must pivot about the mounting bolt. This is to allow the magnet and armature to mate when the door is closed. If the armature does not pivot, check to see that there is no binding in the 1/2" armature guide holes and that the hardware is installed correctly.

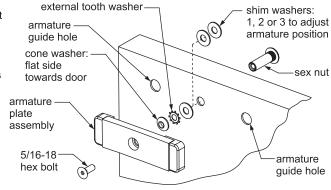

**3)** Refer to wiring chart and make wiring connections.

## WIRING:

Red (+) 0.300A@12VDC Black (-) 0.150A@24VDC

White MBS C

Green MBS NO > 1.0A max.@30VDC

Orange MBS NC

## Contact shown with lock unlocked

Yellow DSM C


Blue DSM NO > 0.10A max.@30VDC

Brown DSM NC

Contact shown with door opened

4) Install magnet.

**NOTE:** Magnet and armature must mate when door is in closed (and latched if applicable) position. Adjust by adding/subtracting shim washers.

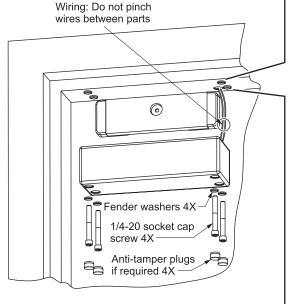

- A. Drill a 9/32" hole.B. Refer to Figure 1.
  - · Assemble the supplied parts.
  - Insert into hole.

C. While holding tool in place with wrench, tighten to colapse nut with hex wrench. IMPORTANT: DO NOT OVERTIGHTEN.

**D.** Figure 3 shows completed installation of blind nut.

E. Repeat steps A, B and C for additional

