


Surface Vertical Rod Device

911334-00

VON DUPRIN

Installation Instructions

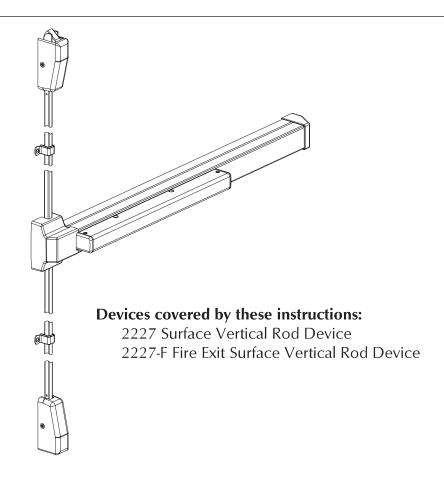

# **BEFORE STARTING INSTALLATION**

- 1. Check hardware schedule for strikes, fasteners, and other special requirements.
- 2. Check carton label for trim, strikes, options, and order number.
- 3. Read all instructions, including instructions provided with any options used: trim, alarm kit, glass bead kit, latch guard kit, and rod guard kit.
- **4.** Gather special tools required:
- #10-24 tap
- 5/16" dia. drill bit
- #25 drill bit
- 13/32" dia. drill bit
- 1/8" dia. drill bit Hacksaw
- 1/4" dia. drill bit
- 7/8" dia. hole saw

# **GENERAL INFORMATION**

Review pages 2 and 3 so you can identify the hardware and understand the terminology used in the instructions.

See page 16 for the "Metric Conversion Table" if needed.

These exit devices can be installed on the door widths listed below:

Device Size	<b>Code/Standard Requirement</b>	Door Size		
Standard 3' (32")	NFPA101	24-3/4" to 36"		
Standard 4' (44")	NFPA101	30-3/4" to 48"		

# A

### **NOTE**

Dogging panic device during high traffic periods will increase life of device. To dog, depress pushbar and turn hex key one-quarter turn clockwise.


# **MAINTENANCE**

Von Duprin 2227 exit devices are designed and built to be maintenance free; however, such factors as installation, severity of use, environmental conditions, and changes in the condition of the door opening may require that maintenance and/or device adjustment be performed. The following guidelines are recommended to the building owner to insure proper device operation:


- 1. Check device operation for smooth operation periodically.
- 2. Check strikes (keeper) and latches to insure they are secure.
- **3.** Check latches and other moving parts for binding or sluggish operation due to dirt or chemical buildup. Clean parts with soap and water and then lubricate with graphite-based or silicone lubricants. Do not use petroleum-based lubricants.

# **OUTSIDE TRIM**

### No outside trim supplied for EO (exit only) application

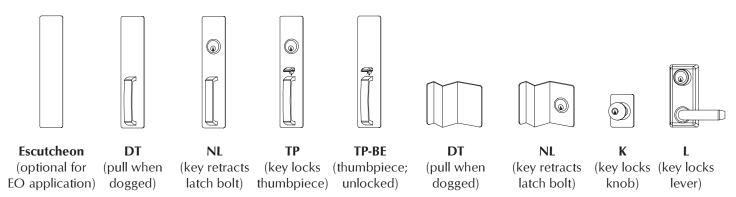

# 2227/2227-F PARTS LIST

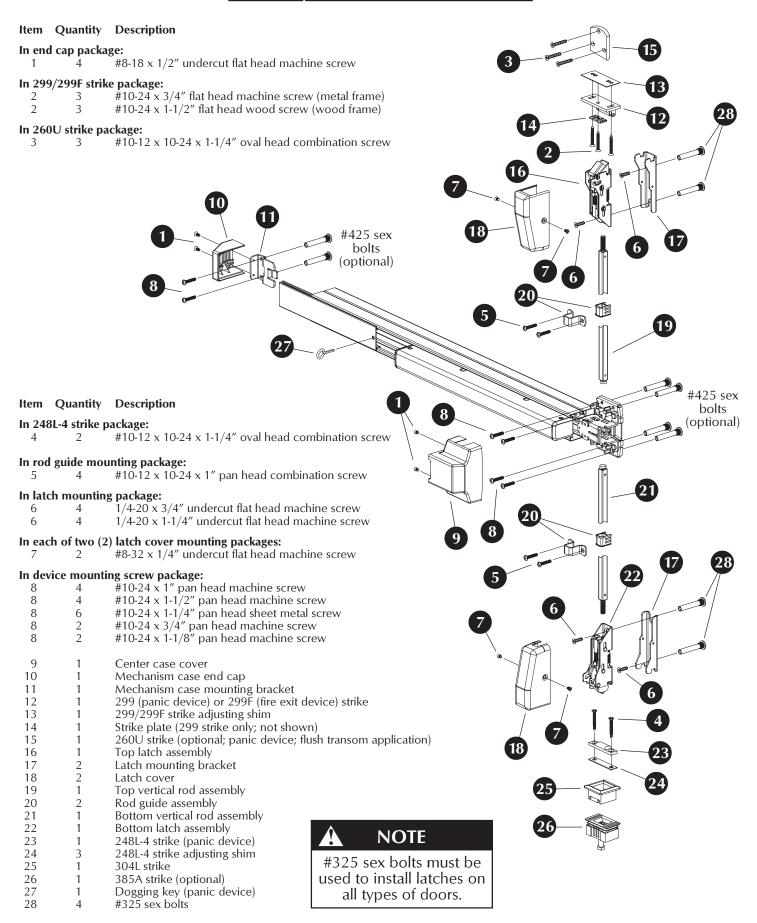

# **INSTALLATION**

# 1 Cut device if necessary.

- **1.1.** Device length **A** must be at least 3" shorter than opening **B** (Figure 1-1).
- **1.2.** If necessary, cut device so **A** is at least 3" shorter than **B** (Figure 1-2).

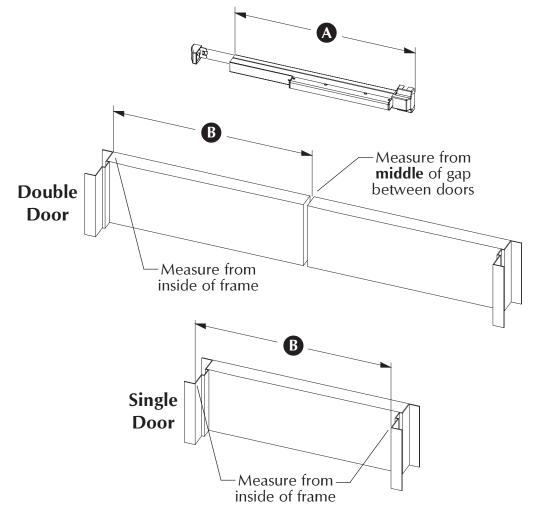


Figure 1-1



Figure 1-2


# **2** Prepare door.

- **2.1.** Mark center line locations  $\varphi$  as shown (Figure 2-1).
- **2.2.** Tape templates to door aligned with center lines G.
- **2.3.** Mark and prepare mounting holes per templates.
- **2.4.** Prepare door for outside trim (see trim instructions).




# NOTE

For wood fire doors with metal edge, increase backset so device center case clears metal edge.

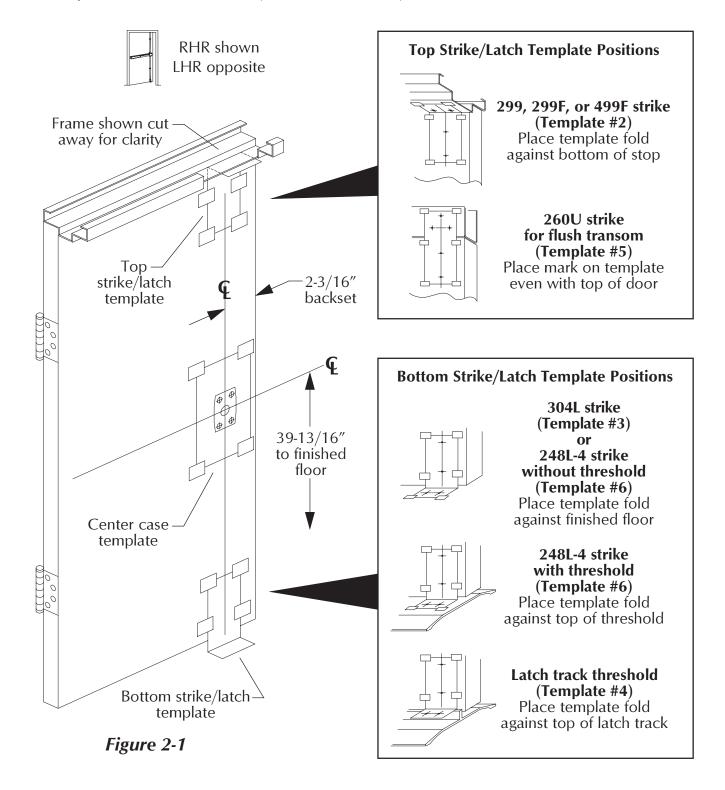



# 3 Install device.

**3.1.** If using cylinder in trim, install tailpiece guide (packaged with trim) in device.

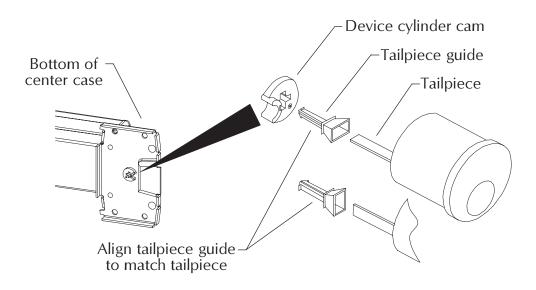



**3.2.** Install device to door at center case.

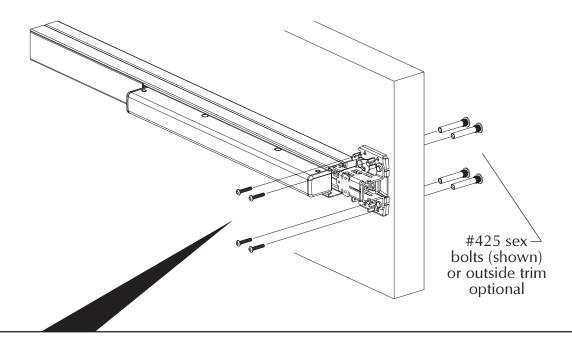

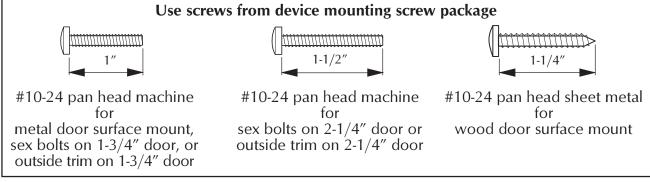

# 3 Install device (continued).

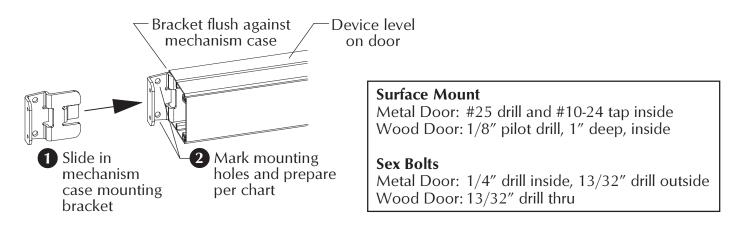


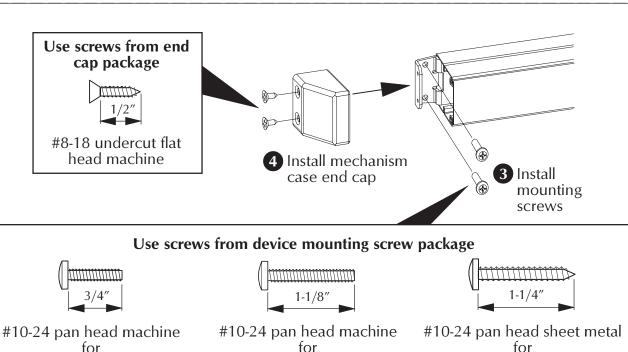


sex bolts on 2-1/4" door

# 4 Install top and bottom latches.


metal door surface mount or sex bolts on 1-3/4" door

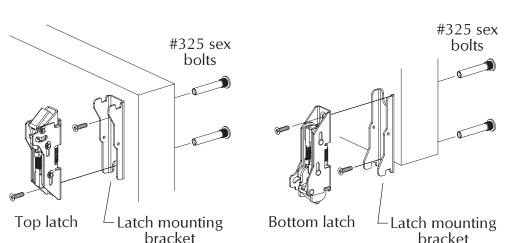


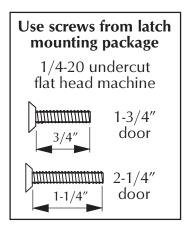

wood door surface mount

### 299 and 299F Strikes

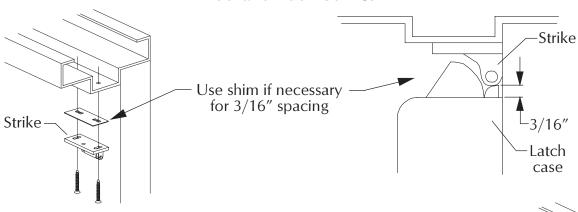


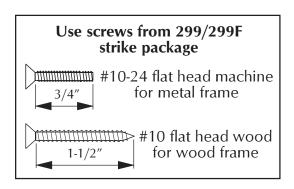


After strike is adjusted,
prepare center mounting
hole same as other strike
mounting holes and install
center screw (strike plate
used for 299 strike only)

Strike plate
(299 only)

### 260U Strike

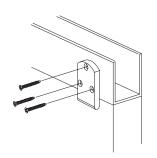


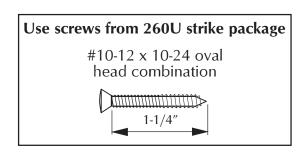


# 6 Install bottom strike.


### 248L-4 Strike

Add shim(s) so strike engages extended latch bolt but clears latch case

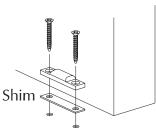


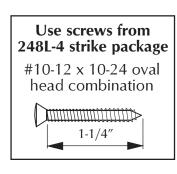


### 304L Strike

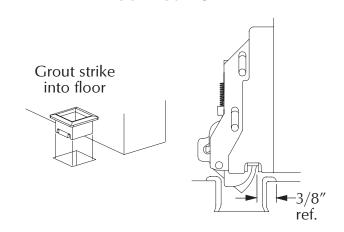

# 7 If door height is less than 84", cut top rod. (Uncut top rod is about 38-3/4" overall.)

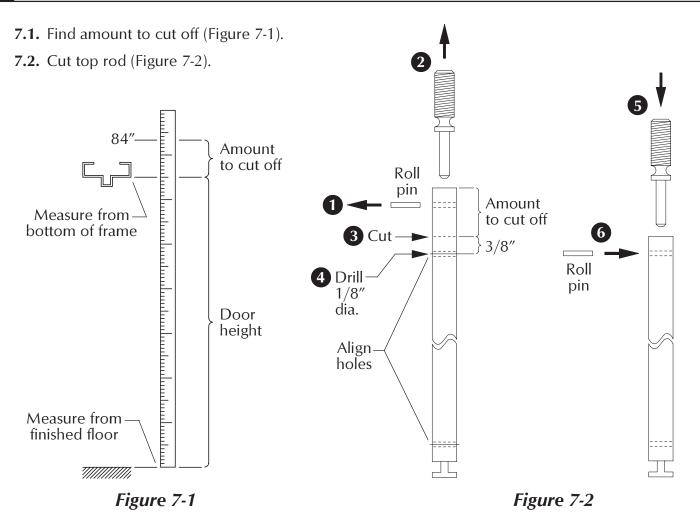

# 8 If using threshold, cut bottom rod. (Uncut bottom rod is about 34-7/8" overall.)

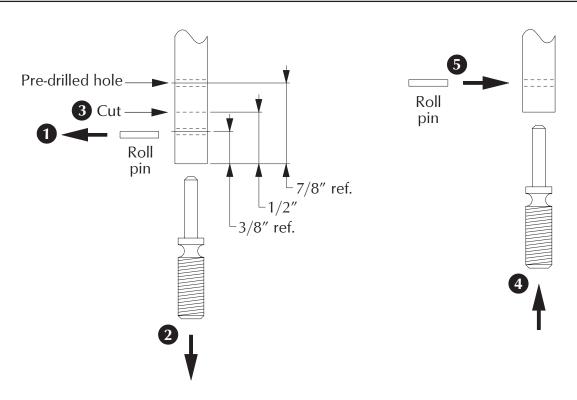

# 9 If door height is more than 84", prepare rod extension.

- **9.1.** Find amount to cut off rod extension (Figure 9-1).
- **9.2.** Cut rod extension (Figure 9-2).
- **9.3.** Drill hole in rod extension (Figure 9-3).
- **9.4.** Assemble rod extension rod (Figure 9-4).
- **9.5.** Connect rod extension to top rod (Figure 9-5).



For door heights less than 88", cut top rod instead of rod extension.

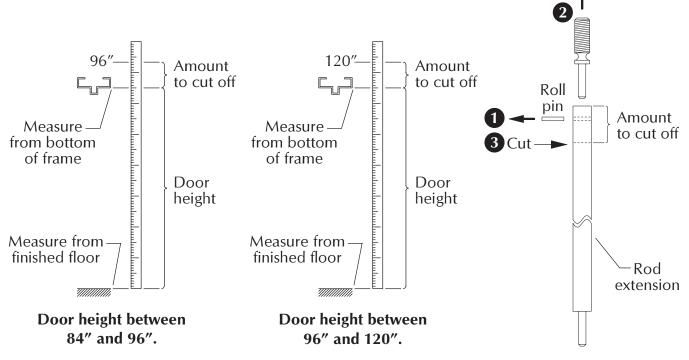


Figure 9-1

Figure 9-2

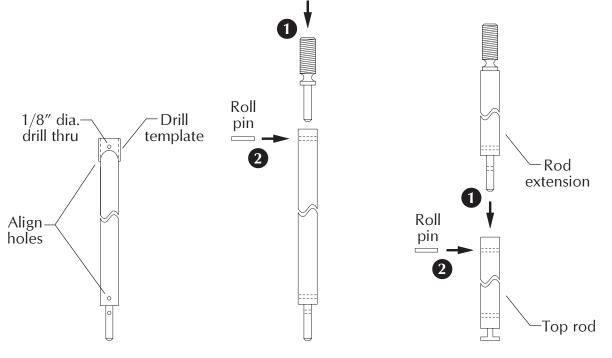


Figure 9-3

Figure 9-4

Figure 9-5


# 10 Install and adjust top rod.

### Install




# **Adjust (screw rod into or out of latch)**

### With door closed: Latch bolt fully extended and deadlatched (will not push in)

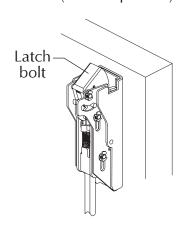


### With door open: Latch bolt flush with or slighly below latch case and release trigger extended

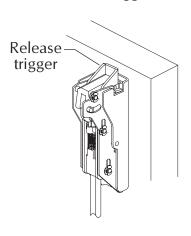

# 11 Install and adjust bottom rod.


# **Install (with door open)**

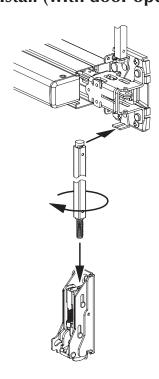


# **Adjust (screw rod into or out of latch)**

With door open: Latch bolt clears floor

and does not bind on strike

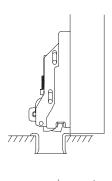


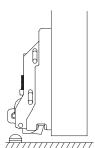

With door closed:

Latch bolt fully extended and deadlatched (will not push in)



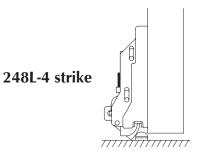

# 12 Install rod guides, center case cover, and latch covers.

# **№** NOTE

If using rod or latch guards, skip this step and see rod or latch guard instructions.

- **12.1.** Disconnect top and bottom rods from center case. Slide rod guide bases **1** (with legs of bases against door) onto rods. Connect rods to center case.
- **12.2.** Install center case cover **2**.
- **12.3.** Place rod guides **3** over rod guide bases **1**. Position rod guide/base midway between center case and latch and mark and prepare rod guide mounting holes:

Metal door: #25 drill and #10-24 tap, inside Wood door: 1/8" dia. pilot drill x 3/4" deep, inside


- **12.4.** Install rod guides **3** over rod guide bases **1**.
- **12.5.** Install latch covers **4**.

Center case: Use screws from end cap package:





#8-18 undercut flat head machine

Rod guides: Use screws from rod guide mounting package:

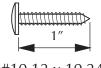


#10-12 x 10-24 combination

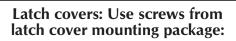

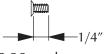

#8-32 undercut flat head machine

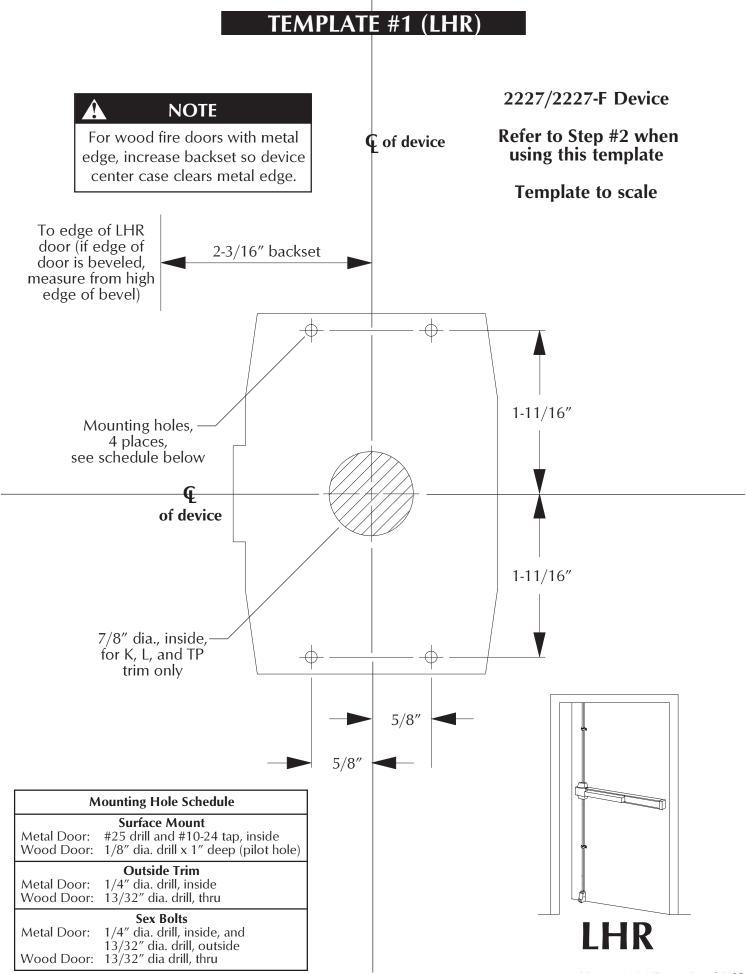


# 2227/2227-F Device **NOTE** Refer to Step #2 when For wood fire doors with metal **©** of device using this template edge, increase backset so device center case clears metal edge. **Template to scale** To edge of RHR door (if edge of 2 3/16" backset door is beveled, measure from high edge of bevel) 1-11/16" Mounting holes, 4 places, see schedule below of device 1-11/16" 7/8" dia., inside, for K, L, and TP trim only 5/8" 5/8" **Mounting Hole Schedule Surface Mount** #25 drill and #10-24 tap, inside 1/8" dia. drill x 1" deep (pilot hole) Metal Door: Wood Door: **Outside Trim** 1/4" dia. drill, inside Metal Door: Wood Door: 13/32" dia. drill, thru **Sex Bolts** Metal Door: 1/4" dia. drill, inside, and 13/32" dia. drill, outside Wood Door: 13/32" dia drill, thru

TEMPLATE #1 (RHR)

# 299/299F/499F Strike and Top Latch

**299/299F/499F Strike Mounting Holes, 2 Places** Metal Frame: #25 drill and #10-24 tap, inside Wood Frame: 1/8" dia. drill x 1" deep (pilot hole)

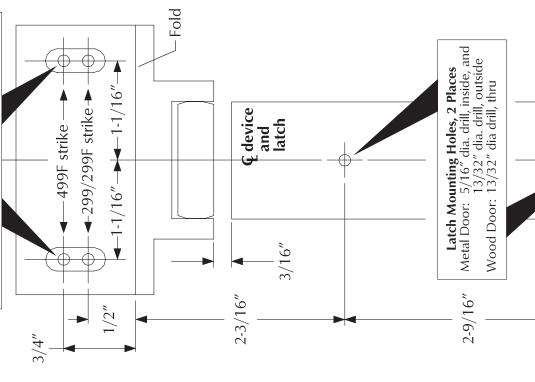


# Strike and Bottom Latch **FEMPLATE** #3

Latch Mounting Holes, 2 Places
Metal Door: 5/16" dia. drill, inside, and
13/32" dia. drill, outside
Wood Door: 13/32" dia drill, thru

Latch Mounting Holes, 2 Places Metal Door: 5/16" dia. drill, inside, and 13/32" dia. drill, outside Wood Door: 13/32" dia drill, thru

and Bottom Latch **Threshold Latch T** 

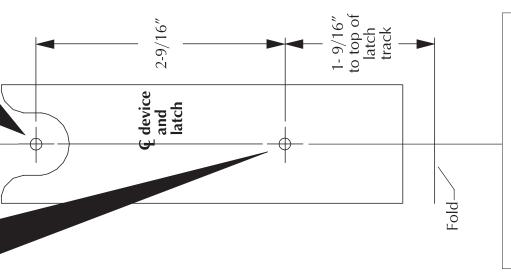

2-9/16"

latch and

device

1-11/16"

finished floor

Fold-

to

Refer to Step #2 when using these templates


Cutout for 304L; 1-5/8" square, 7/8" deep;

four 1/4" holes

start with

in corners

Templates to scale

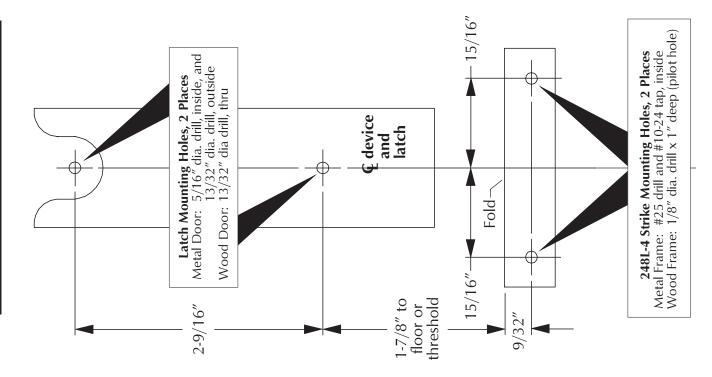

Metric Conversion Table								
inches	mm	inches	mm	inches	mm	inches	mm	
1/8	3	3/4	19	1-11/16	43	36	914	
3/16	5	7/8	22	1-3/4	45	37-1/2	953	
1/4	6	15/16	24	2-3/16	56	39-13/16	1011	
9/32	7	1	25	2-1/4	57	44	1118	
5/16	8	1-1/16	27	2-9/16	65	48	1219	
3/8	10	1-1/8	29	3	76	84	2134	
13/32	10	1-1/4	32	24-3/4	629	88	2235	
1/2	13	1-1/2	38	30-3/4	781	96	2438	
9/16	14	1-9/16	40	32	813	120	3048	
5/8	16	1-5/8	41	33-1/2	851			

