


# Installation Instructions



**Universal Door Closers  
with Heavy Duty Parallel Arms:**  
**A2 - H.O. without Backstop**  
**A4 - N.H.O. with Backstop**  
**A5 - H.O. with Backstop**

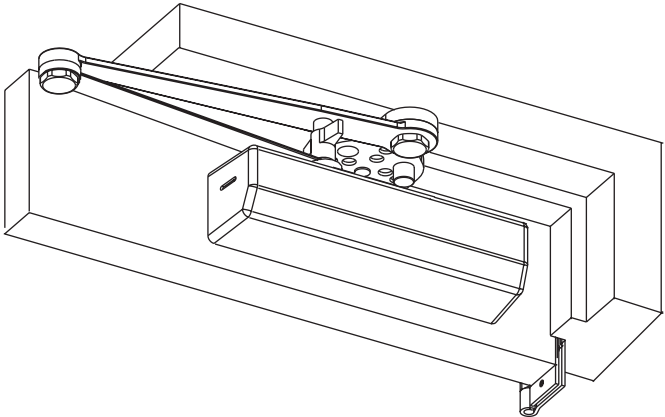

## DC3210 Series Multi-Sized 1 thru 6

**A2 Arm**

\*This application requires an auxiliary door stop "by others"  
Hold Open Only  
**(No Stop Feature)**

**A4 Arm**

Non-Hold Open with Backstop

**A5 Arm**


Hold Open with Backstop

### IMPORTANT:

- An improperly installed or incorrectly adjusted door closer may cause **property damage** or **personal injury**; and will void product warranty.
- To avoid personal injury, **DO NOT DISASSEMBLE THIS DOOR CLOSER BODY.**
- Door closers must be securely fastened to a properly reinforced door and frame with fasteners provided.
- Door closers with a HOLD OPEN ARM are not permitted to be installed in fire door assemblies.
- Door and frame must be specifically templated for 85°, 90°, 100° or 110° door swing.

Size of Door & Door Closer					
Type of Installation	Interior	Exterior In -swinging	Exterior Out -swinging	Recommended Closer Size	**Max. Opening Force lbs/f
Parallel Arm	2'4"	_____	_____	1	8
	2'6"	_____	_____	2	14
	3'0"	_____	2'6"	3	16
	3'6"	_____	3'0"	4	22
	4'0"	_____	3'6"	5	24
	4'6"	_____	4'0"	6	26

### TO DETERMINE HAND OF YOUR DOOR:

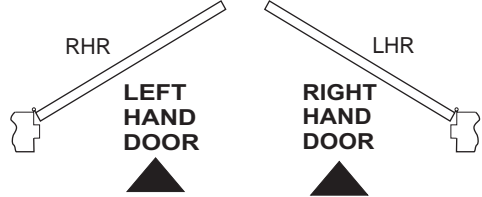


\*\*NOTE: These forces are for standard templating with bearing type hinges and do not account for pressure differentials and draft.

# Installation Instructions


## Parallel Arm Application DC3210 Series x A2, A4, or A5 Arm Option.

### 1. Template

**Mark Door and Jamb** (for closer bracket and arm bracket)  
Use template and dimensions charted.

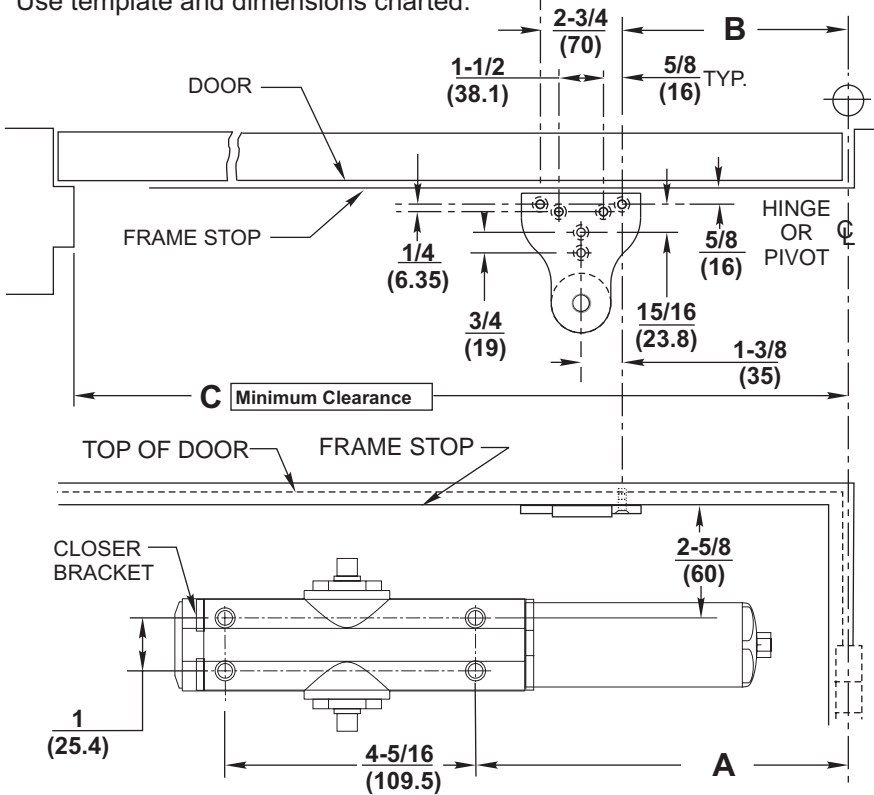


OPENING MAXIMUM	A	B	C MINIMUM
85°	13-3/4 (349)	12-9/16(319)	28-3/4 (730)
90°	12-13/16 (325)	11-5/8 (295)	27-7/8 (708)
100°	11-1/4 (286)	10-1/16 (256)	26-1/4 (667)
110°	9-15/16 (252)	8-3/4 (222)	25 (635)

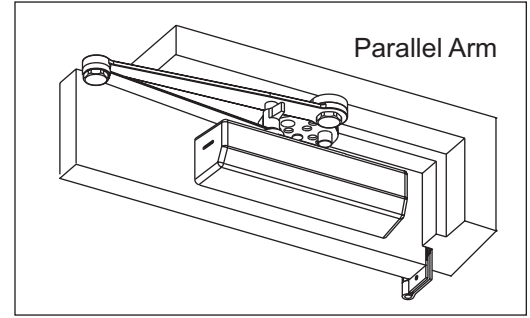


#### NOTES:

- Check hand of door, see page 1.
- Right Hand Application Shown Left Hand Opposite
- Dimensions given in inches (mm). Do Not Scale Drawing.
- Closer must be installed in a true horizontal plane to ensure proper closer performance.

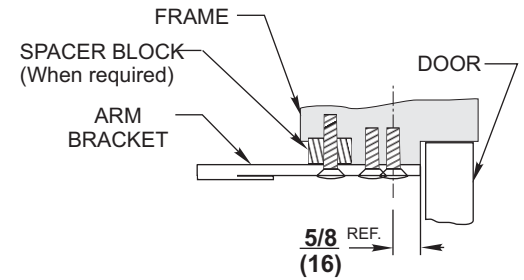

#### M85 OPTION 447F14 ANGLE SUPPORT BRACKET

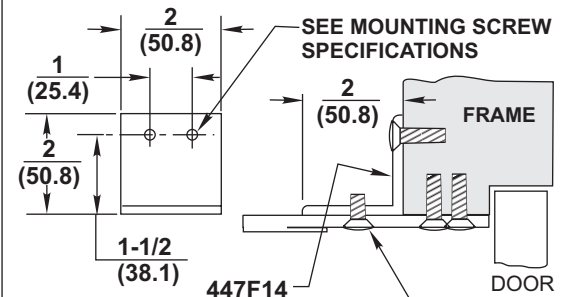


**NOTE: ANGLE SUPPORT MUST BE DRILLED AND TAPPED IN THE FIELD**

#### MOUNTING SCREW SPECIFICATIONS ARM AND CLOSER BRACKET

1/4-20 oval head machine screw or 1/4-14 self-drilling screw Type BSD. 3/16 (4.8) diameter pilot hole required for Wood Applications.


or { Option M54:  
Sex nuts, Furnished  
when ordered

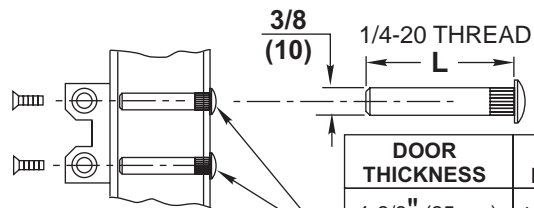


Drill thru 9/32 (7.1) Enlarge to 3/8 (9.5) Dia. This Side Only (4 Places)

DOOR THICKNESS	SEX NUT LENGTH "L"
1-3/8" (35mm)	1-9/32" (33mm)
1-3/4" (44mm) & OVER	1-21/32" (42mm)

## 2. Install Closer Bracket

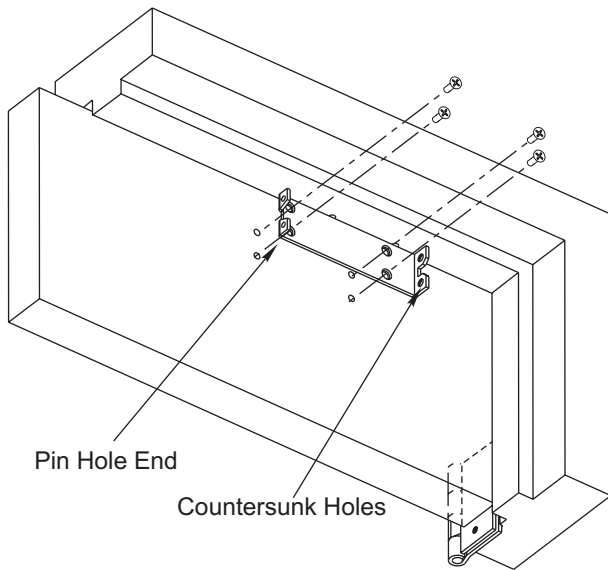


## 3. Mount Closer Body to Closer Bracket

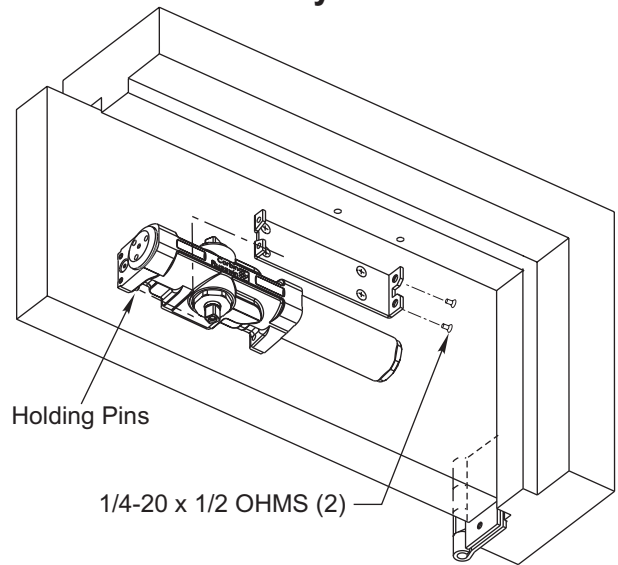


## 4. A4 & A5 Backstop Arms Only

### Arms shipped for Left Hand Door. To change handing:

Remove Stop from Soffit with 5/32 Allen Wrench. Remove Filler Plug. Switch Stop and Filler Plug to opposite sides. Insert Stop and tighten. Push Filler Plug into hole.

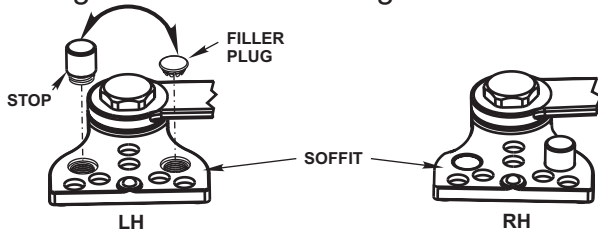



## 5. Mount Arm to Door Frame

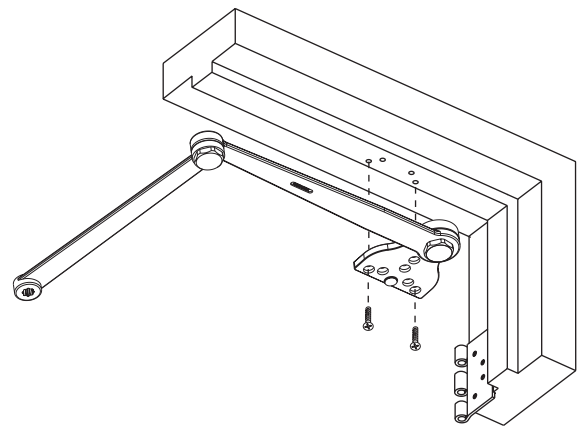

## 6. Connect Arm To Closer

Using hex wrench provided, close (turn clockwise) CLOSING SPEED VALVE (see page 4 for location on closer). **DO NOT OVER TIGHTEN.**

- Open door to approximately 60°
- Using wrench on underside of spindle, rotate spindle approximately 135° toward hinge edge of door.
- Install arm on spindle at an approximate 90° angle to door.
- Reopen CLOSING SPEED VALVE.
- Install and tighten arm washer and screw.

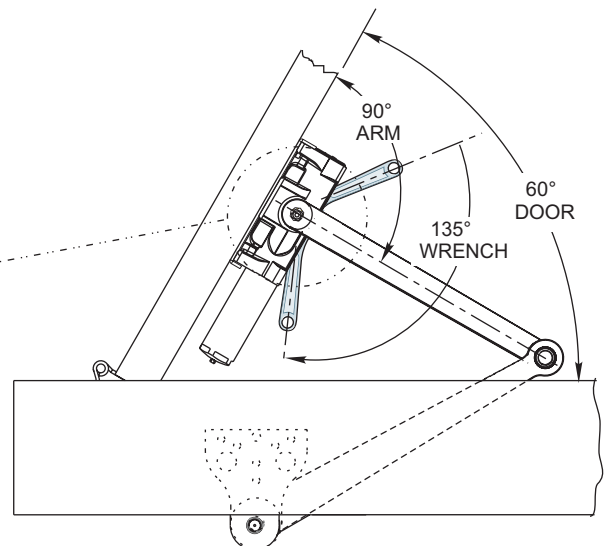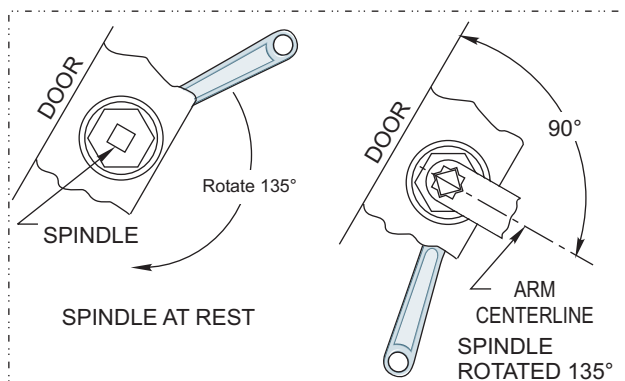




## Spring Power Adjustment

Locate spring power adjuster from Illustration below  
DC3200 Size 1 thru 6 Adjustment See Chart

Interior	Size of Door		No. of Full (360°) Turns Clockwise of Power Adjuster	Equivalent Closer Size (Approx.)
	Exterior In Swing	Exterior Out Swing		
2' 4" (712)	2' 6" (764)		4	2
2' 6" (764)	3' 0" (915)		8	3
3' 0" (915)	3' 6" (1067)	2' 6" (764)	12	4
3' 6" (1067)	4' 0" (1219)	3' 0" (915)	16	5

### DC3200 SPRING POWER ADJUSTMENT CHART

- All DC3200 closers are factory set at an approximate **Size 3**.
- Adjust closer as necessary for door size using this chart.
- Readjustment may be required to suit prevailing conditions.

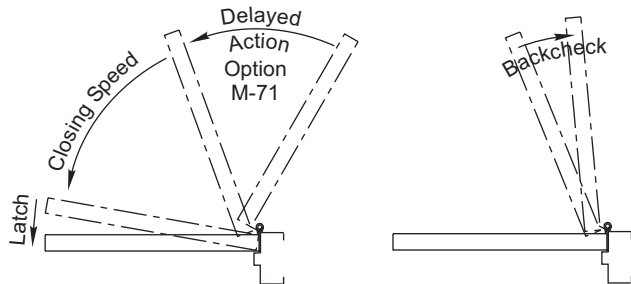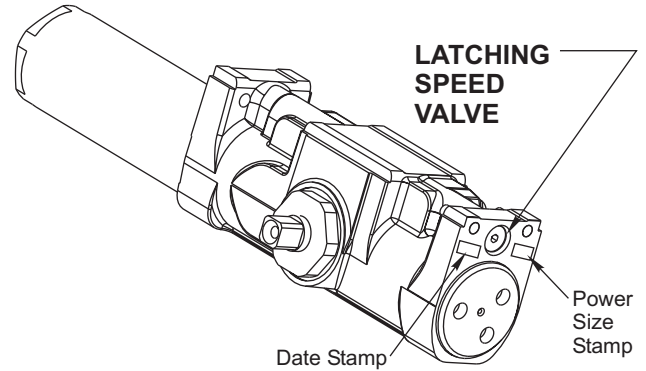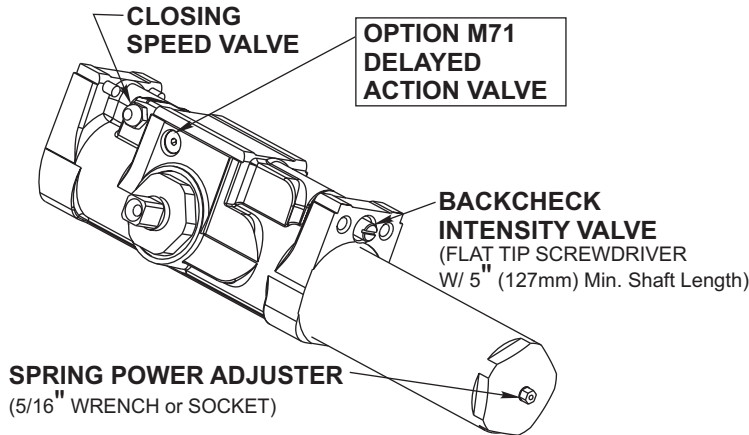

### Closing Speed Valve (3/32 Allen Wrench Provided)

To adjust speed of door closing from fully open to a position 2" to 5" from closed, turn Closing Speed Valve **CLOCKWISE** to SLOW closing, **COUNTER-CLOCKWISE** to SPEED closing.

### Latching Speed Valve (3/32 Allen Wrench Provided)

After closing speed has been obtained, turn latching speed valve **CLOCKWISE** to SLOW latching or **COUNTER-CLOCKWISE** to SPEED latching for last 2" to 5" of door travel.

**NOTE:** Set combination of CLOSING and LATCHING speeds to between 3 and 7 seconds Use of door by handicapped, elderly or small children may require even greater closing time.


### Delayed Action Valve (3/32 Allen Wrench Provided)

Turn valve **CLOCKWISE** to SLOW closing, **COUNTER-CLOCKWISE** to SPEED closing. Delayed action may be adjusted from 20 seconds to 90 seconds, depending on degree of door swing. Delay occurs at the beginning of the door closing cycle from fully open down to 70°, where the closing speed valve then begins its control.


### Backcheck Intensity Valve

Turn valve **COUNTER-CLOCKWISE** to reduce backcheck or **CLOCKWISE** to increase backcheck. (Backcheck should be set to give a soft cushioning action, not a sudden stop).

### Installing Cover

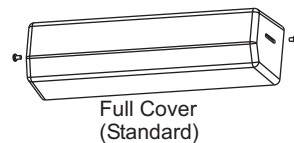

Slip cover over closer. Hold tightly against closer mounting surface. Secure on each side with 6-32 x 1/4" PBHMS screws.

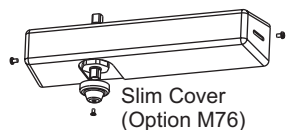

Slim Cover Option M76 only  
Position spindle cap over unused spindle and secure with truss head screw.

### Hold Open Operation (A2 and A5 Arms only)

A quarter turn of the tee handle in either direction engages or disengages the hold open feature.

